 


TV Table

DJ0760BK-235
DJ0760WT-235


-Using an electric drill can speed up installation, but it requires reducing the torque of the drill .

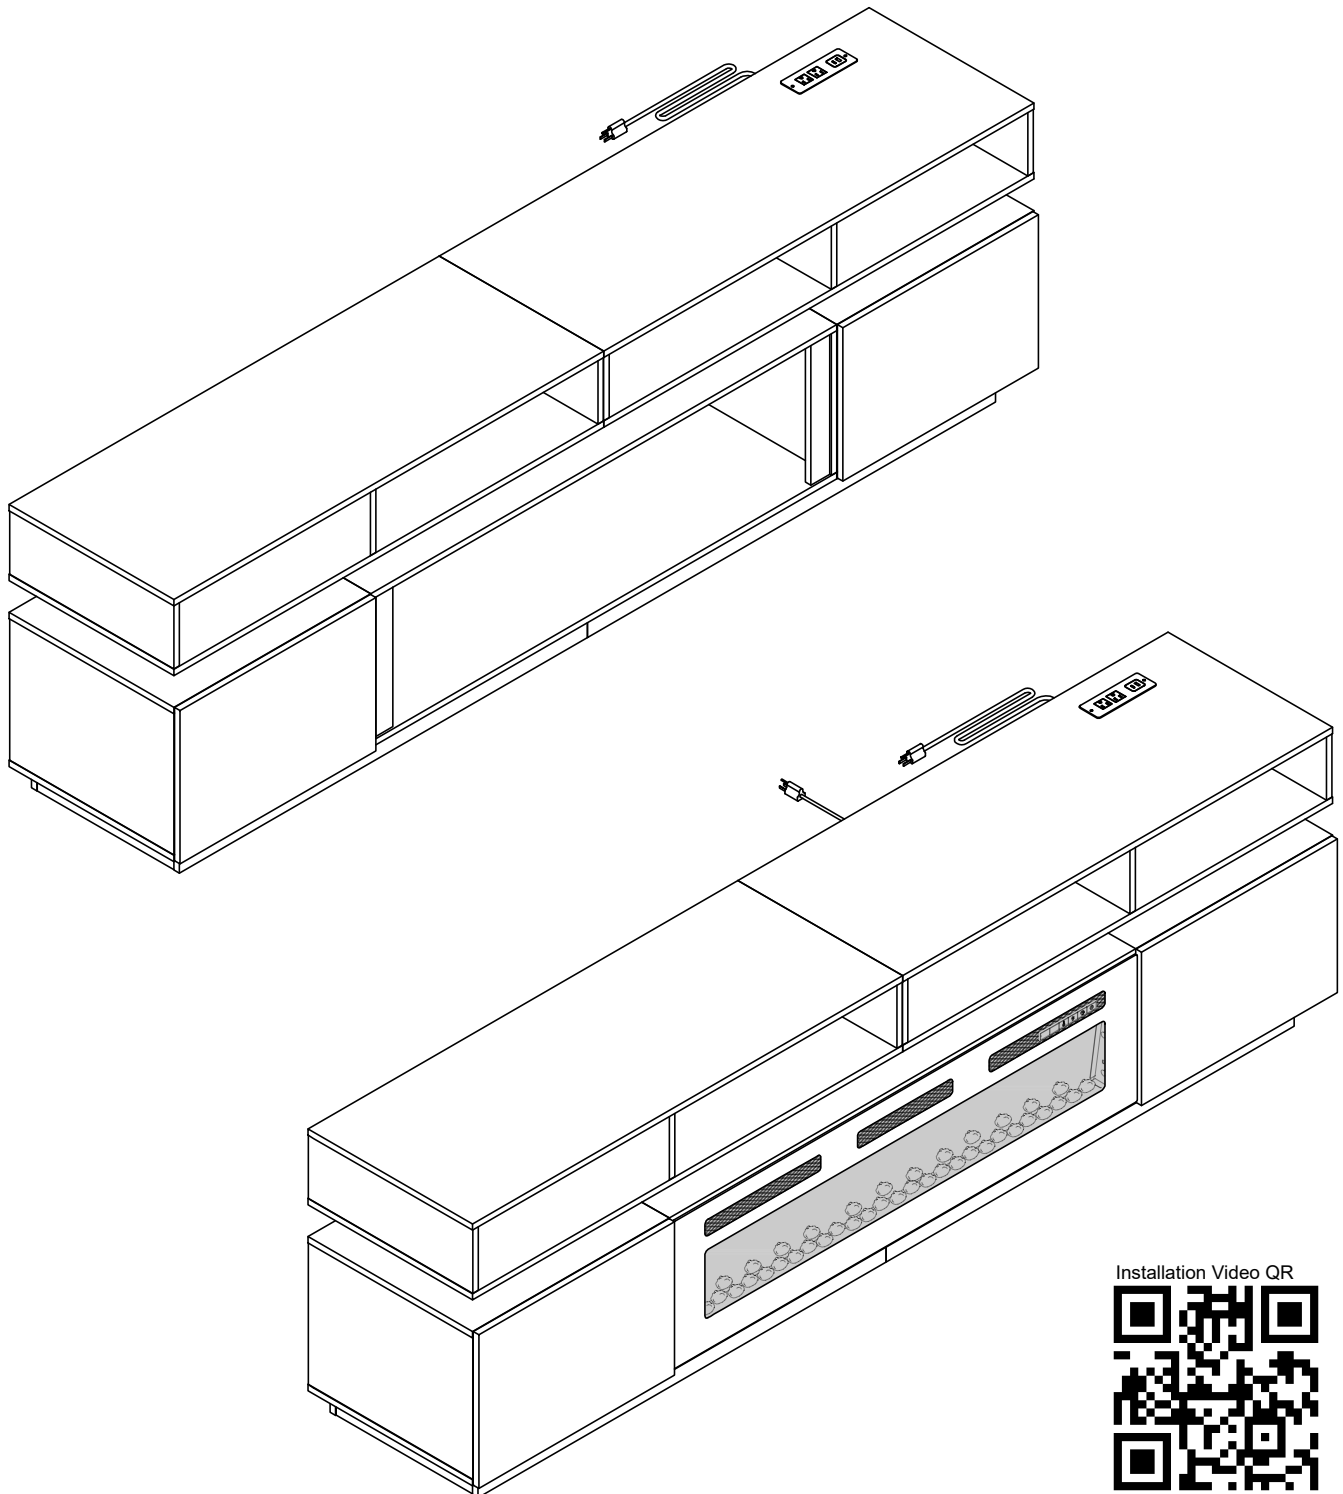

Installation Video QR





 DJ0760
<https://vimeo.com/1087647746>

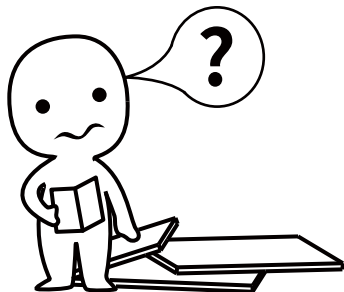


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

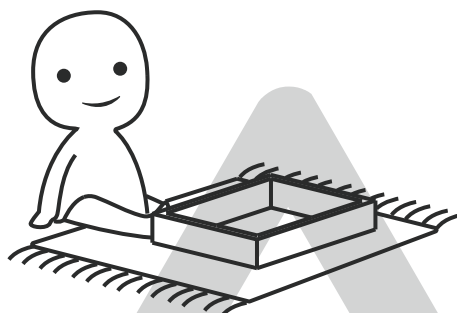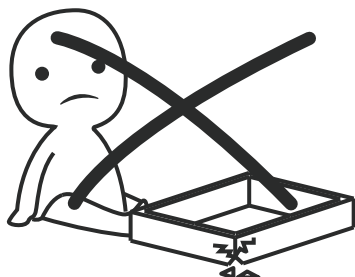



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

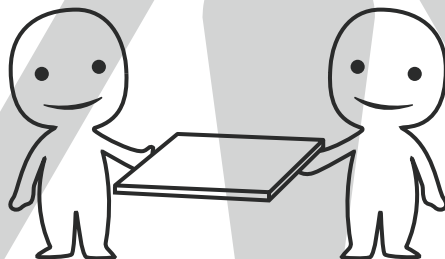

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

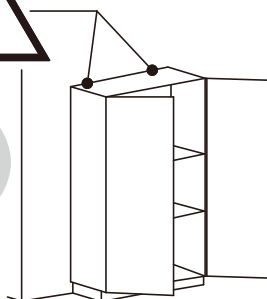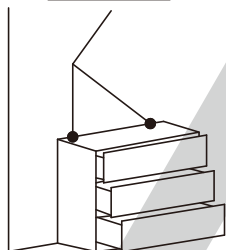

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

SAFETY TIPS:

 
Static charge may cause dust on foam - clean with a dry or damp cloth.

Small foam strands may be present - handle gently and dispose of properly.


Do not burn or incinerate. Check local recycling guidelines.

Peel off film before use


Board Identification

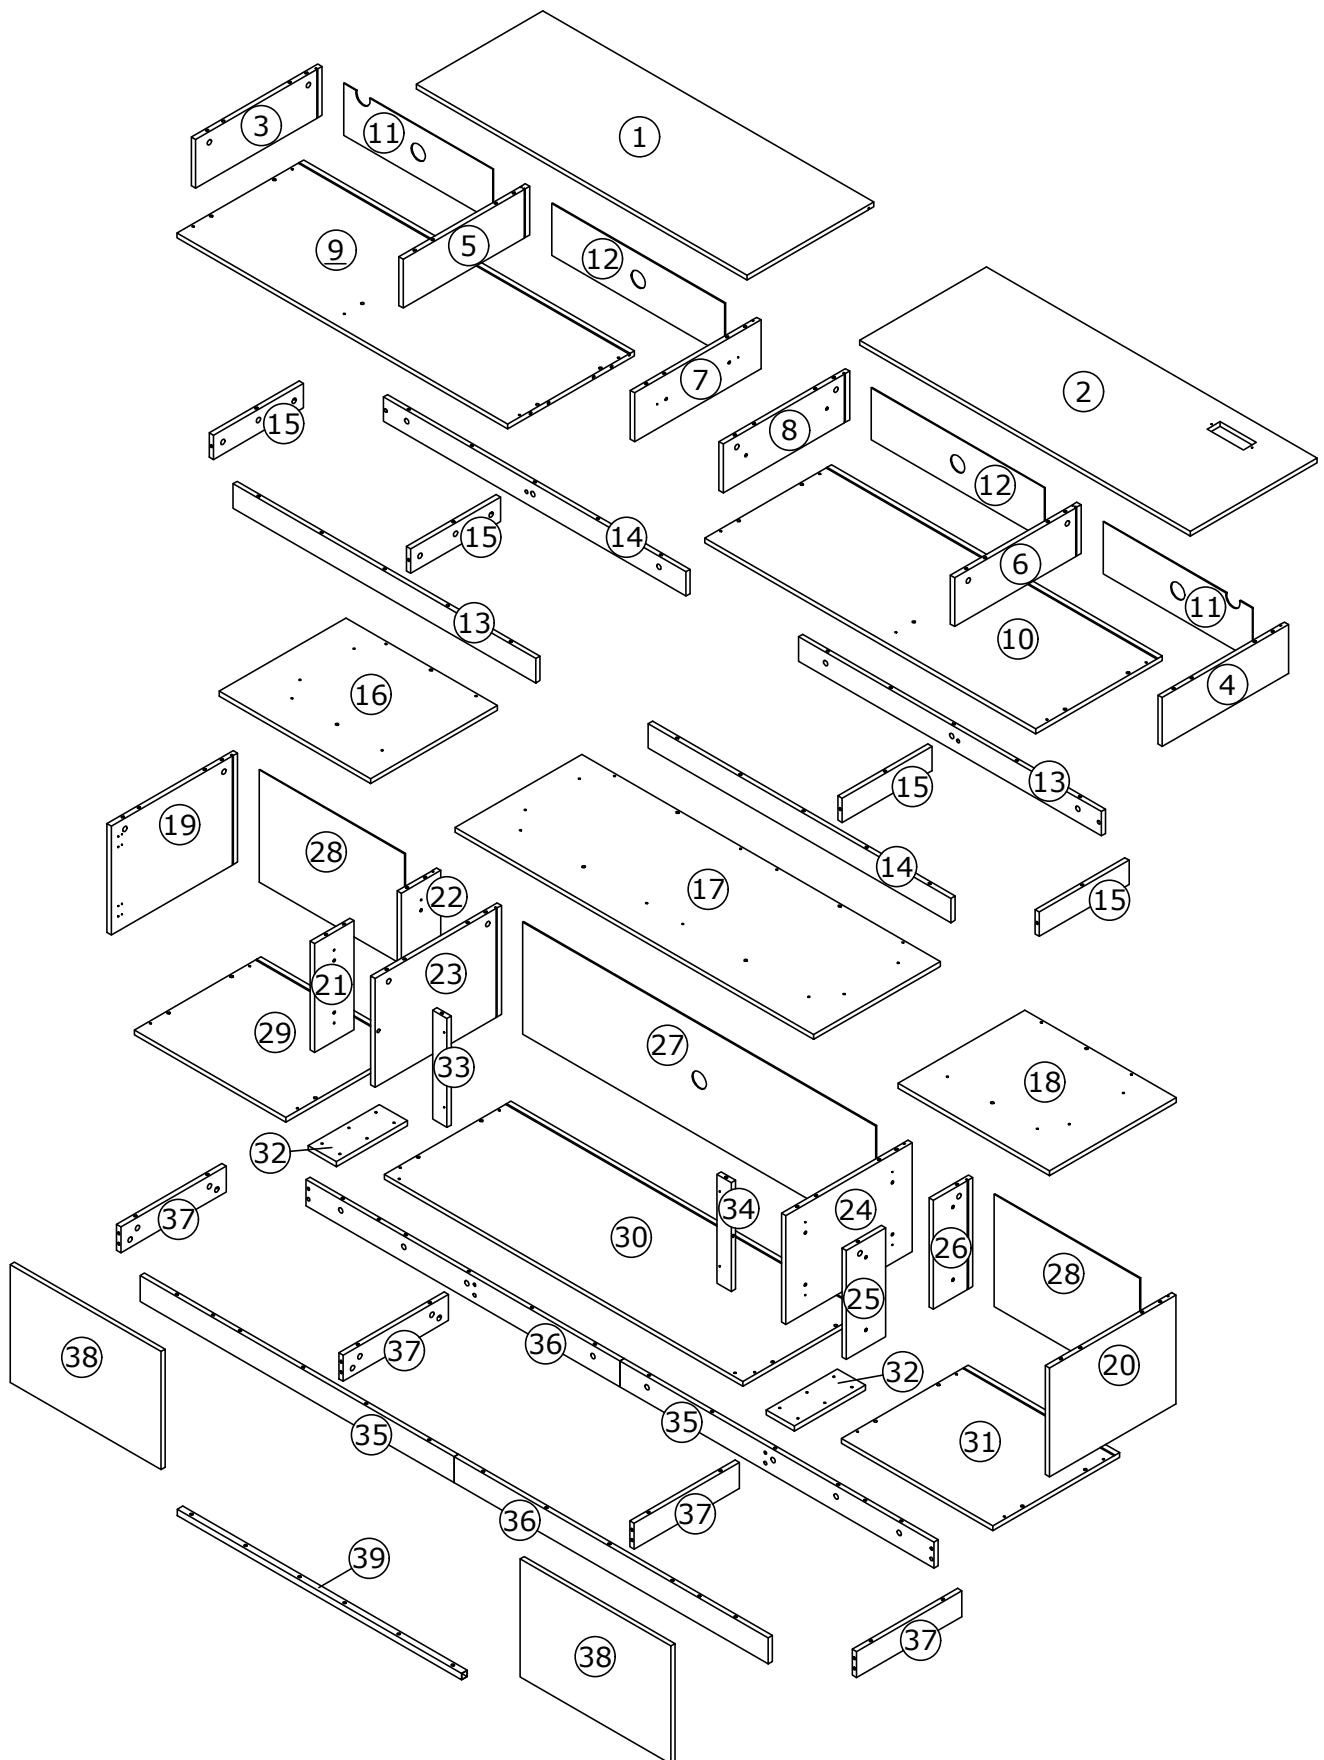


PARTS LIST

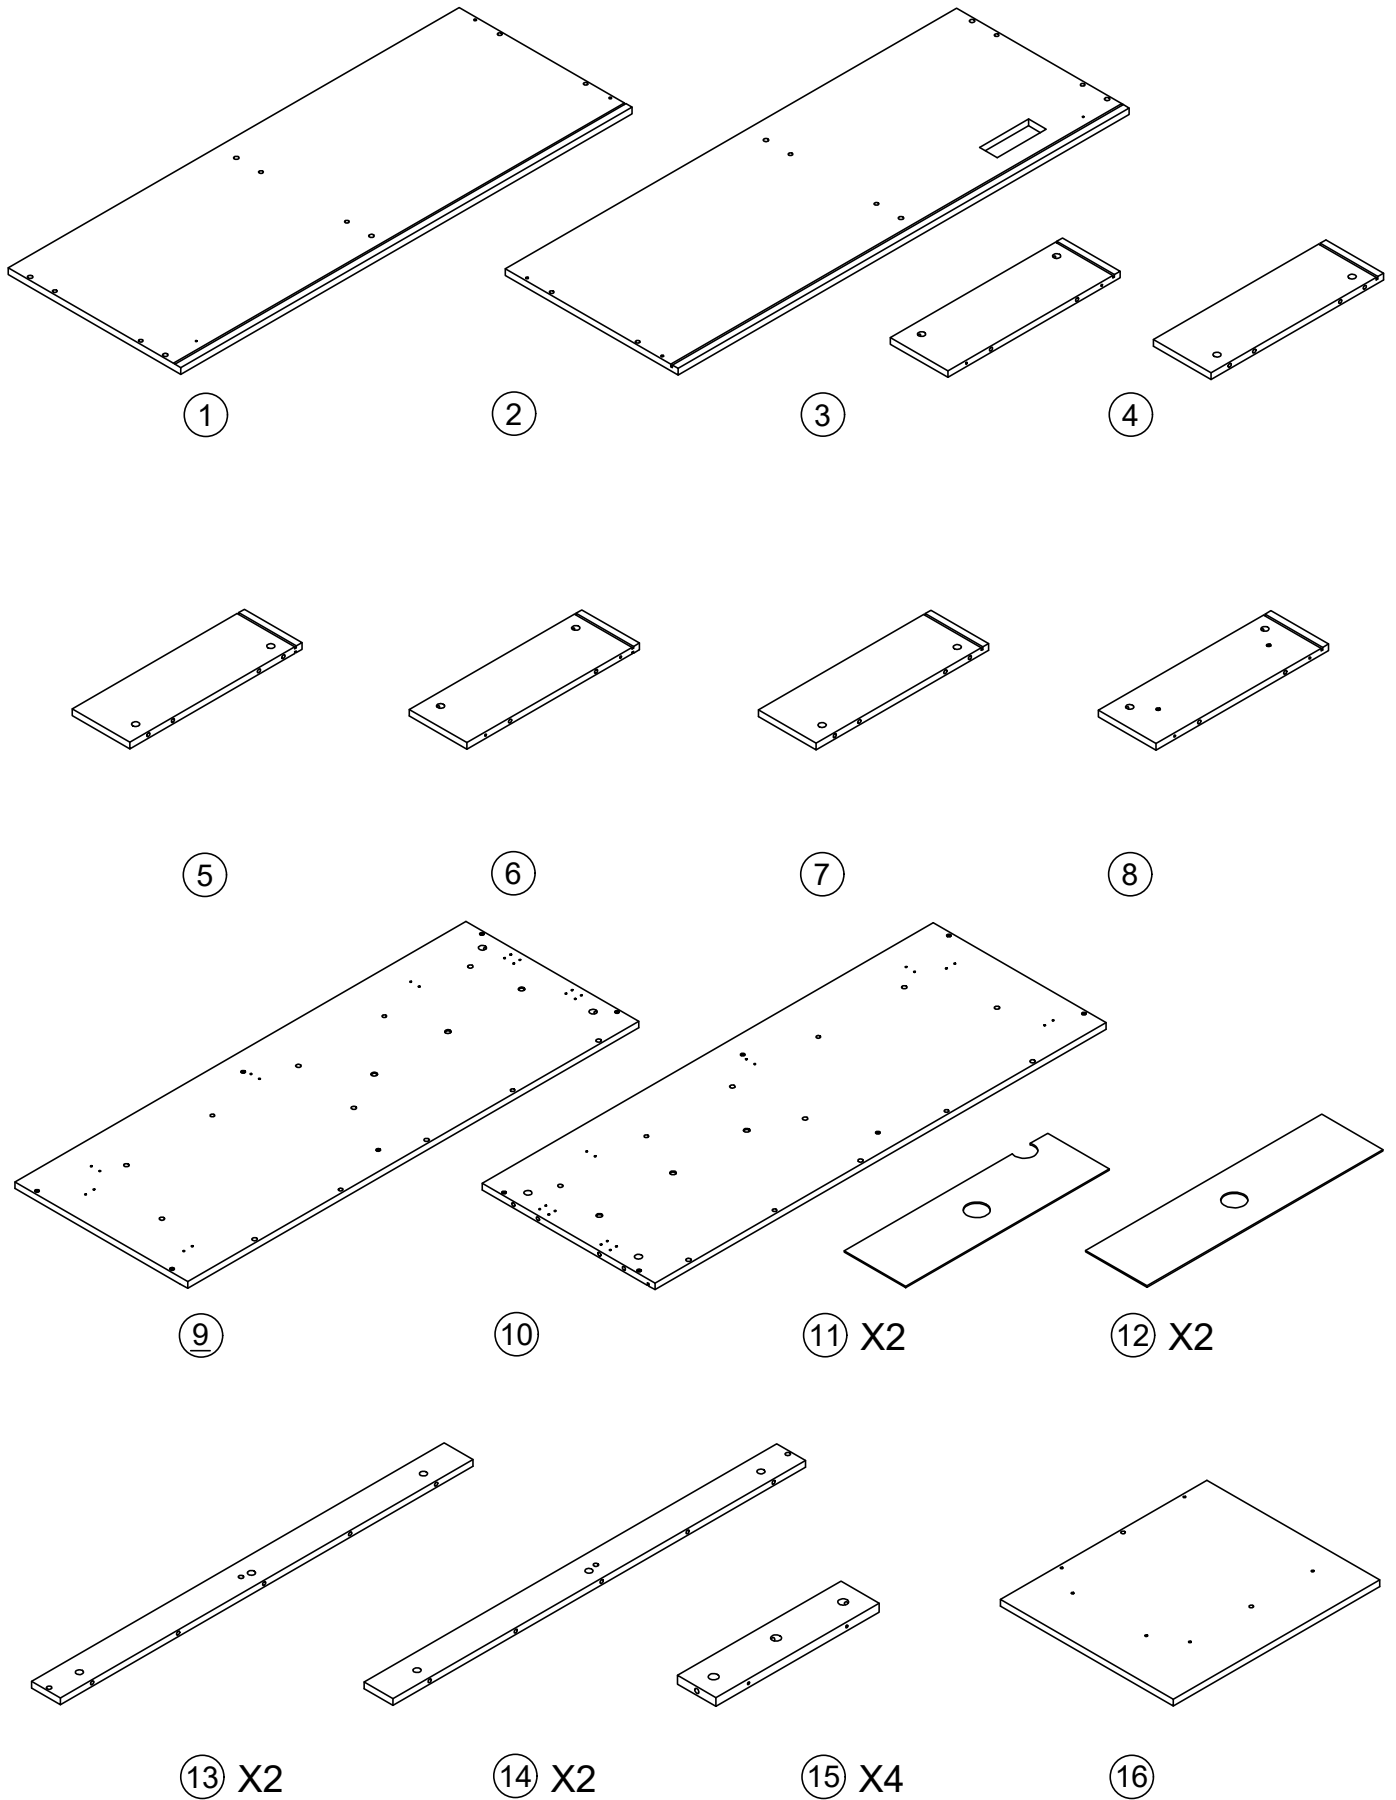 


PARTS LIST

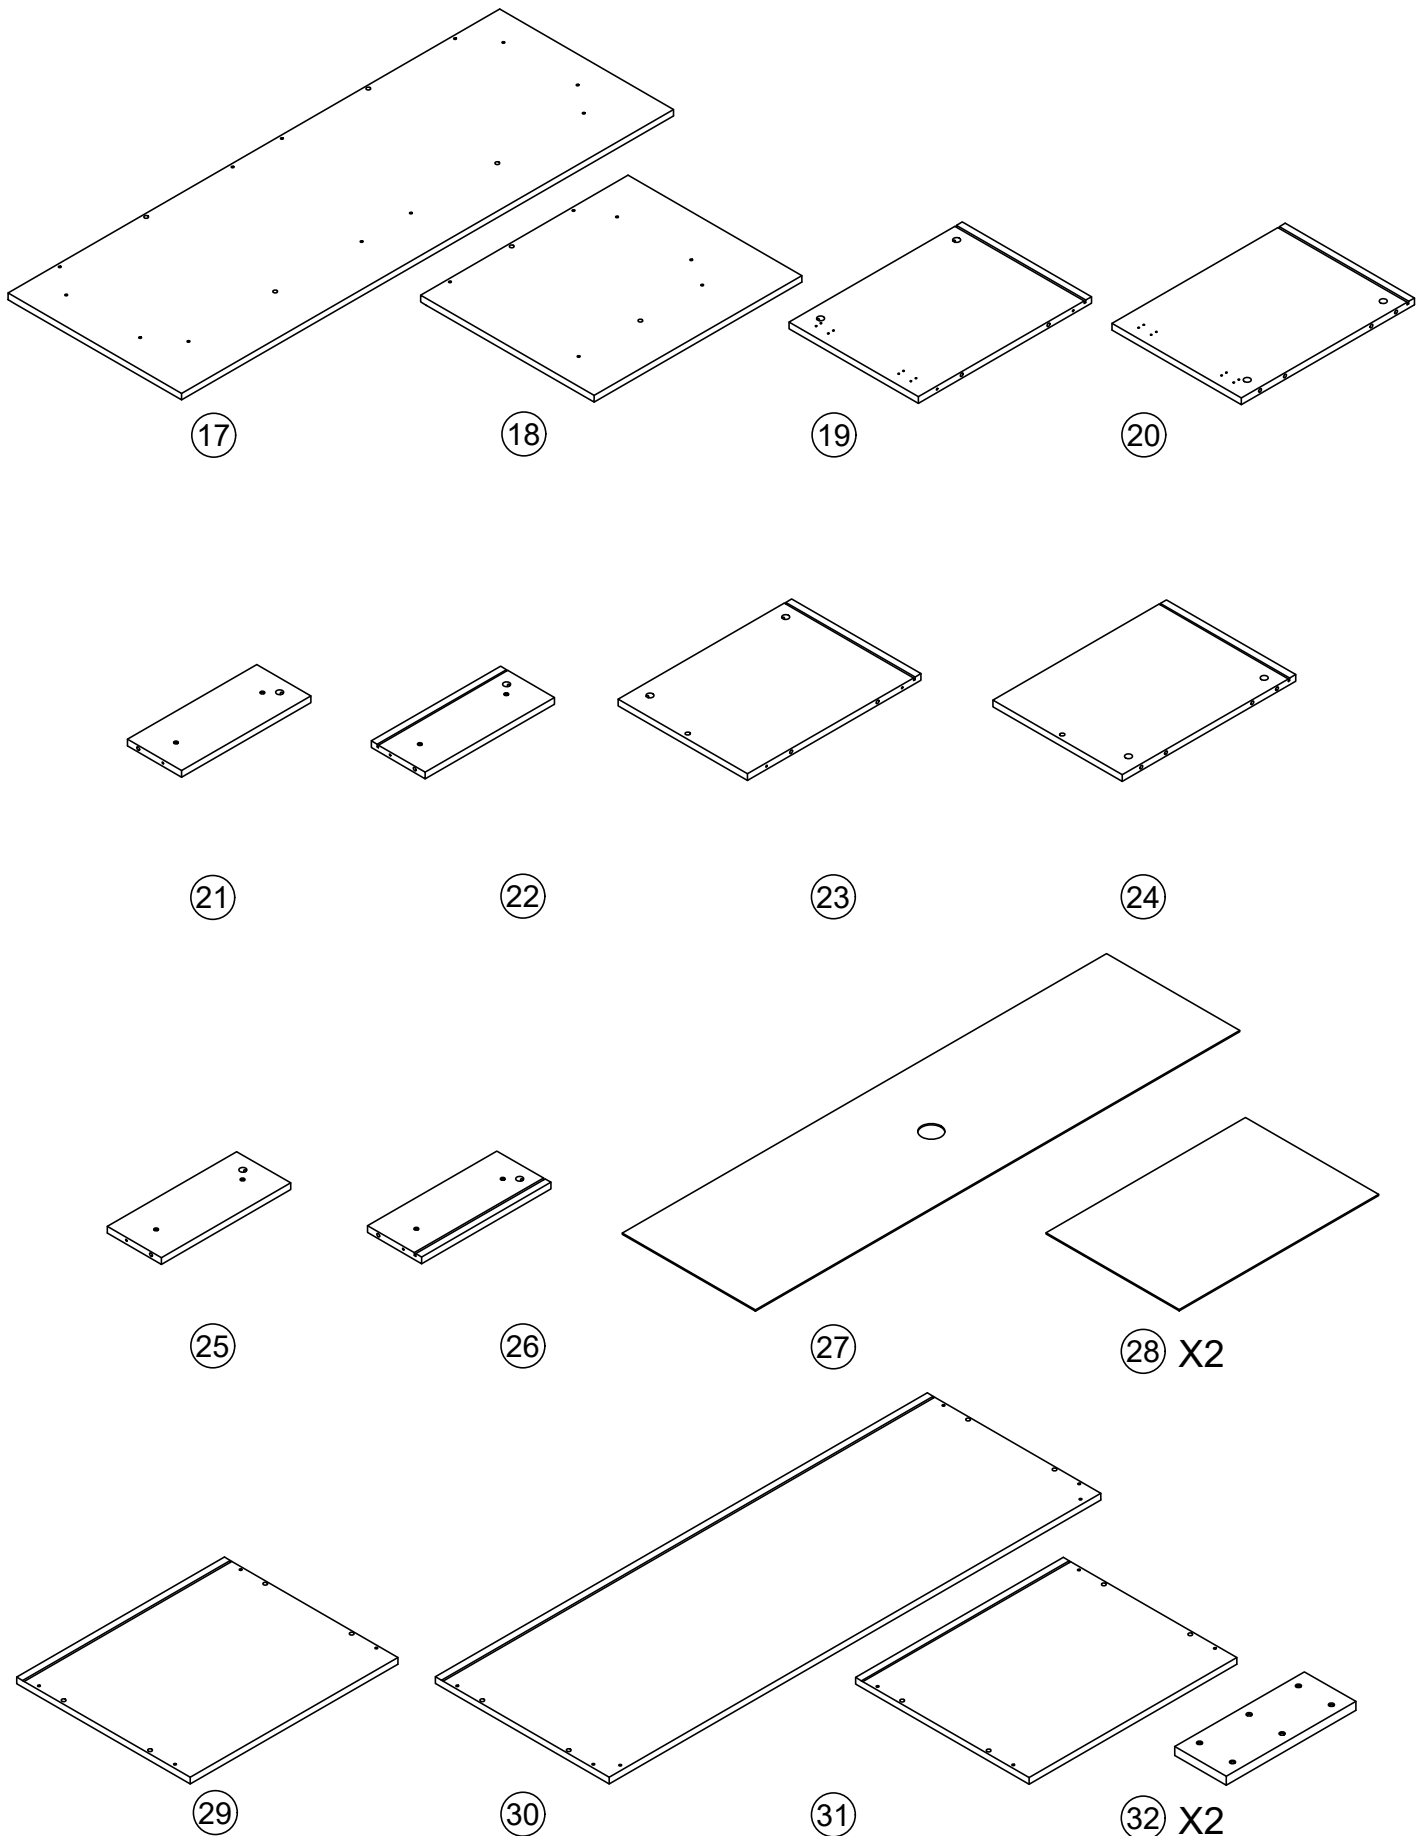 


PARTS LIST

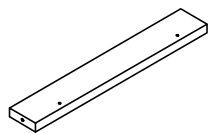 


③③

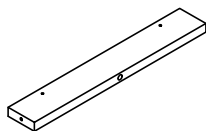 


③④

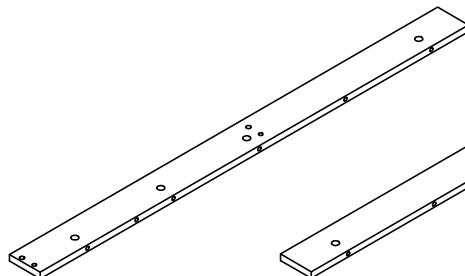 


③⑤ X2

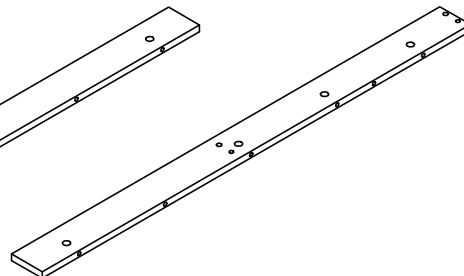 


③⑥ X2

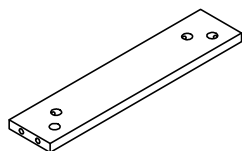 


③⑦ X4

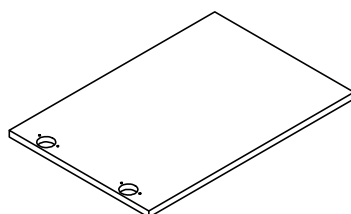 



③⑧ X2

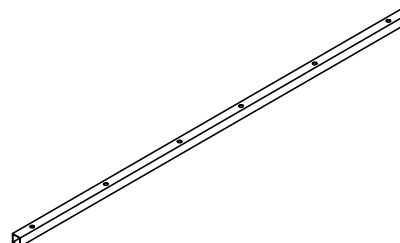 

③⑨

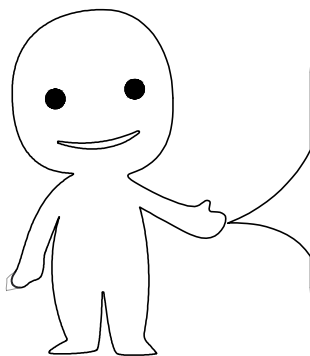 

Please prepare the following tools

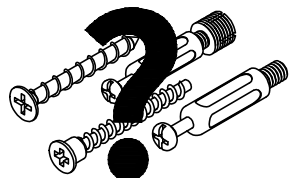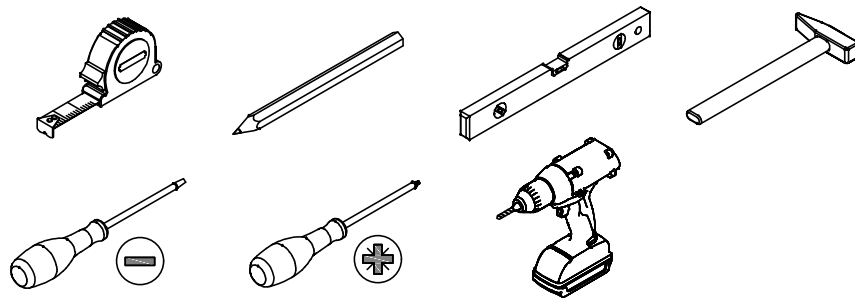  


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 88




Ø 15 x 11.5 mm

 B x 72

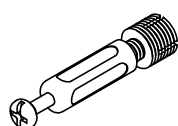


Ø 7 x 40 mm

 C x 82

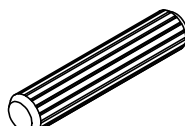


Ø 8 x 40 mm

 D x 44

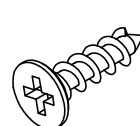


Ø 3.5 x 14 mm

 E x 22

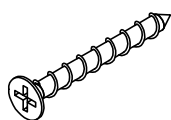


Ø 4 x 25 mm

 
F x 2

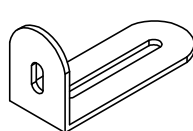

G x 4

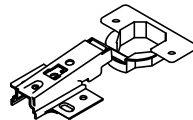 


H x 50

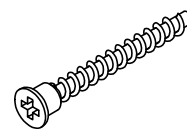 


Ø 5 x 40 mm

 J x 1

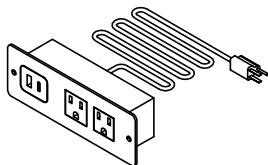


K x 26

 


K-1 K-2

 L x 12

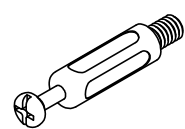


Ø 7 x 40 mm

 M x 2

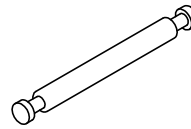


Ø 6 x 74 mm

 N x 2




Ø 3.5 x 14 mm

 P x 10



Ø 8 x 20 mm

 
Q x 2




S x 38



 R x 1

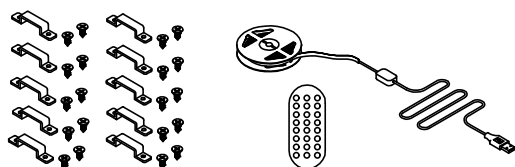


T x 6

 


M6 x 30 mm


 
U x 2



Ø 3.5 x 14 mm

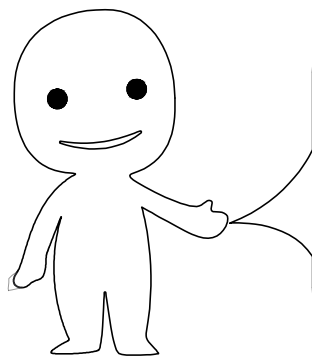 


Please prepare the following tools

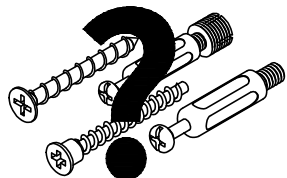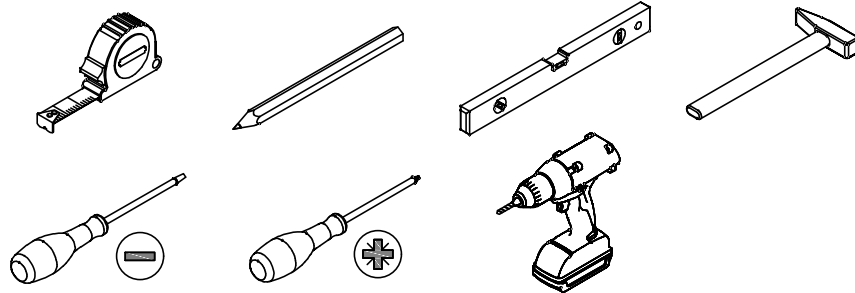  


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 V x 12



W x 2

 






W-1

W-2









+2

SPARE BAG

     1

B x 8  Ø7 x 40 mm	C x 12  Ø8 x 40 mm	F x 2 	L x 4  Ø7 x 40 mm	U x 2  Ø3.5 x 14 mm	
--	---	--	---	--	---

        Before installation, the foam board in the packing box can be placed under the ①、②board to prevent scratches.

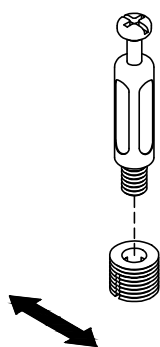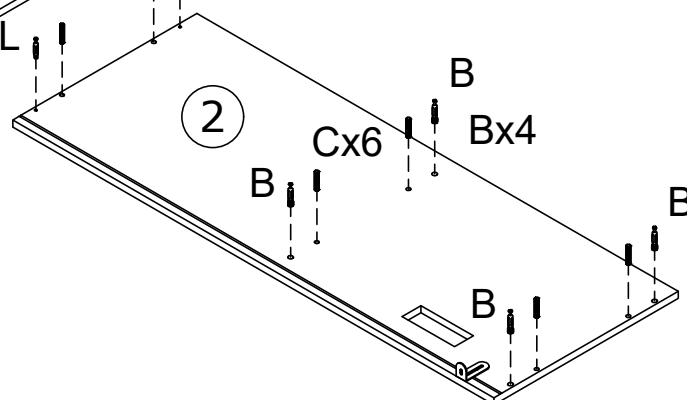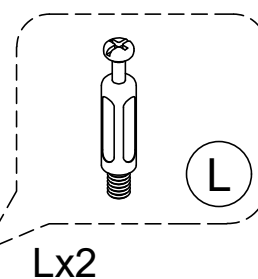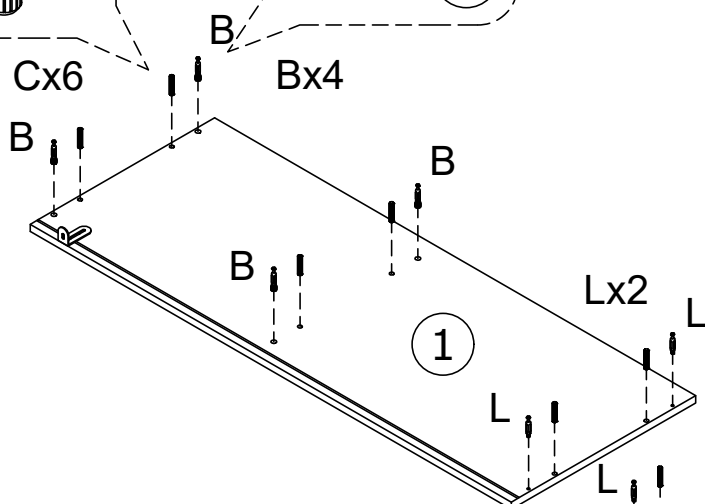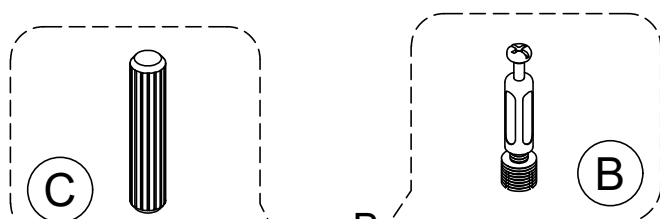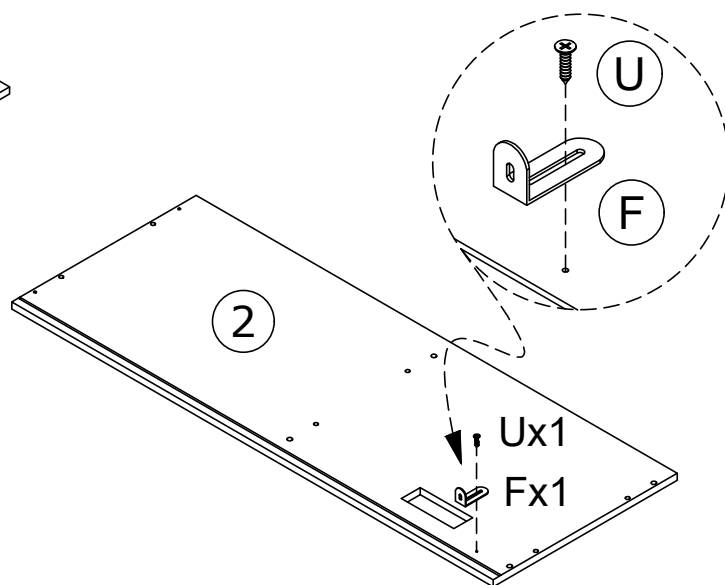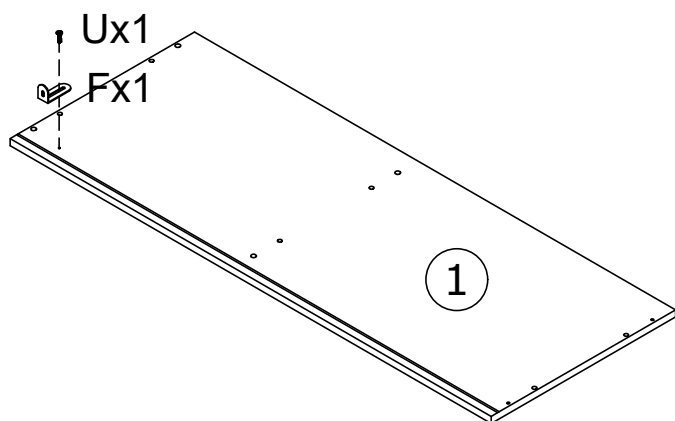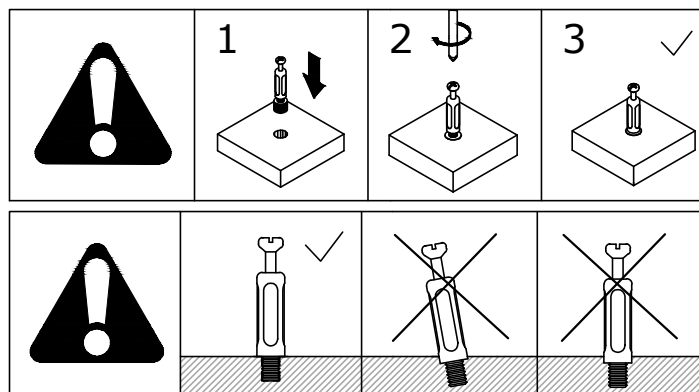

To prevent bulging caused by the expansion of cam bolts installed on the edge of the wooden board, please orient the opening of the plastic particles towards the edge, allowing them to expand towards the solid part of the board.

 
2

A x 12




Ø15 x 11.5mm

C x 12













Ø8 x 40 mm




 
P x 2








Ø8 x 20 mm

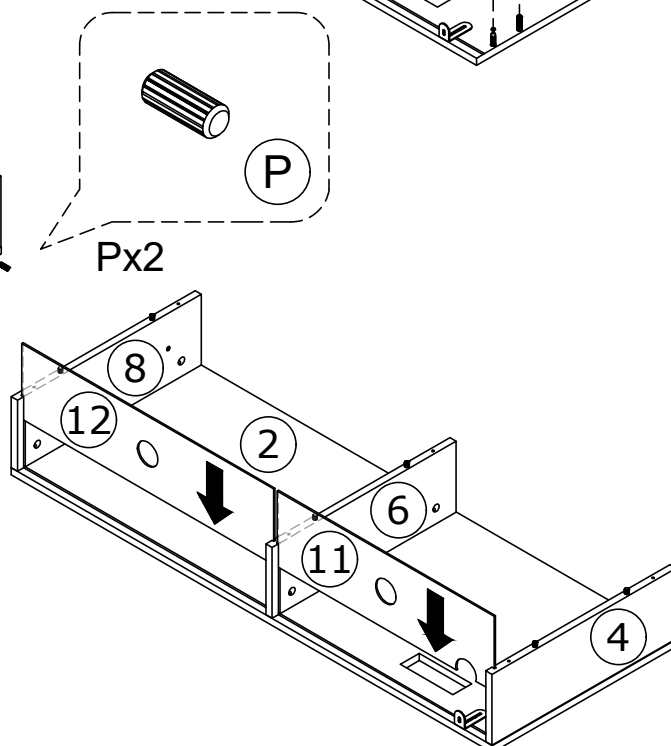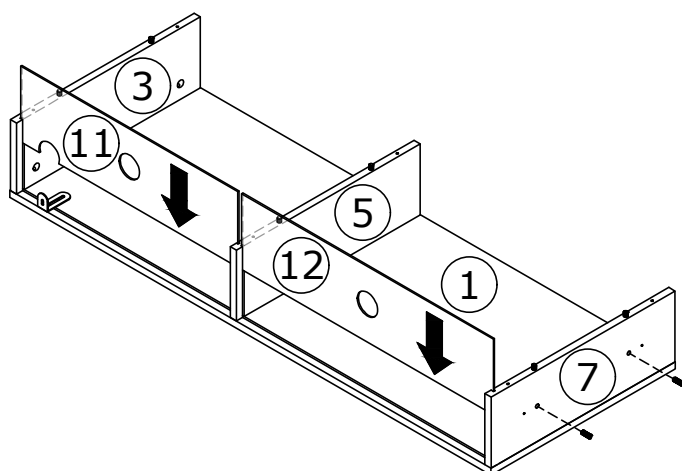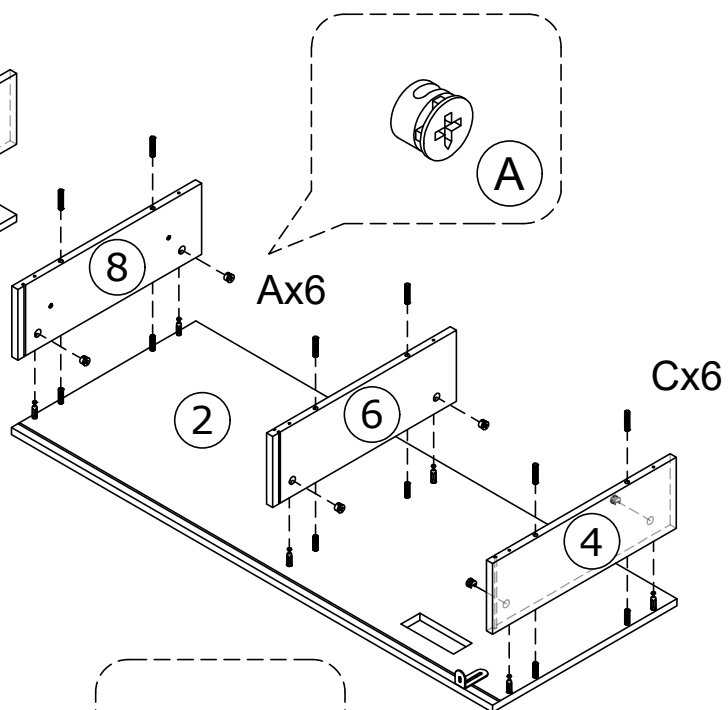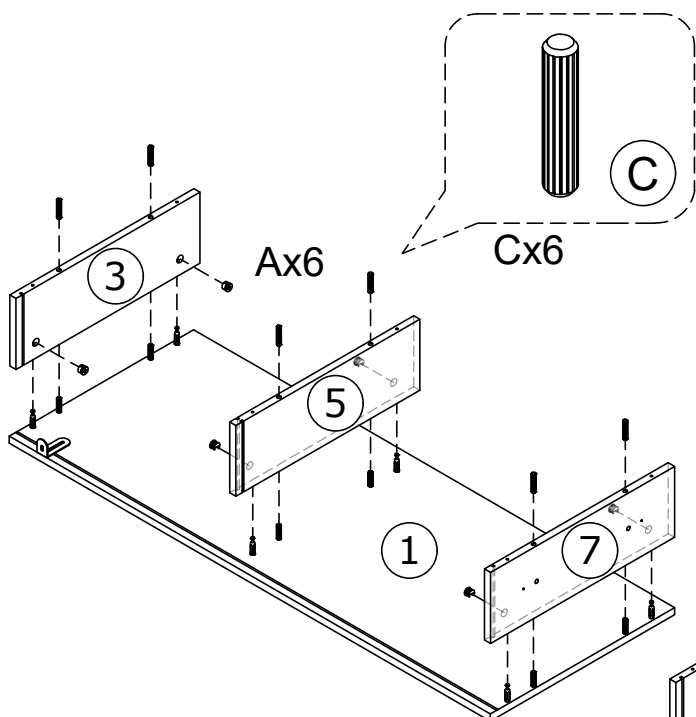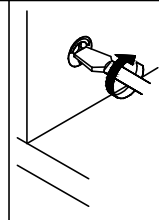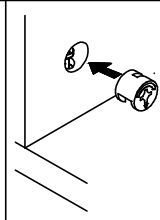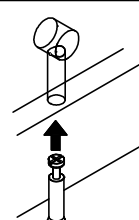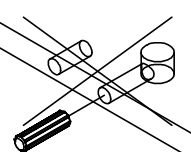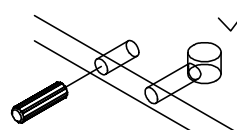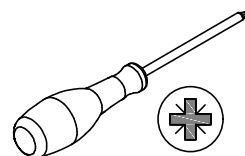          





3

    A x 4  Ø15 x 11.5mm	C x 2  Ø8 x 40 mm	E x 2  Ø4 x 25 mm	H x 12  Ø5 x 40 mm	M x 2  Ø6 x 74 mm	
--	--	--	--	--	---

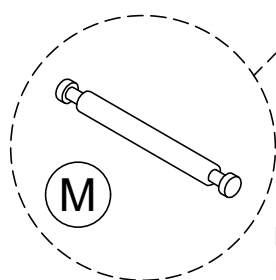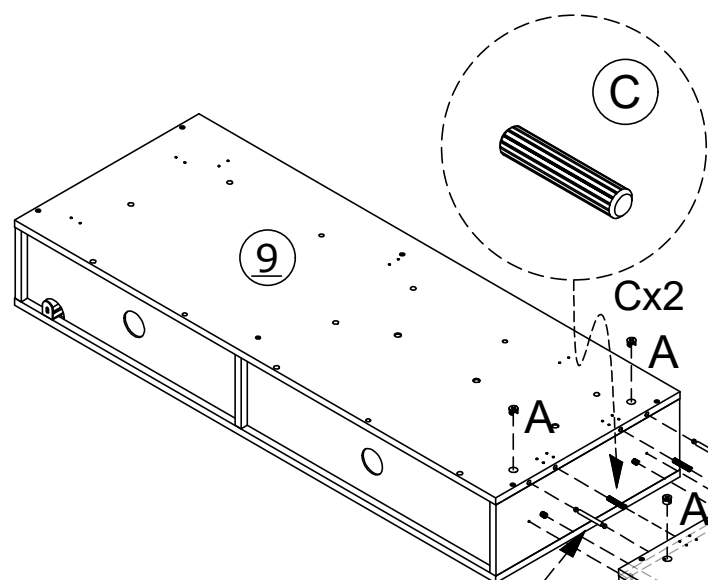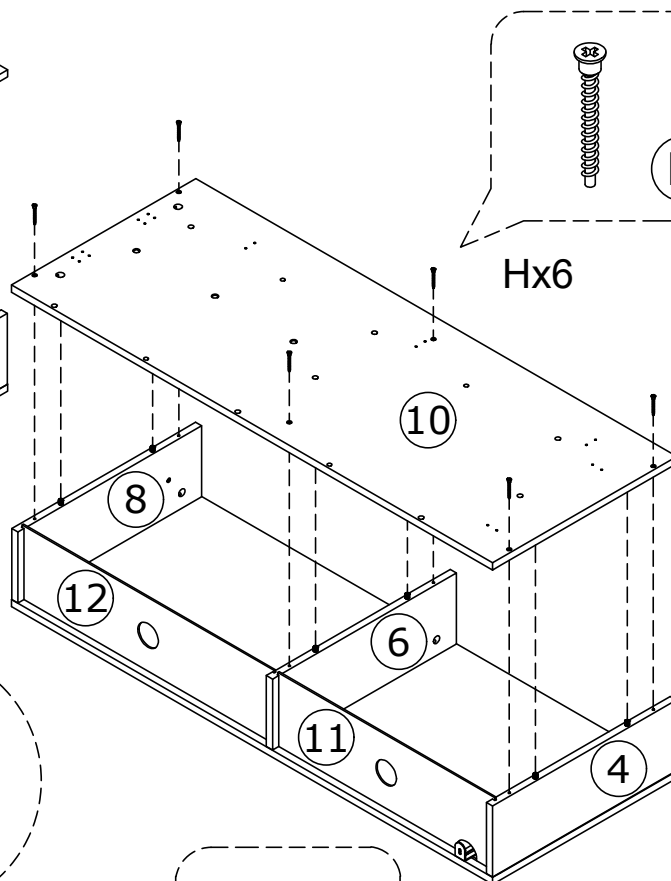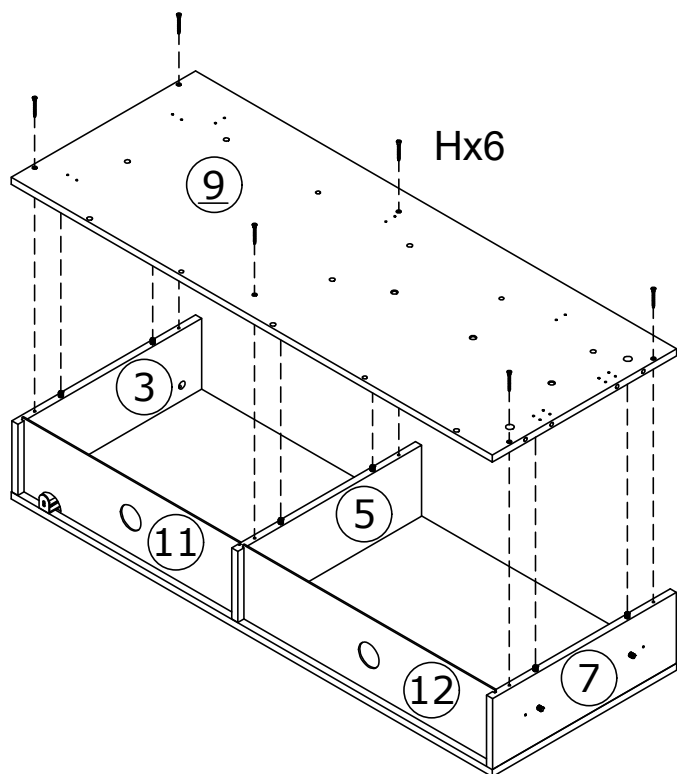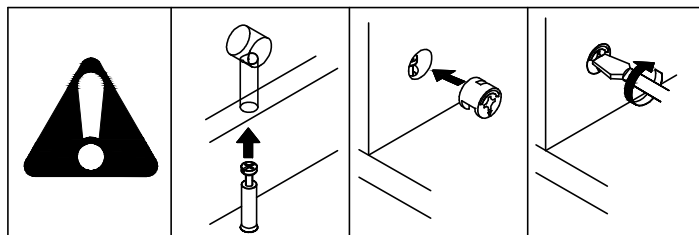     

Firstly, evenly place #M into both side holes, and then insert #A into the holes. Simultaneously and evenly tighten both sides of #A.

    4

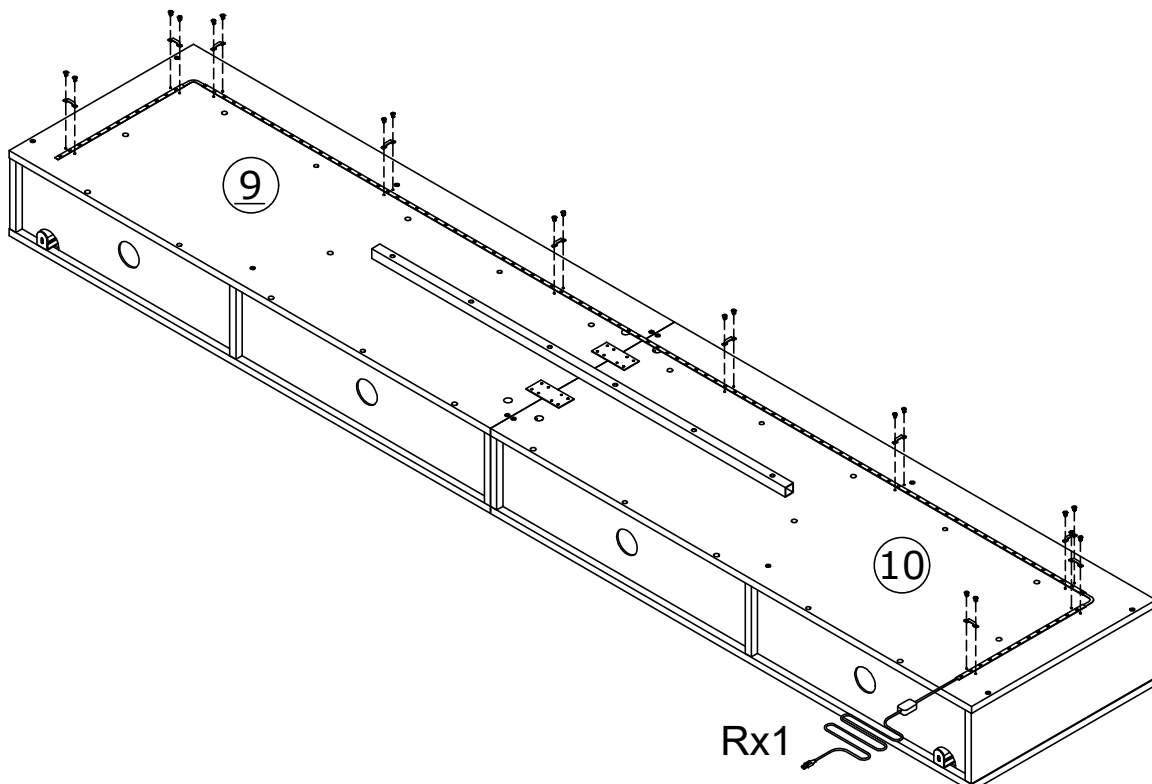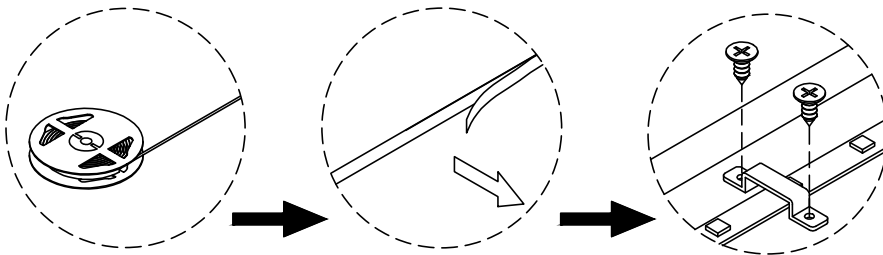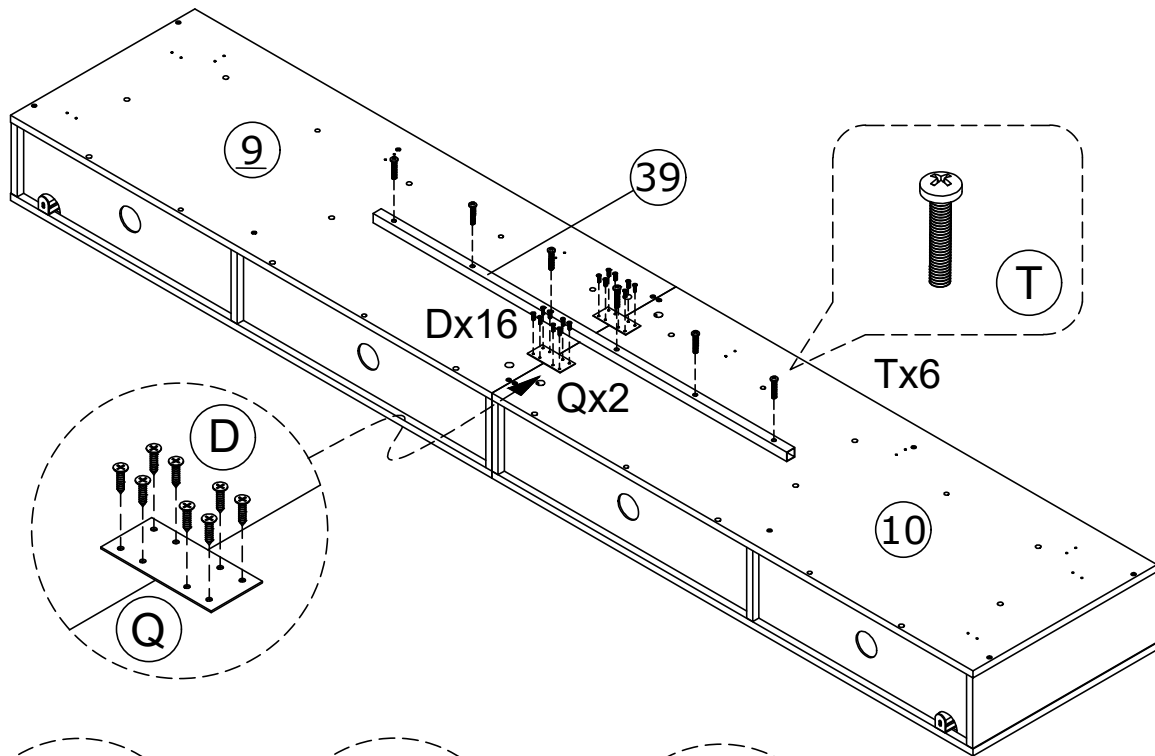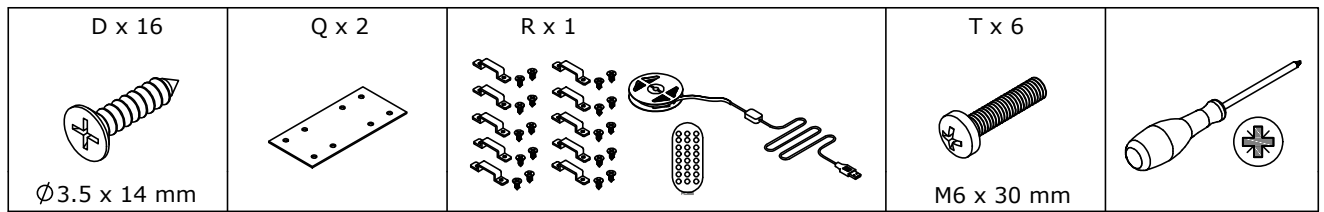


5

A x 8




Ø15 x 11.5mm

 B x 24




Ø7 x 40 mm

 
C x 8




Ø8 x 40 mm

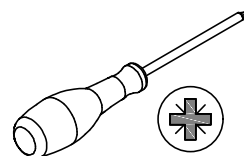 





1

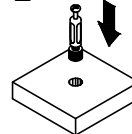 

2

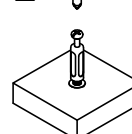 

3

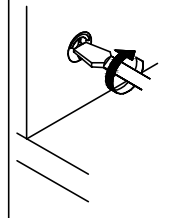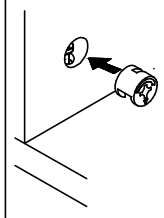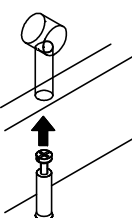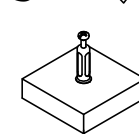    

Bx2

13

x2

Bx2

14

x2

The small hole is facing upwards.

15

13

x2

14

15

Ax4

Bx16

B


A


Cx8

C




9

 
10

A x 16  Ø15 x 11.5mm	B x 6  Ø7 x 40 mm	C x 8  Ø8 x 40 mm	L x 8  Ø7 x 40 mm	
---	--	--	---	---

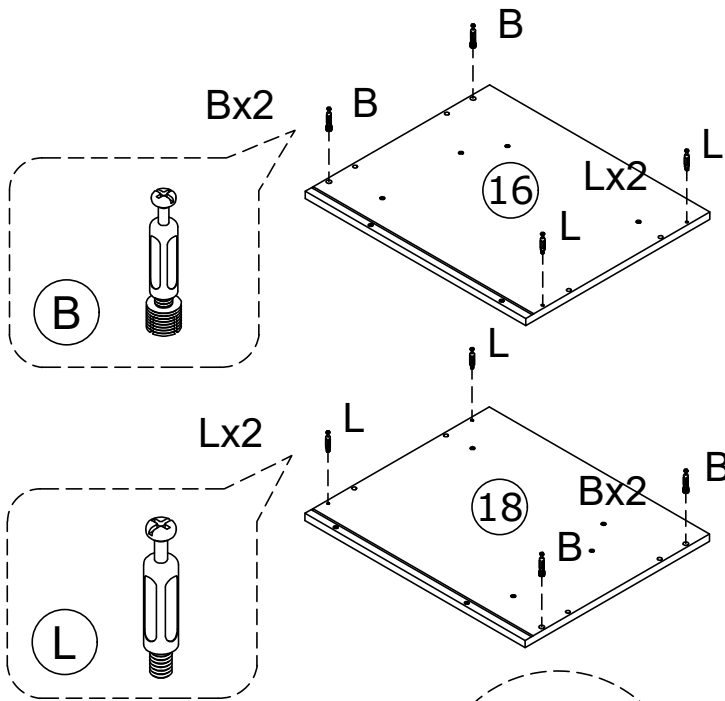 

7

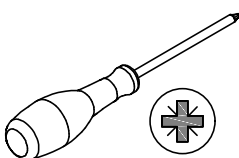   C x 12  Ø8 x 40 mm	E x 8  Ø4 x 25 mm	H x 24  Ø5 x 40 mm	P x 8  Ø8 x 20 mm	
---	--	---	---	--

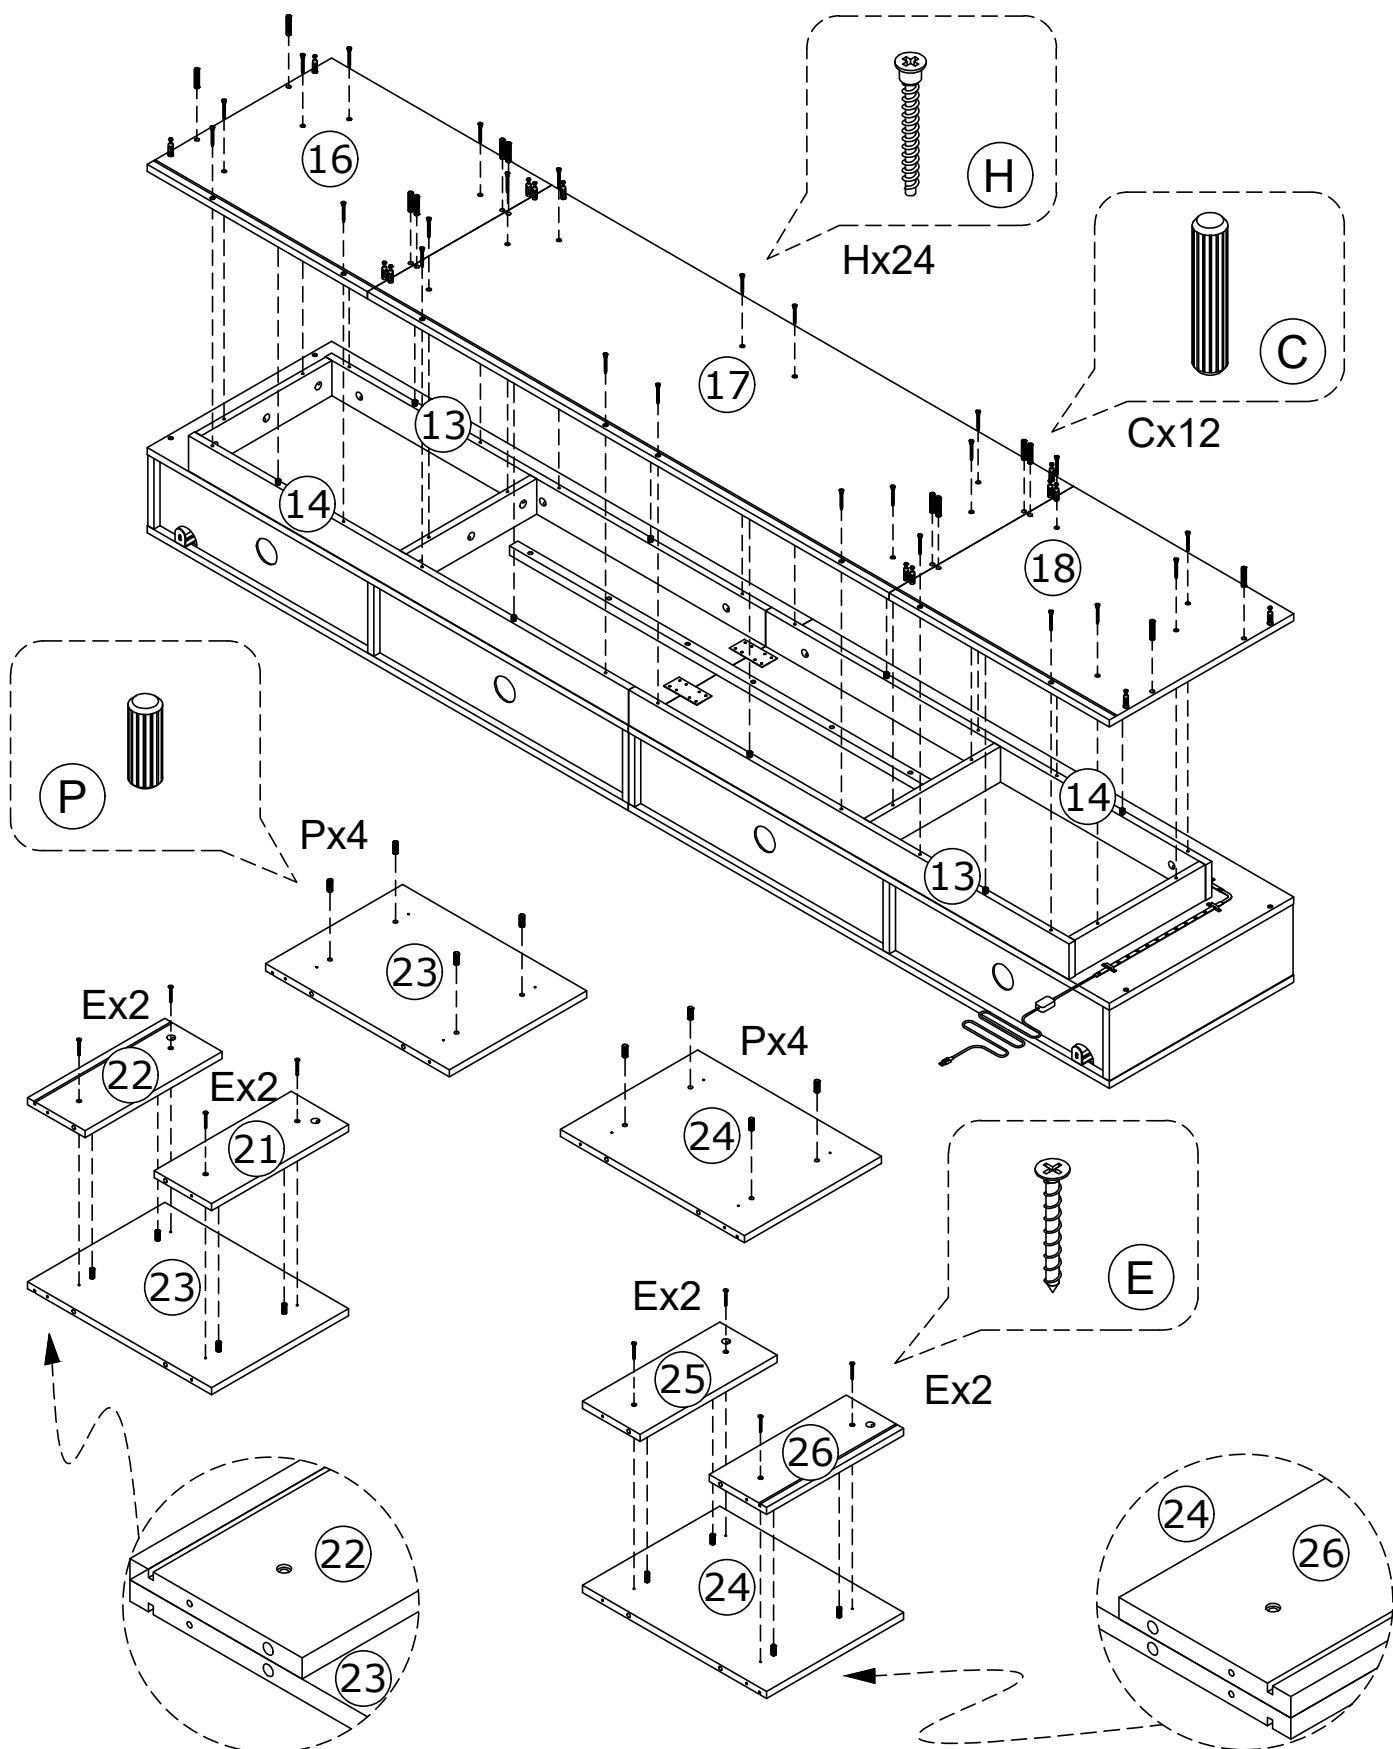 

Note that the position of the backplate slot should be correct after the installation of boards (22)and(23); (24)and (26).

 
8

A x 16




Ø15 x 11.5mm

B x 2



Ø7 x 40 mm

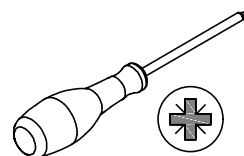 

B



Bx1


23

Bx1


24






 
1

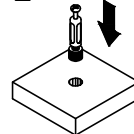

2

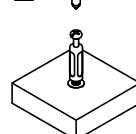 

3

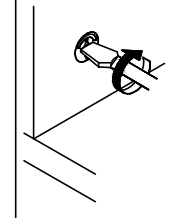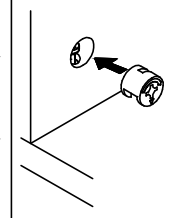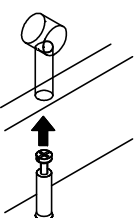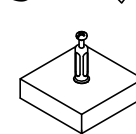    

Ax1


33

23

Ax1

34

 24

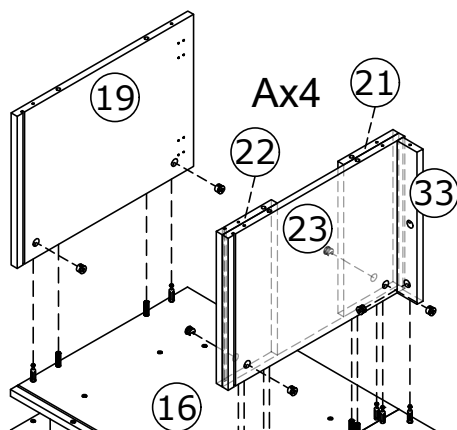

A

Ax6

17

34

24

25


Ax4

20


18

9


 
C x 12



Ø8 x 40 mm

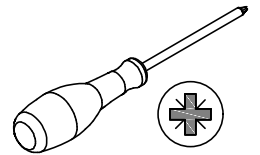 

  To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

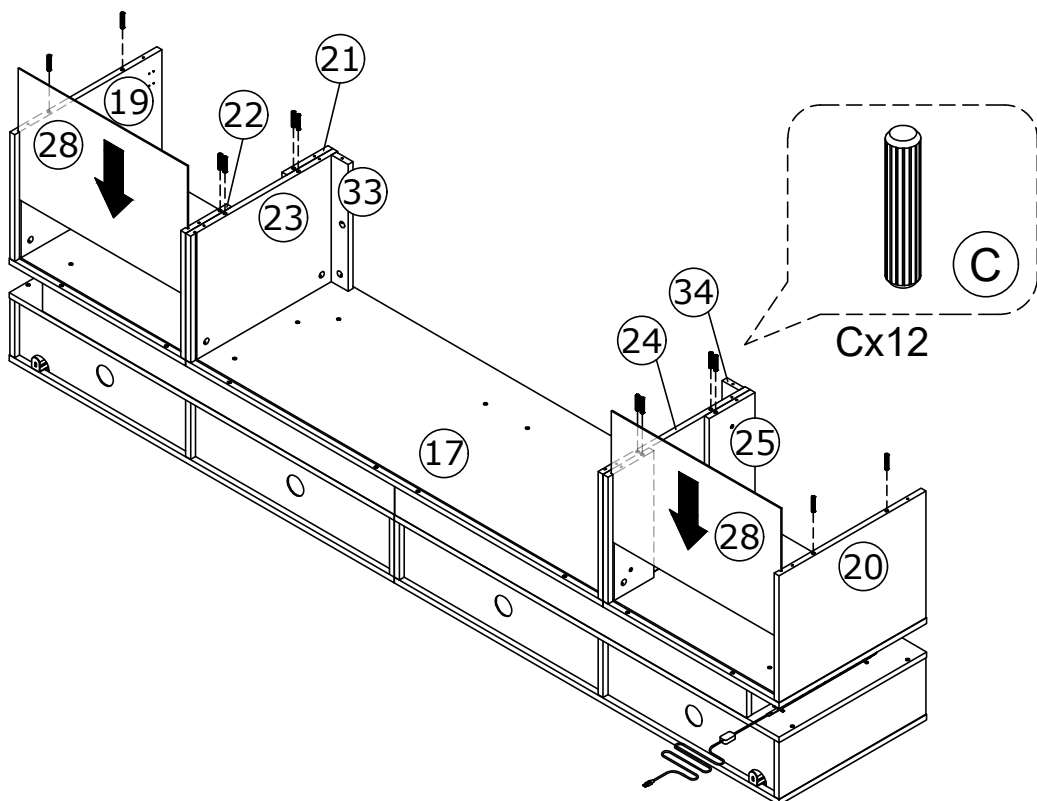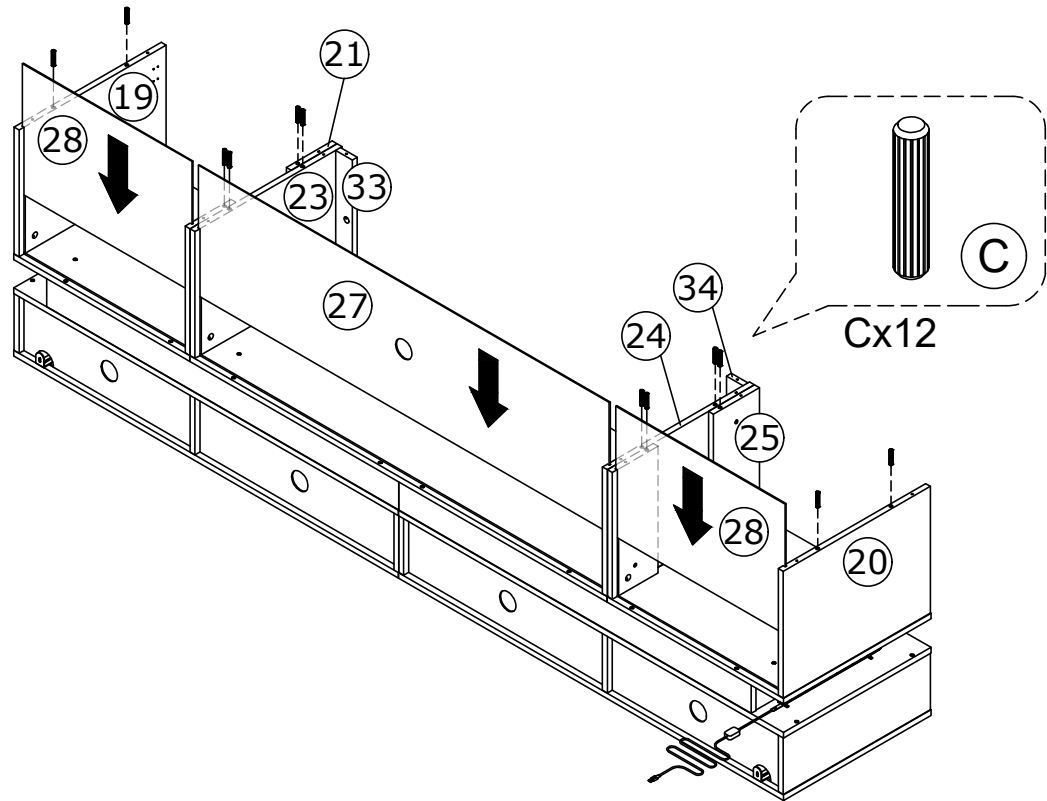


10



H x 14



 Ø5 x 40 mm

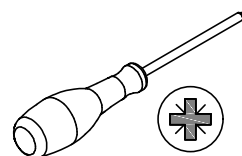

  To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

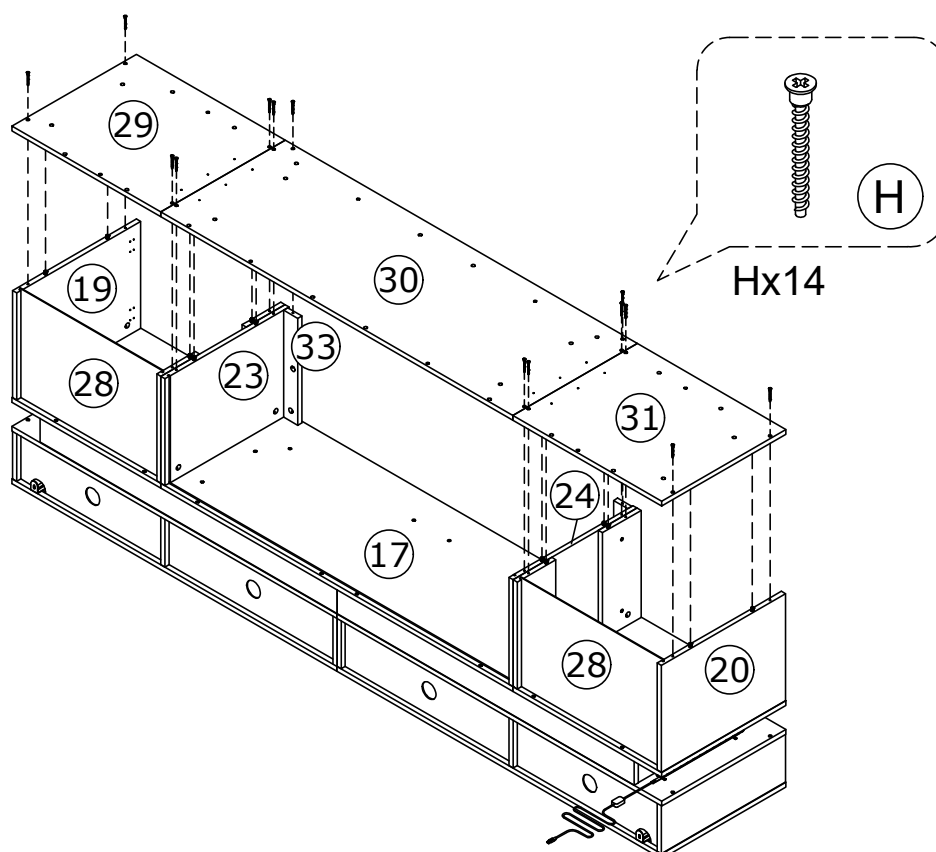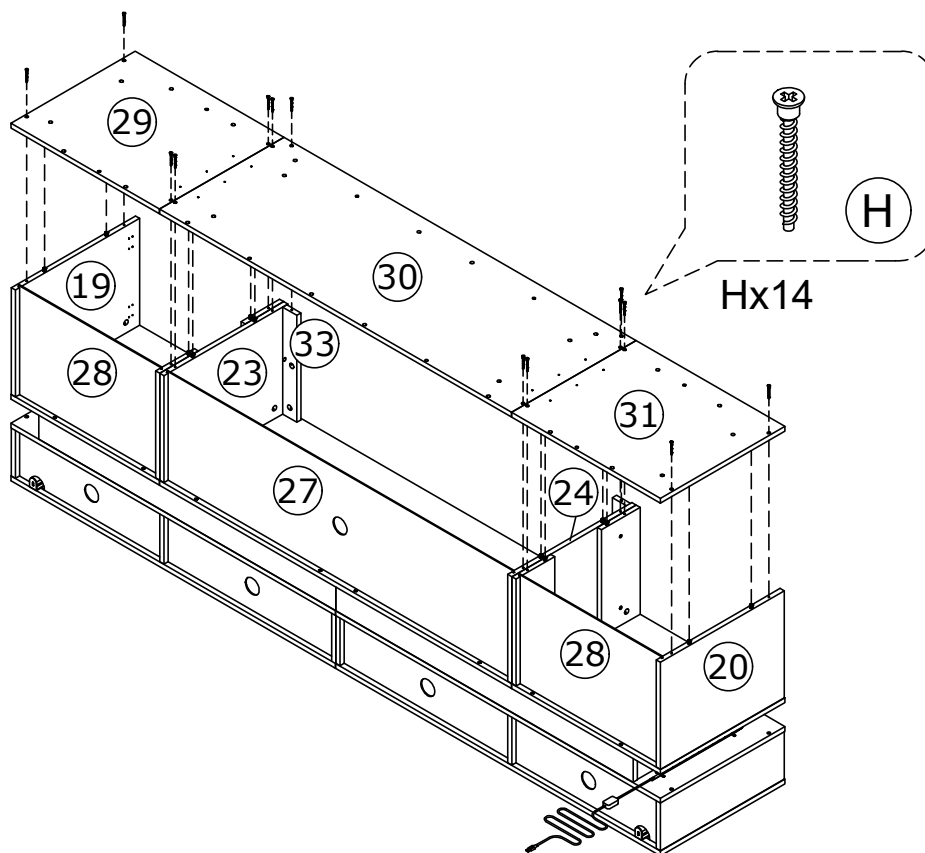


11



E x 12



 Ø4 x 25 mm

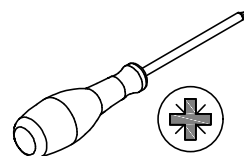


  To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

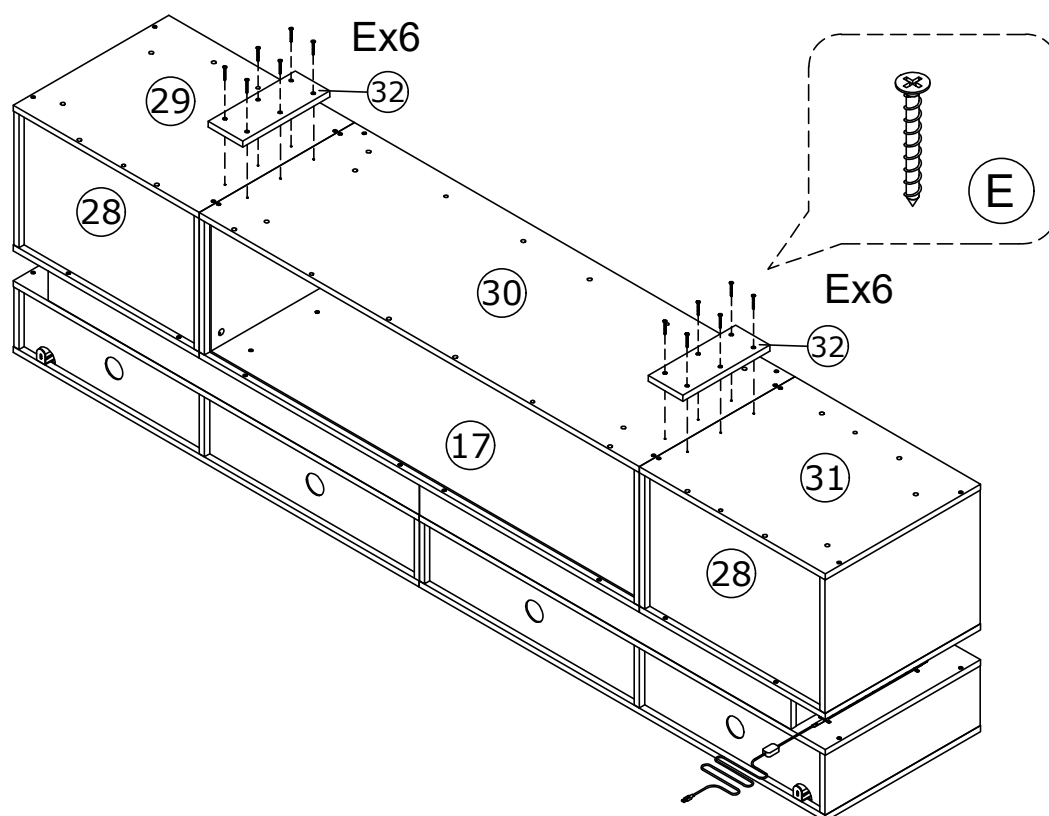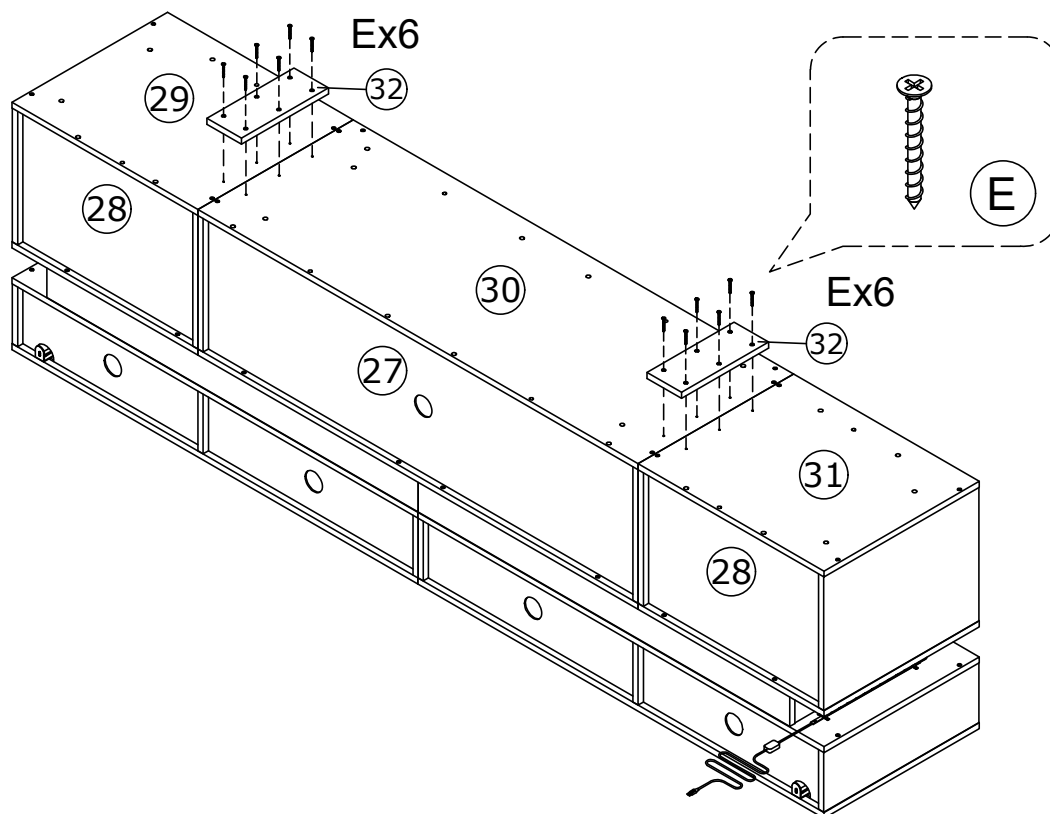


12

 B x 24




Ø7 x 40 mm


 
C x 8





Ø8 x 40 mm





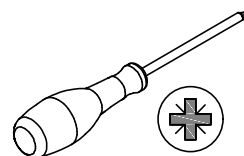 


  To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

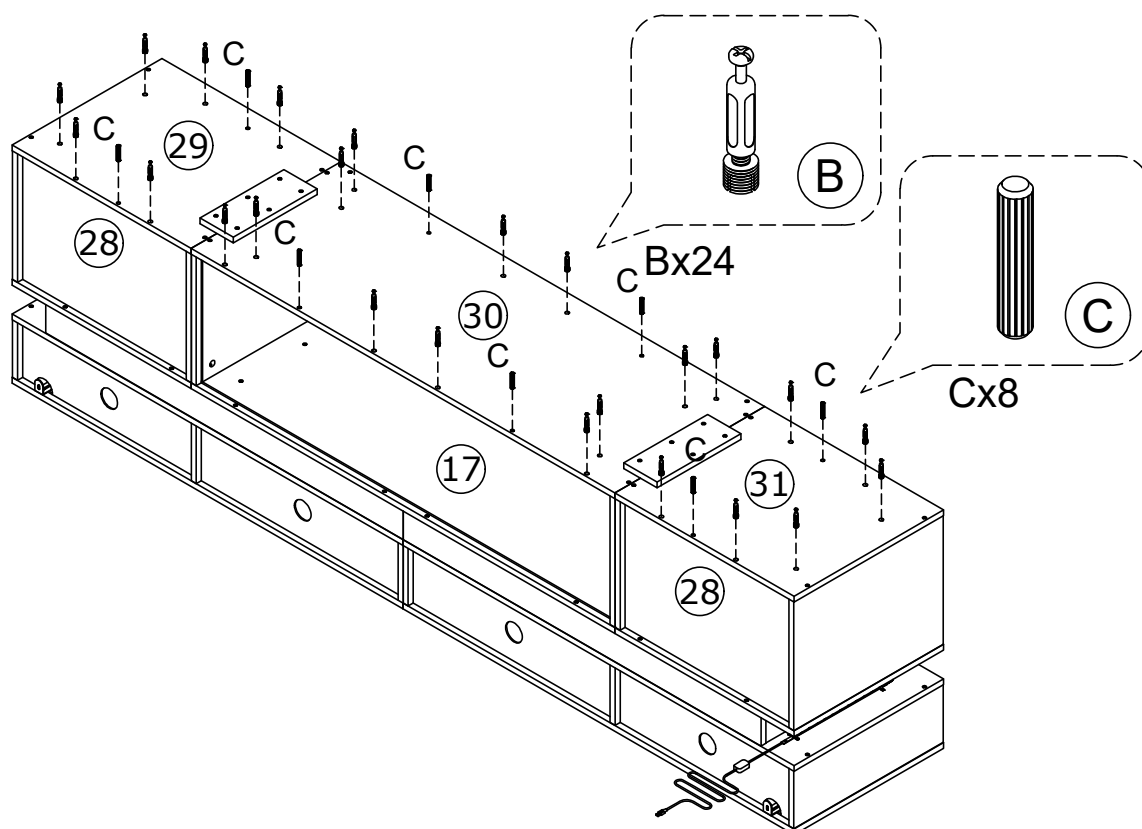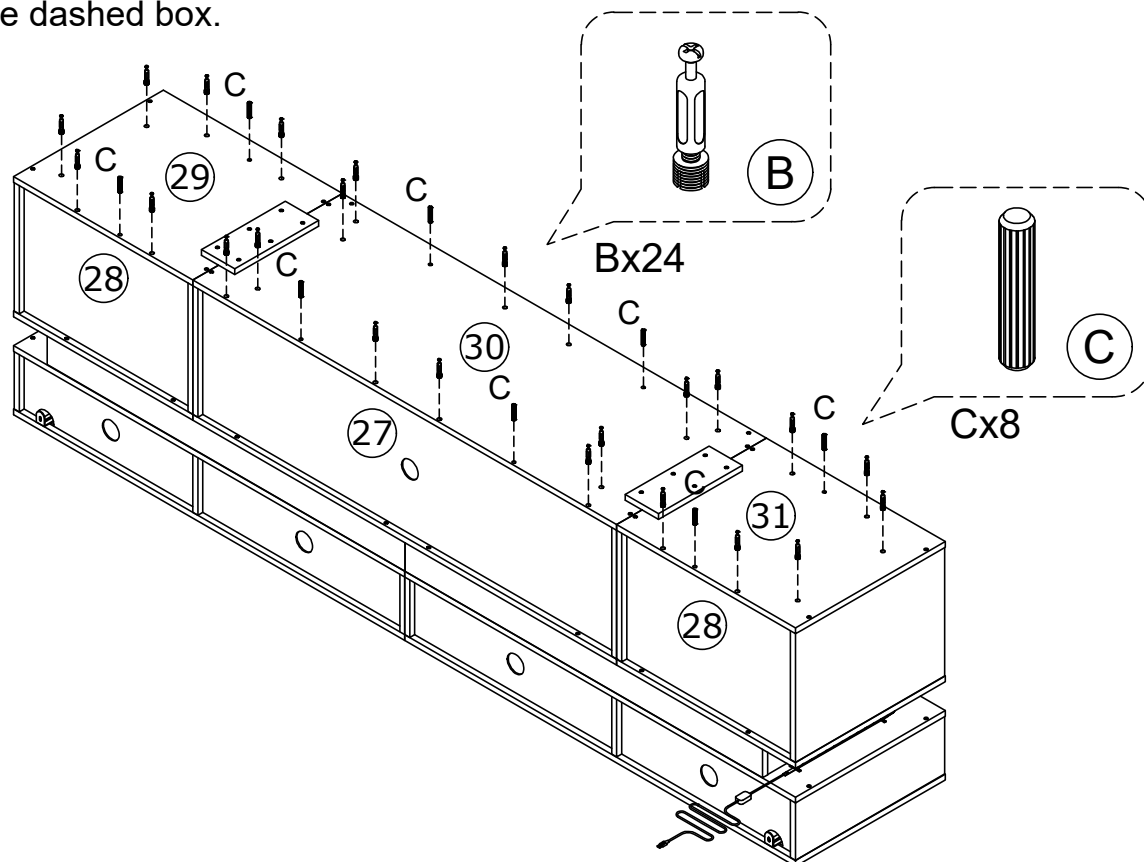

13

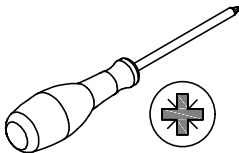  A x 8	B x 8	C x 8	
			
Ø15 x 11.5mm	Ø7 x 40 mm	Ø8 x 40 mm	

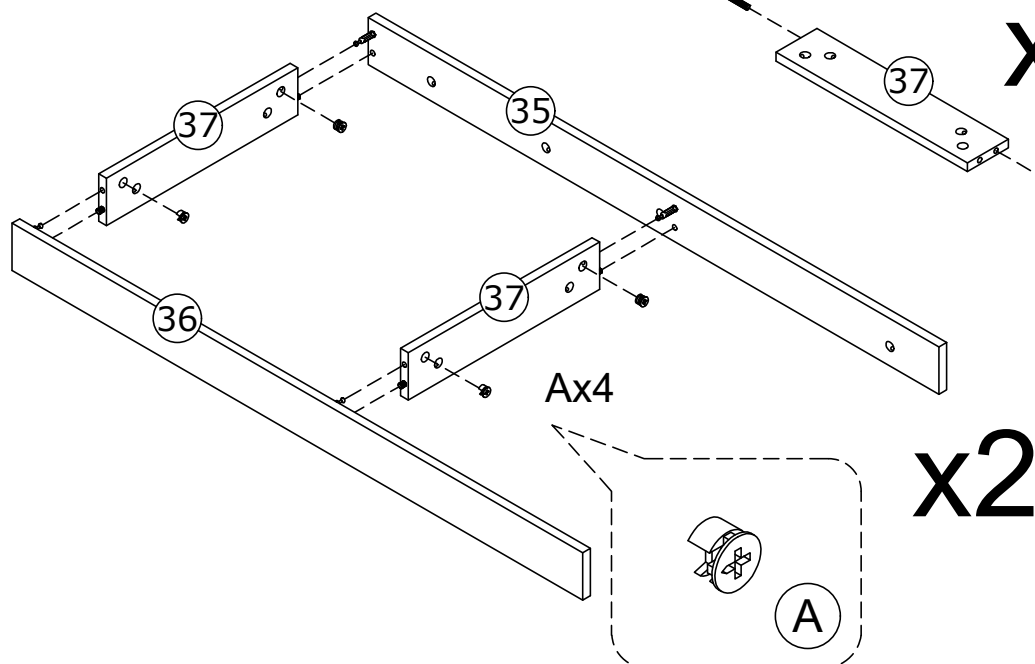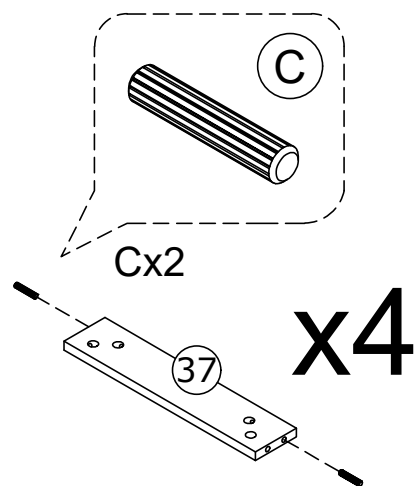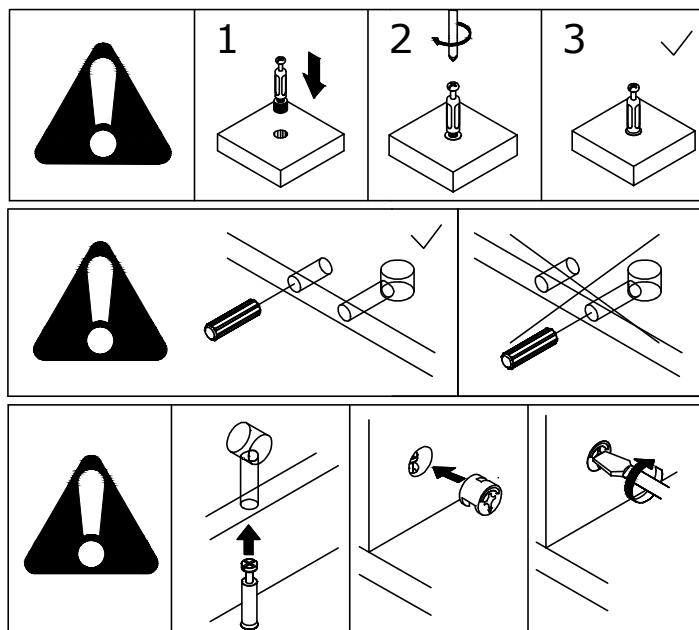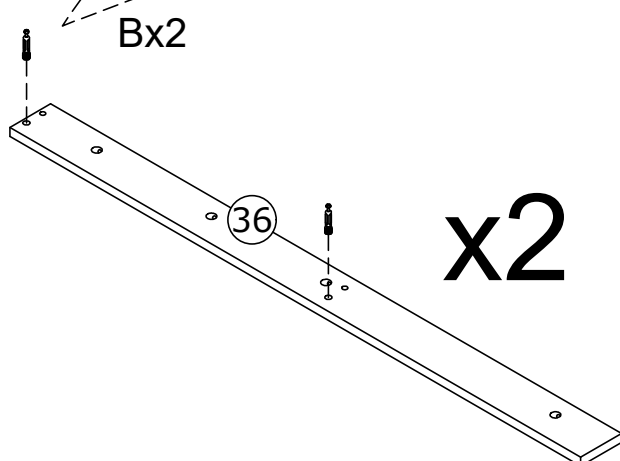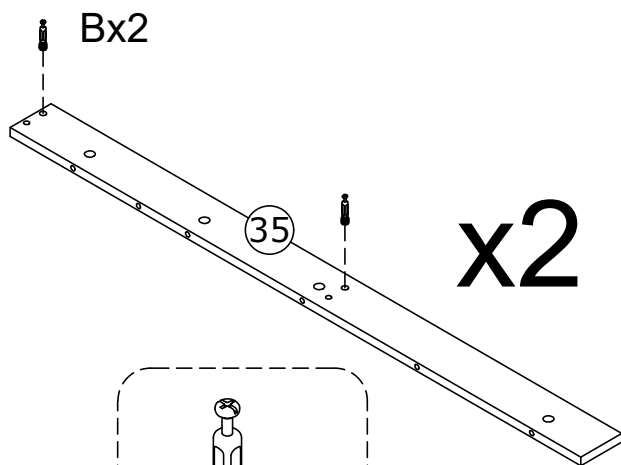     


14

A x 24





Ø15 x 11.5mm

 V x 12

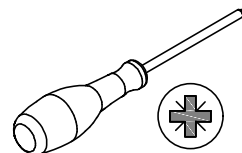

  
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

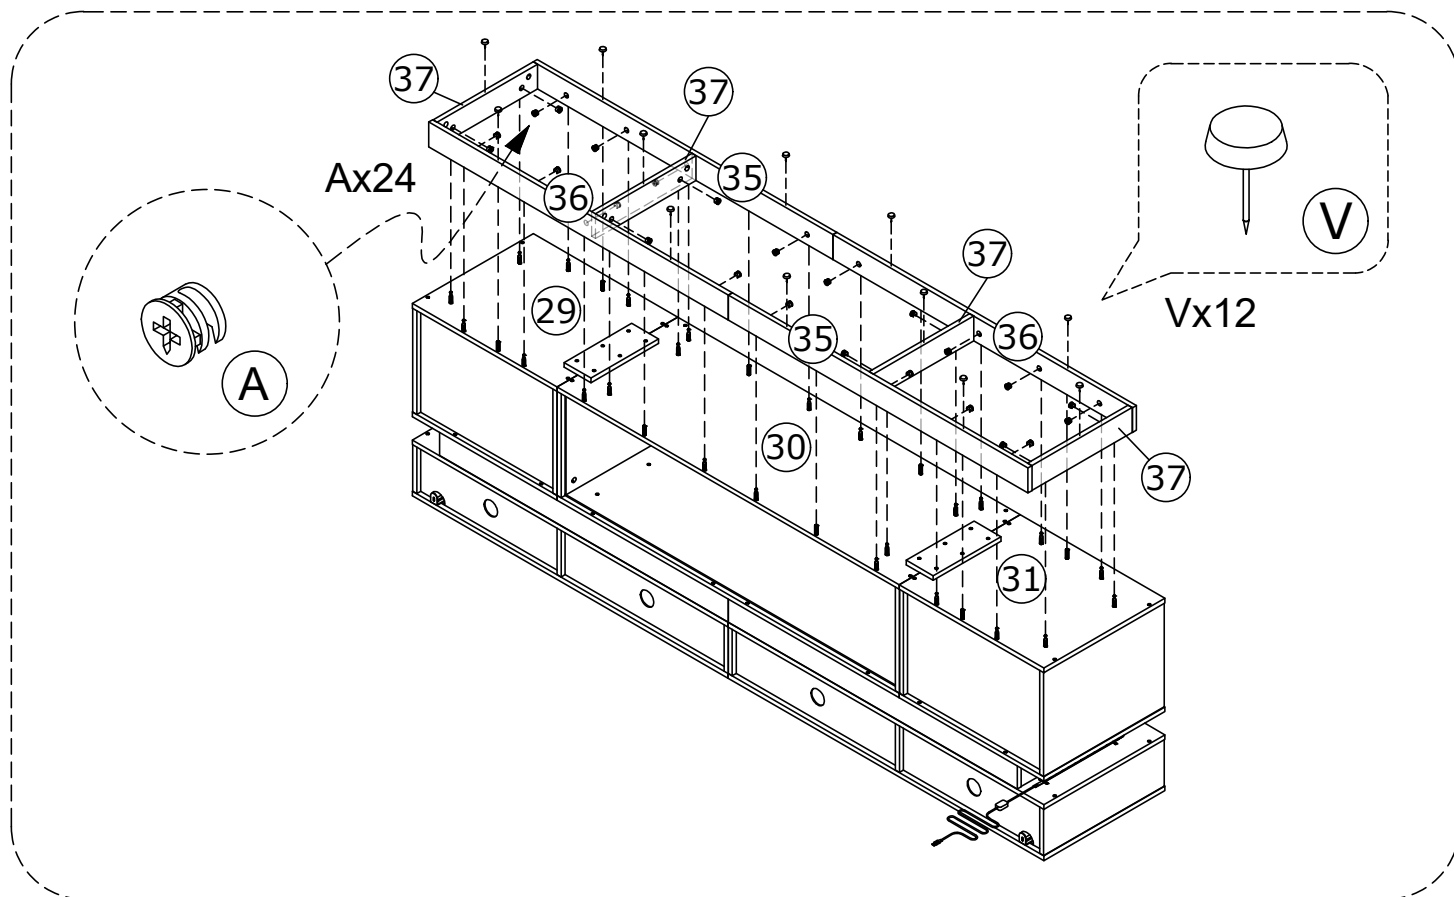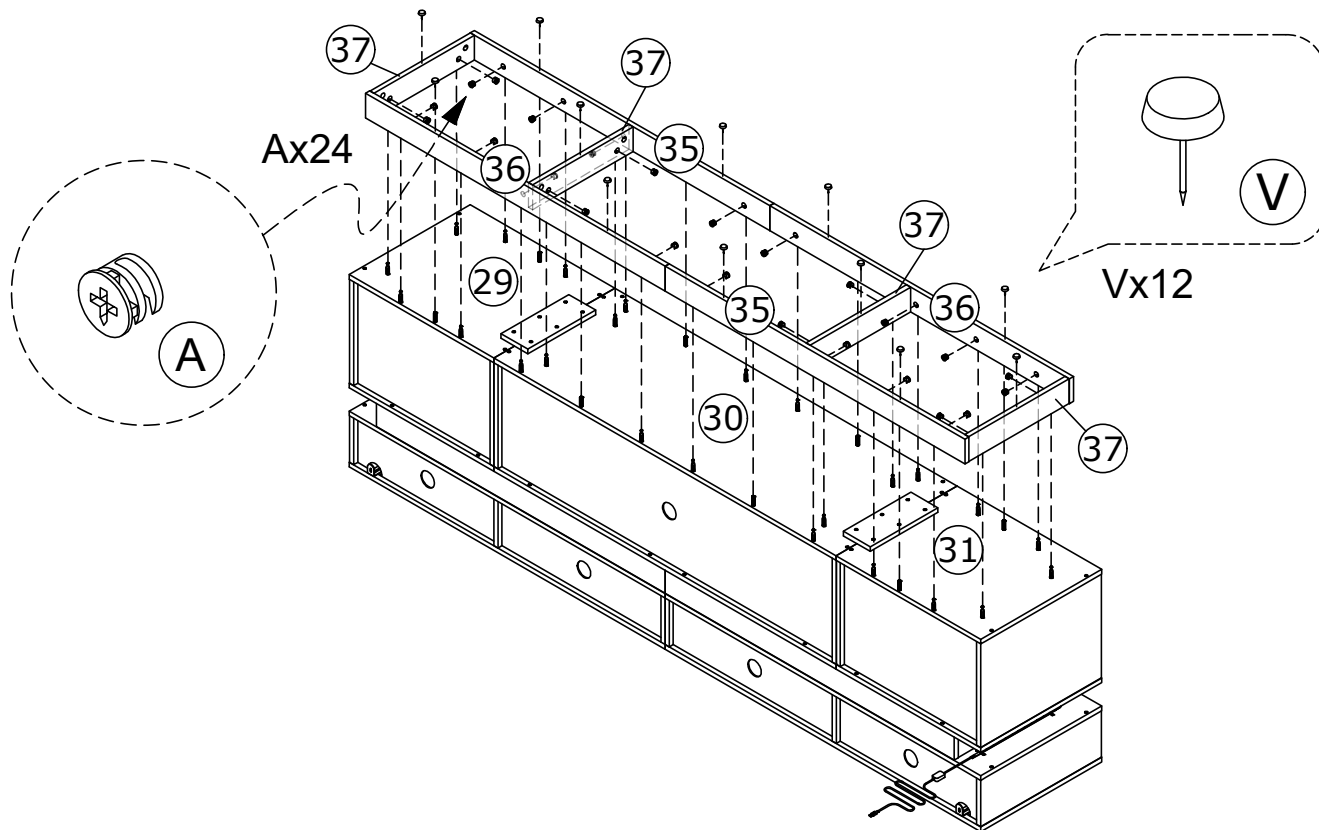


15



 To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

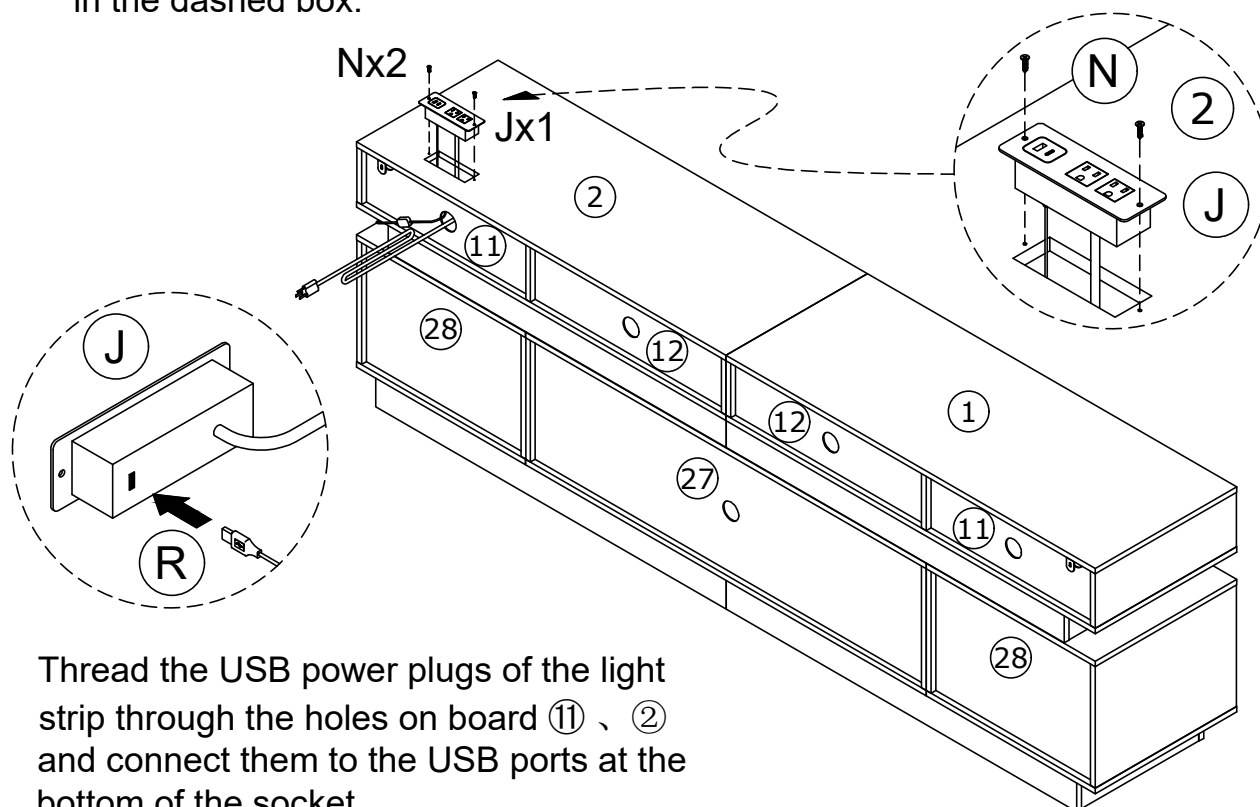

 Thread the USB power plugs of the light strip through the holes on board ⑪、⑫ and connect them to the USB ports at the bottom of the socket.

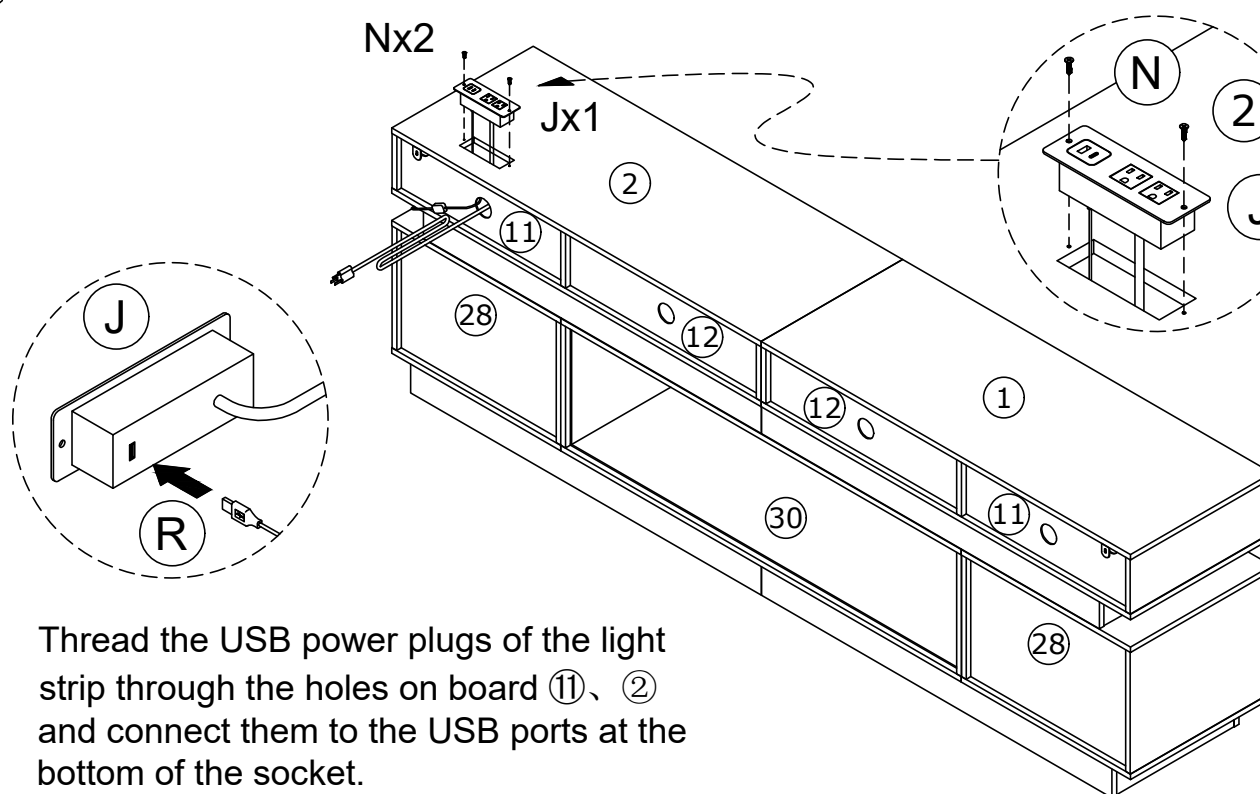

Thread the USB power plugs of the light strip through the holes on board ⑪、⑫ and connect them to the USB ports at the bottom of the socket.

16

 
K x 26



K-1




K-2

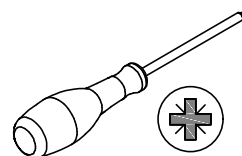


To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

 Note: If the hardware K is not installed, it will cause the product shake not firm. Be sure to install back plate buckles as required

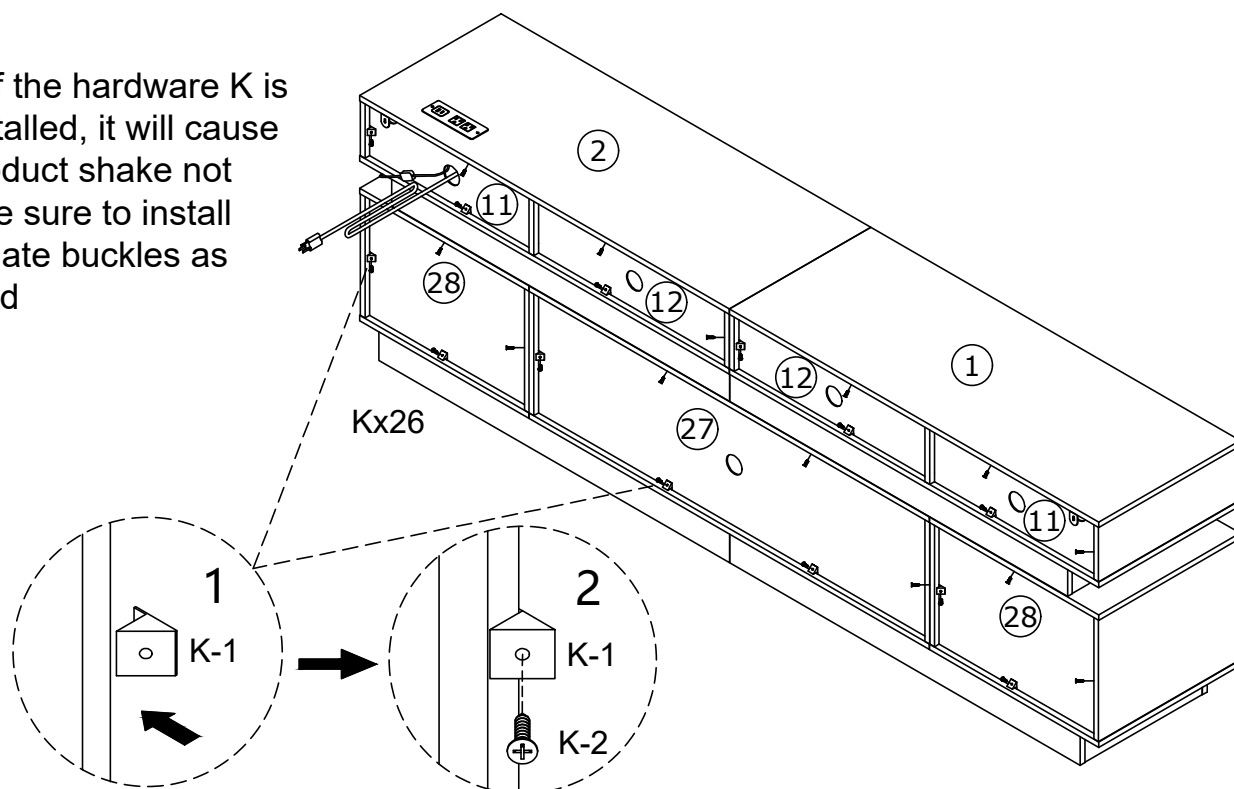


 Note: If the hardware K is not installed, it will cause the product shake not firm. Be sure to install back plate buckles as required


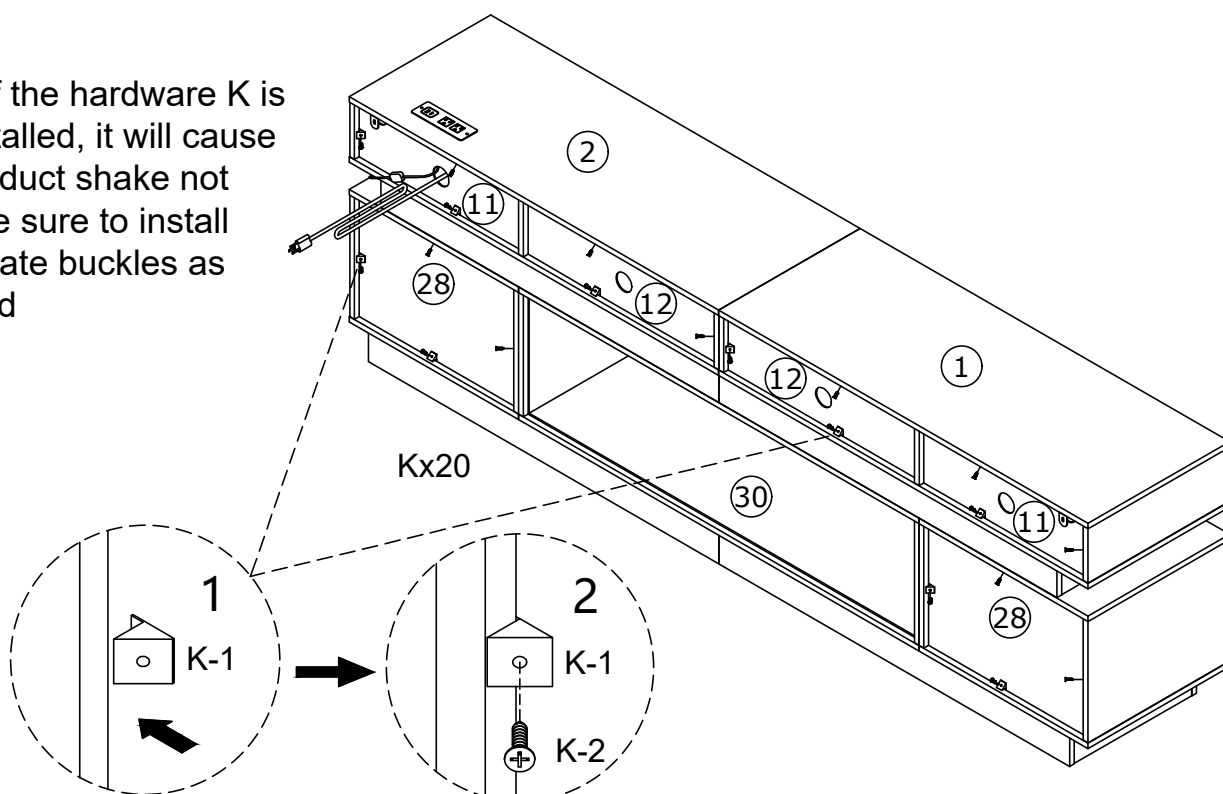


17

 S x 38

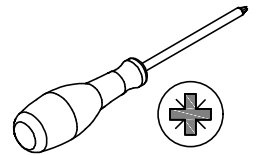

  
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

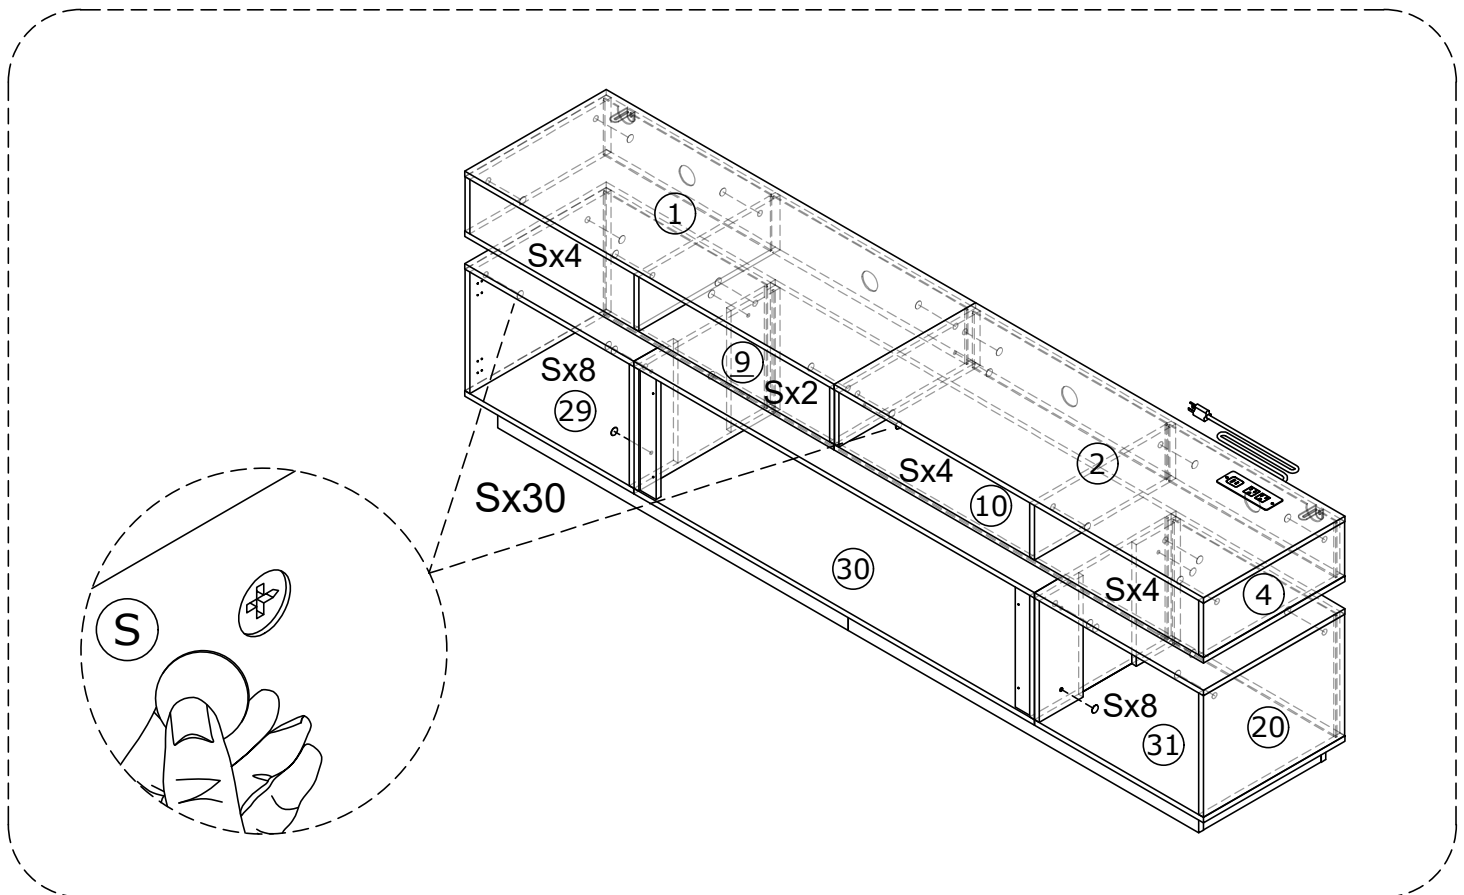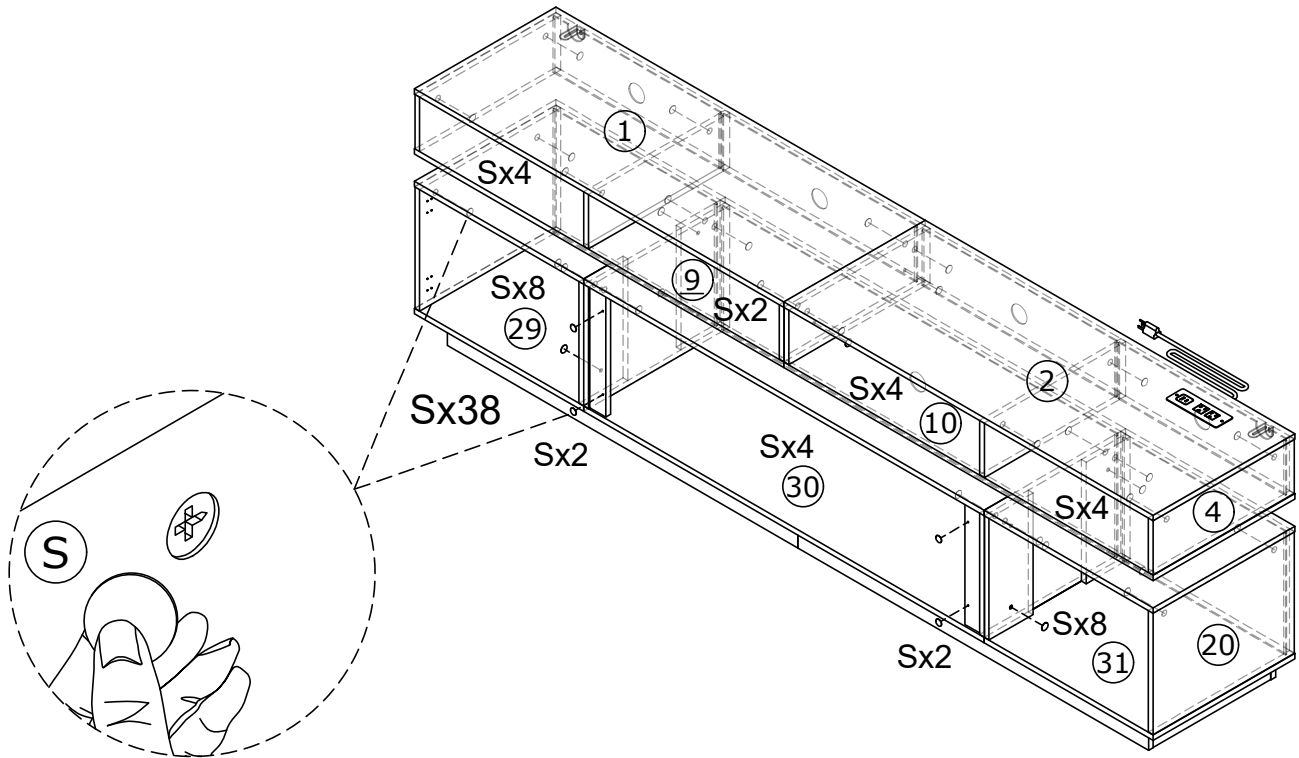

D x 24  Ø 3.5 x 14 mm	G x 4 				
---	---	--	--	--	--


Diagram 1 illustrates the assembly of the upper cabinet. Two panels (38) are shown being attached to the top of the cabinet frame (30). The panels are secured using screws (Dx4) and brackets (Gx2). A detailed inset shows the bracket (G) being secured with screws (D) to the panel (38).

 19

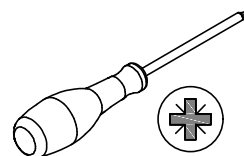

To assemble a cabinet without a fireplace, please skip this step.

 
Unscrew the four silver screws on both sides of the fireplace, lift up the glass panel to remove it, and place it on a soft and clean object.

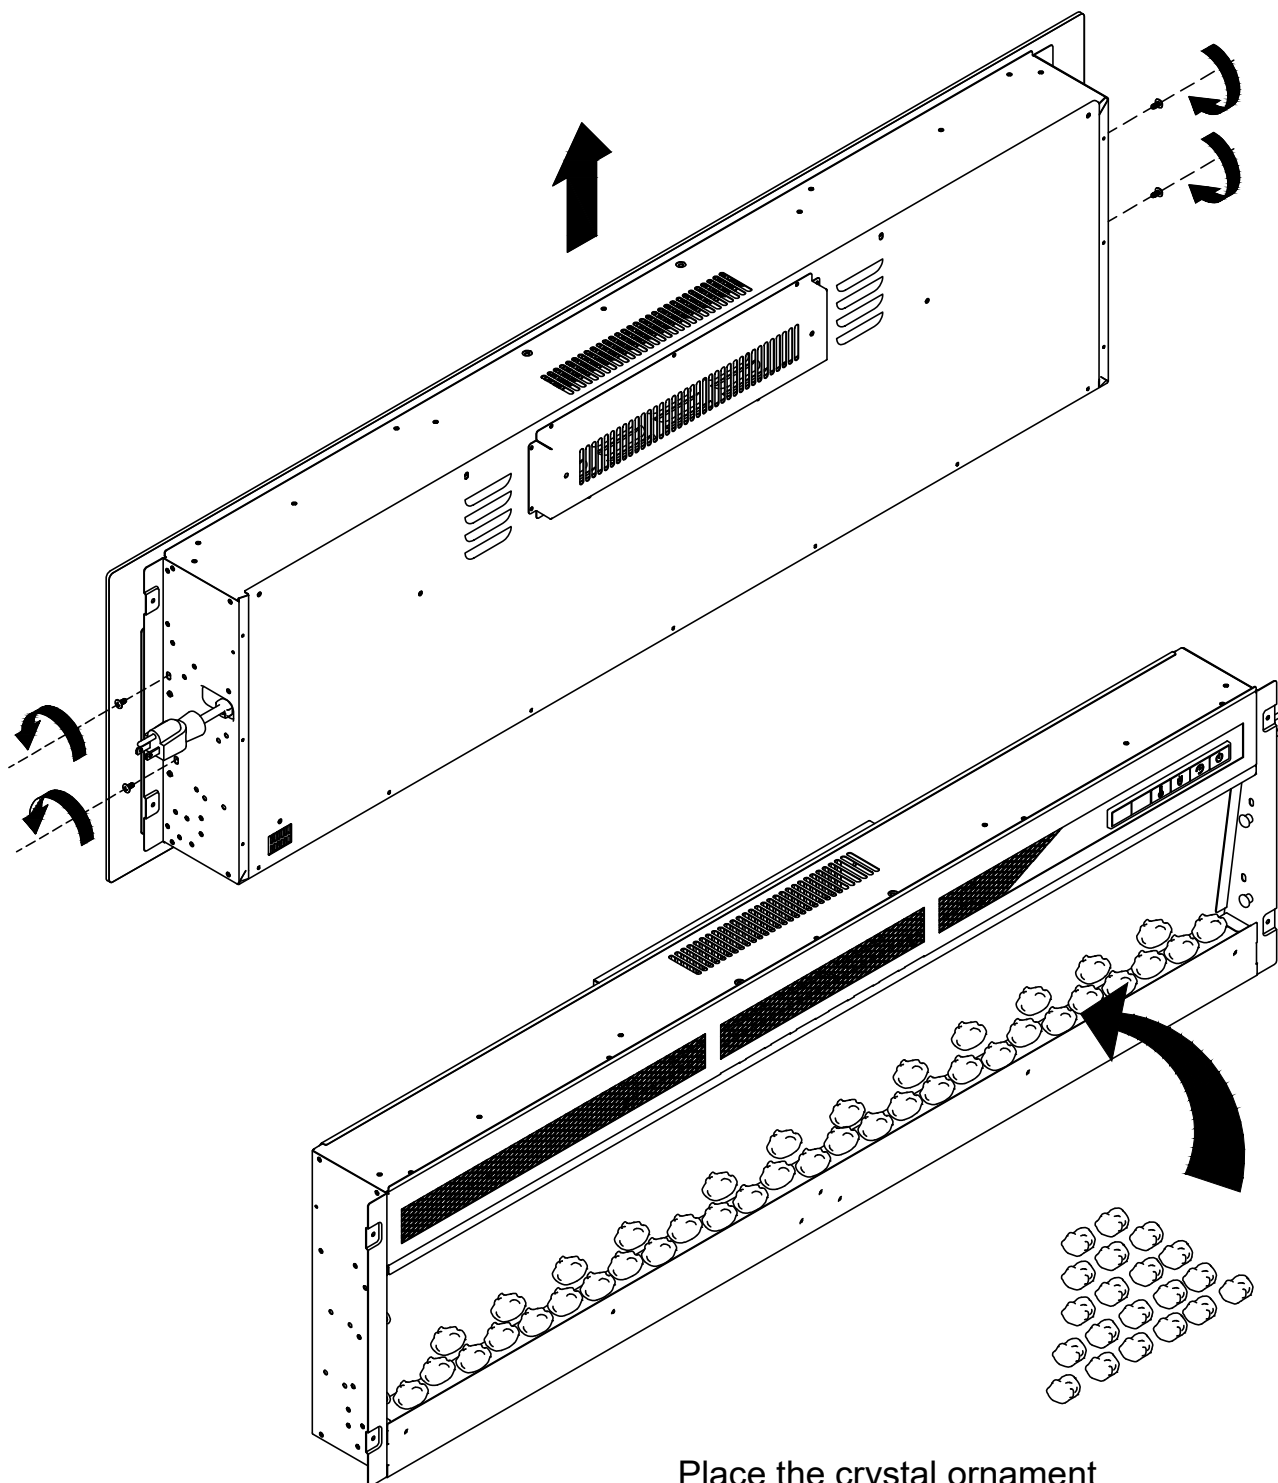


Place the crystal ornament
in the fireplace.

20

 
D x 4



Ø 3.5 x 14 mm

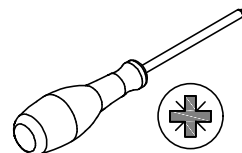 

 
To assemble a cabinet without a fireplace, please skip this step.




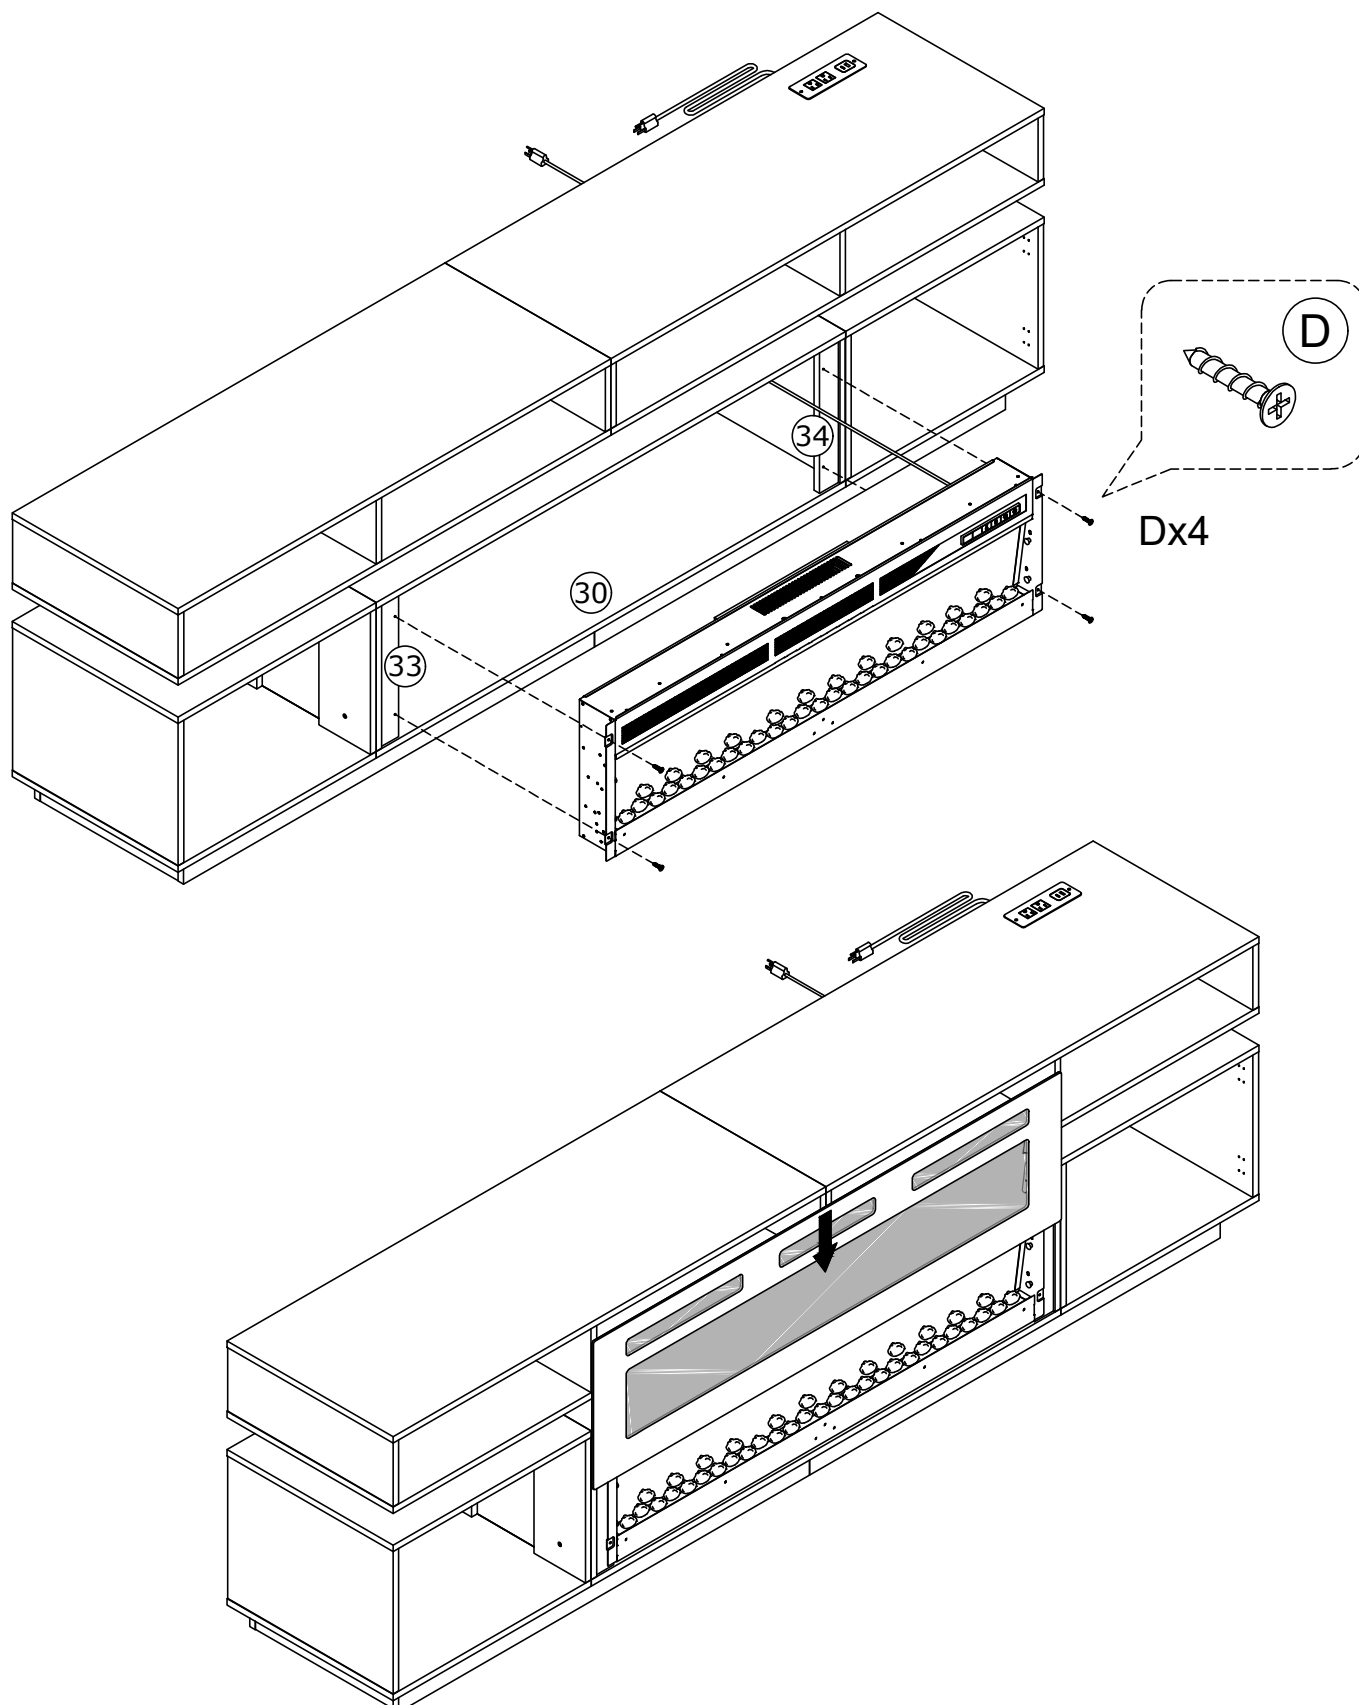


21



    
 
To assemble a cabinet without a fireplace, please skip this step.

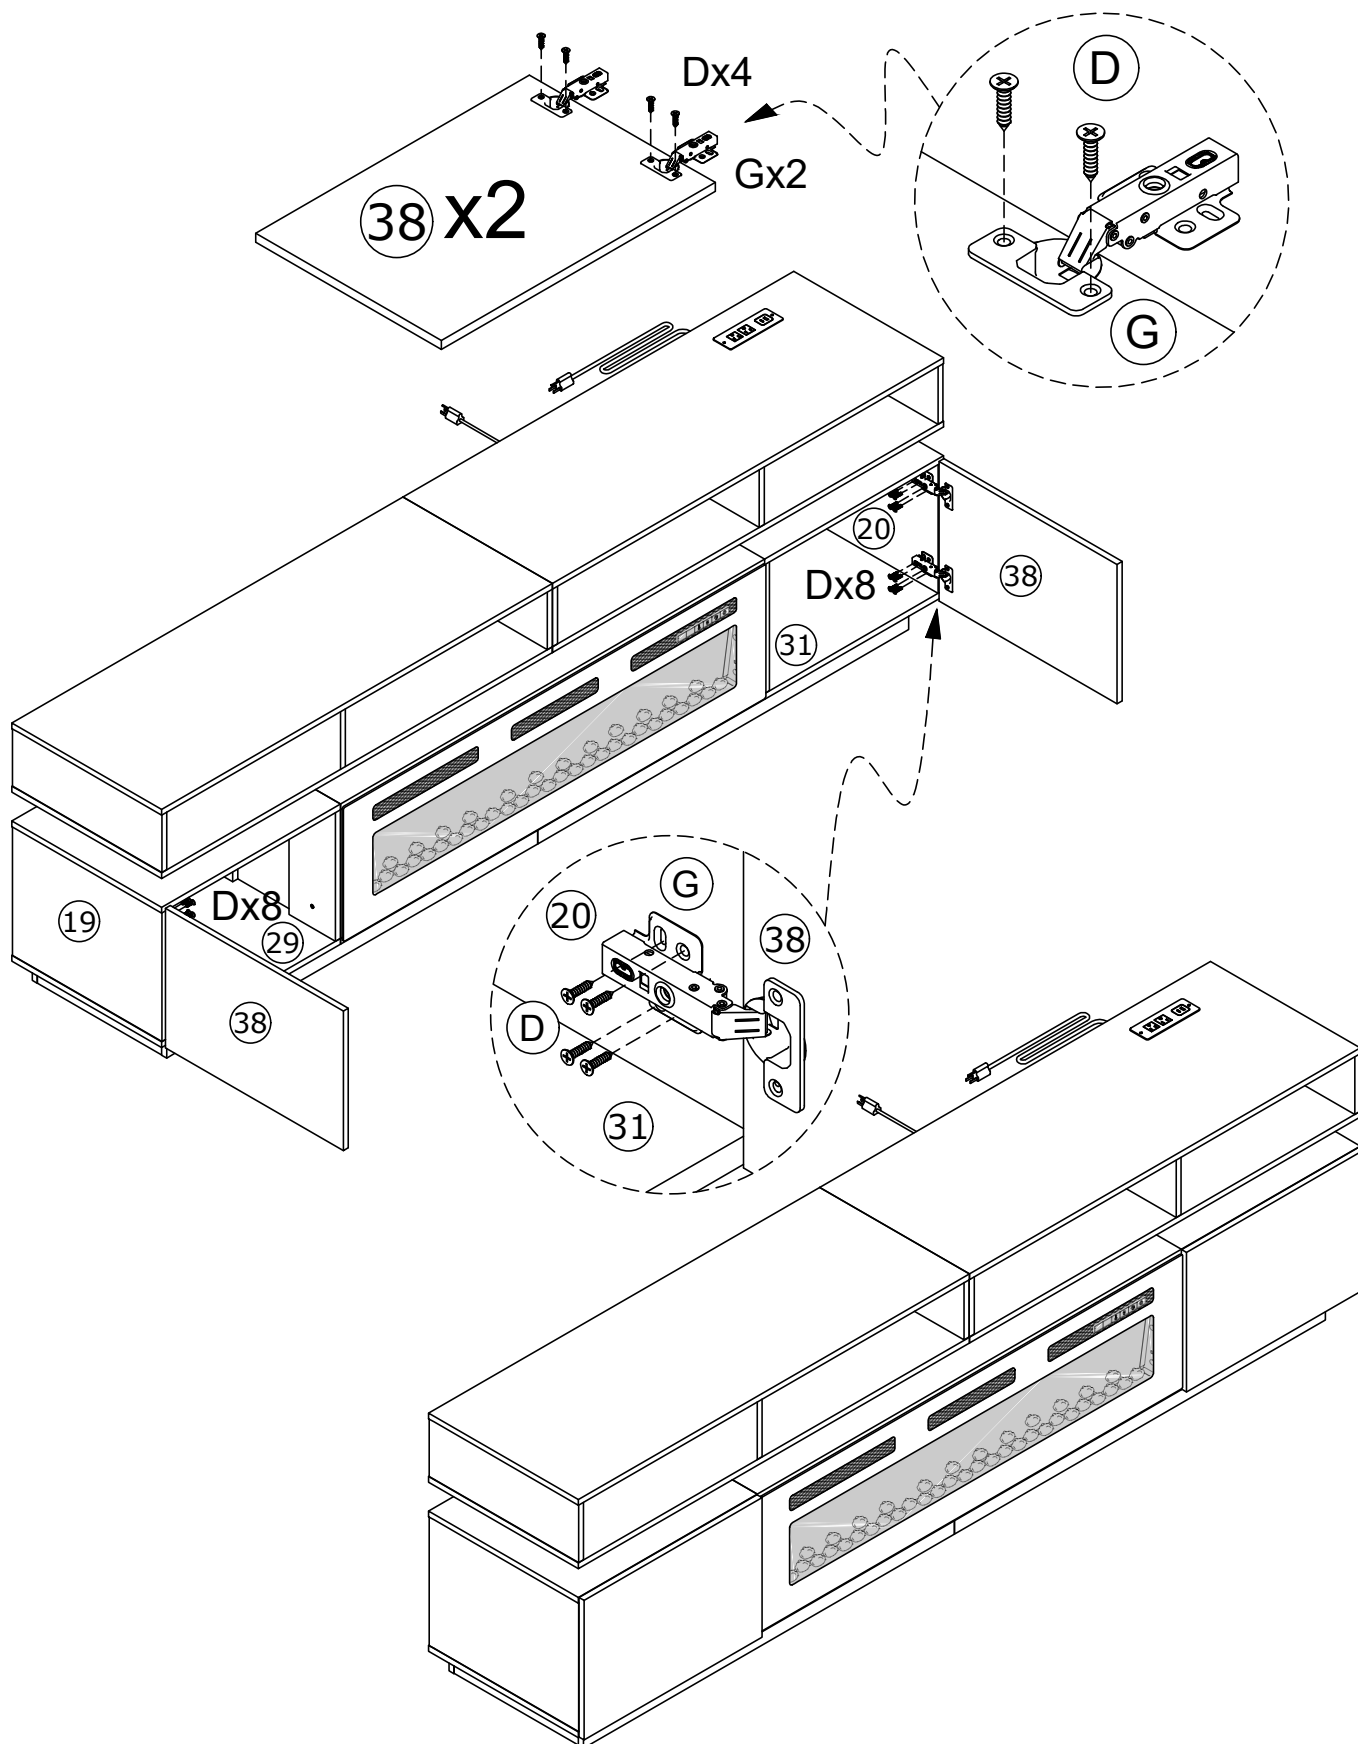

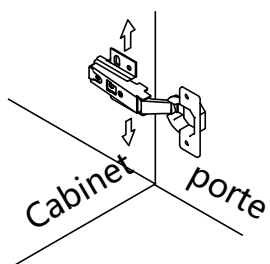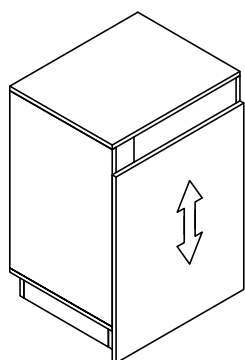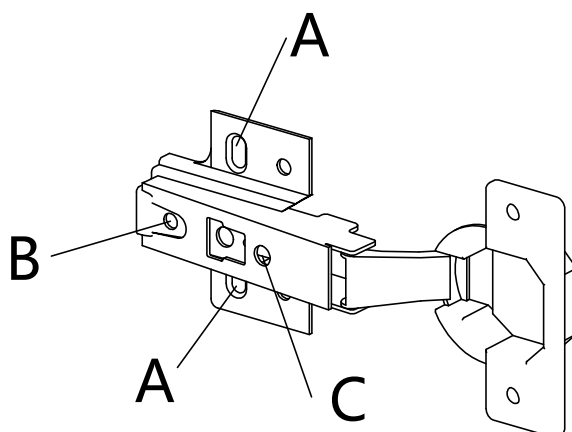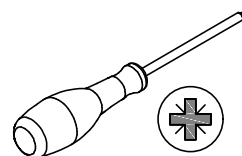



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

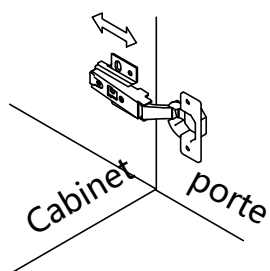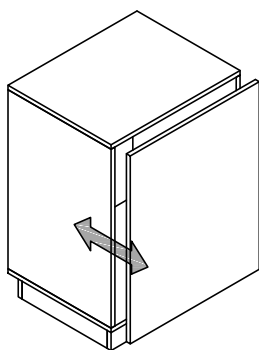

To adjust depth.

 
 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

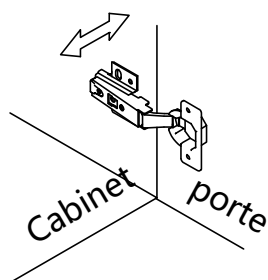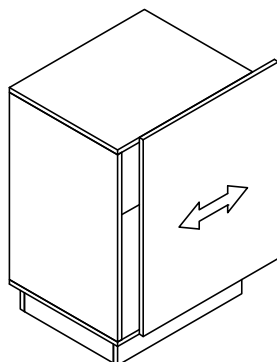

To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

  
23

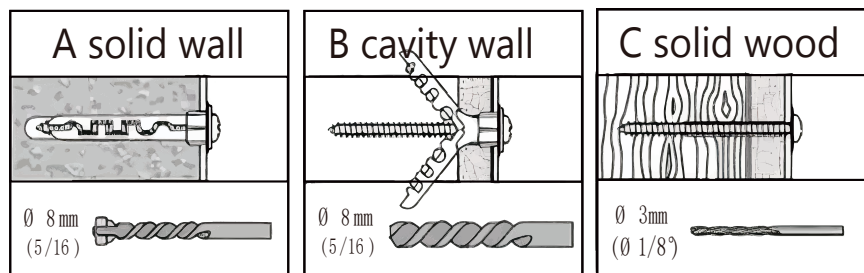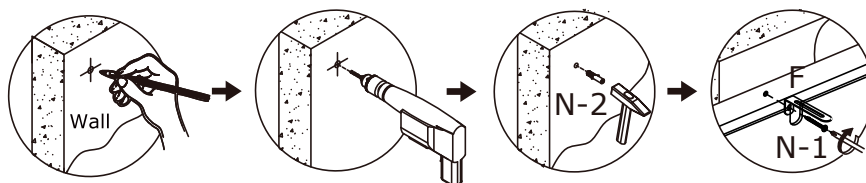


⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

  1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

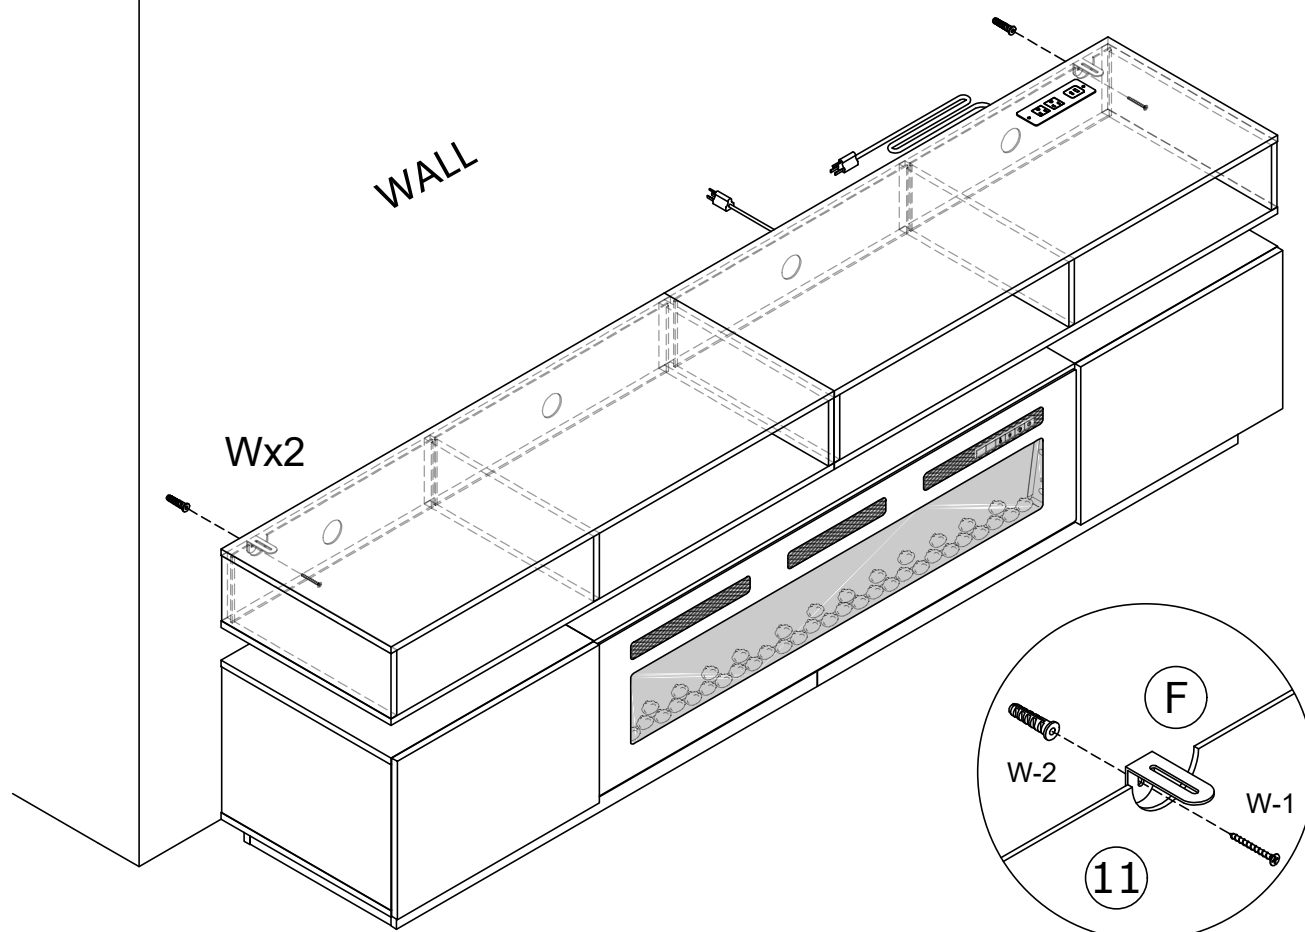

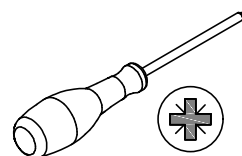

 
-LED lamp with effective remote control distance of 5 meters

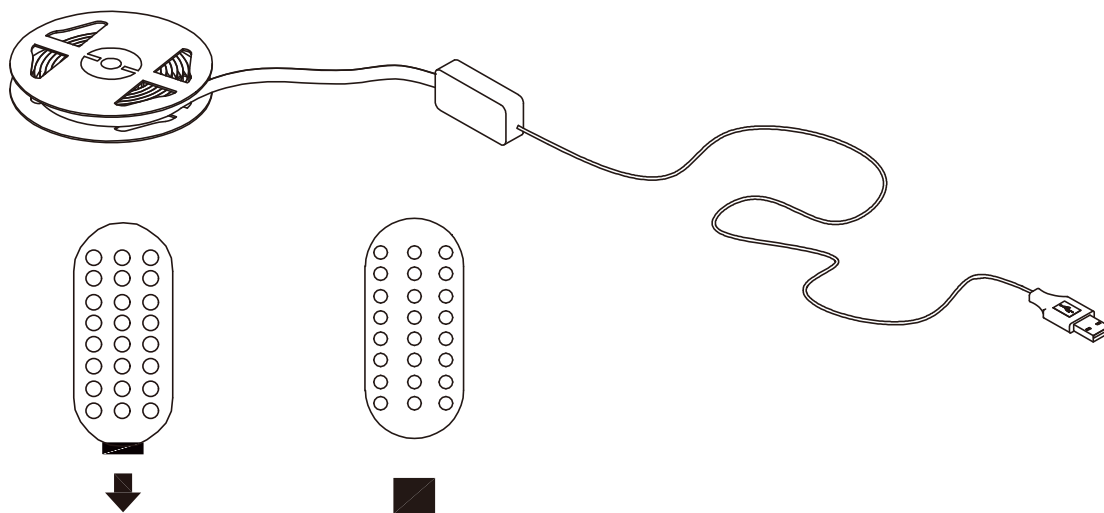


1. Take out the remote control gasket

Remote control mode

	In any state press these two keys to turn on/off the light strip.
	When light is on, press these two keys to reduce-or increase+brightness there are 10 brightness levels for adiustment.
	Press relevant keys to select particular colors
	Press this key to switch static colors There are 16 kinds for chosen.

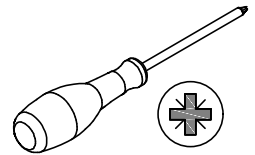 

APP PROGRAM USAGE

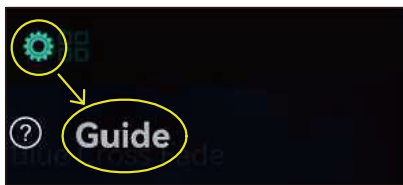 

Notes:
detailed operating instructions,
enter the menu "Guide":

Product Parameters:

- Bluetooth: BLEV4.2
- Input Voltage: 4.5~26V
- Working Temp: -25~75°C
- Size: 43*22*11mm
- Weight: 30g
- Max Power: 144W(24V)

Scan two-dimensional code download APP

- ① Connect LED color strip and controller, power on controller
- ② Scan two-dimensional code download APP:



- ③ Start APP, search and connect controller
- ④ Enjoy the Bluetooth wireless control experience

LED mobile phone Bluetooth

controller Product Features

- LED Bluetooth controller is directly via mobile phone control remote distance can reach 20m without the need to set up, easy to connect open the software within 5 seconds you can automatically connect the controller
 - Flow the rhythm of the music changes
 - Group control
 - Brightness, speed addition and subtraction
 - Maximum can be 10 meters RGB(W) strip
 - The software shows that the text is based on the language of the mobile phone set up automatic transformation of Chinese and English
- ### Animation Effect:
- Colorful gradient
 - All kinds of monochrome, double color gradient
 - All kinds of monochrome, double color, colorful flashing
 - Colorful jump
 - Follow the rhythm of the music changes