 
 


TV Table

DJ0797BK-180
DJ0797WT-180

 
 
-Using an electric drill can speed up installation, but it requires reducing the torque of the drill .

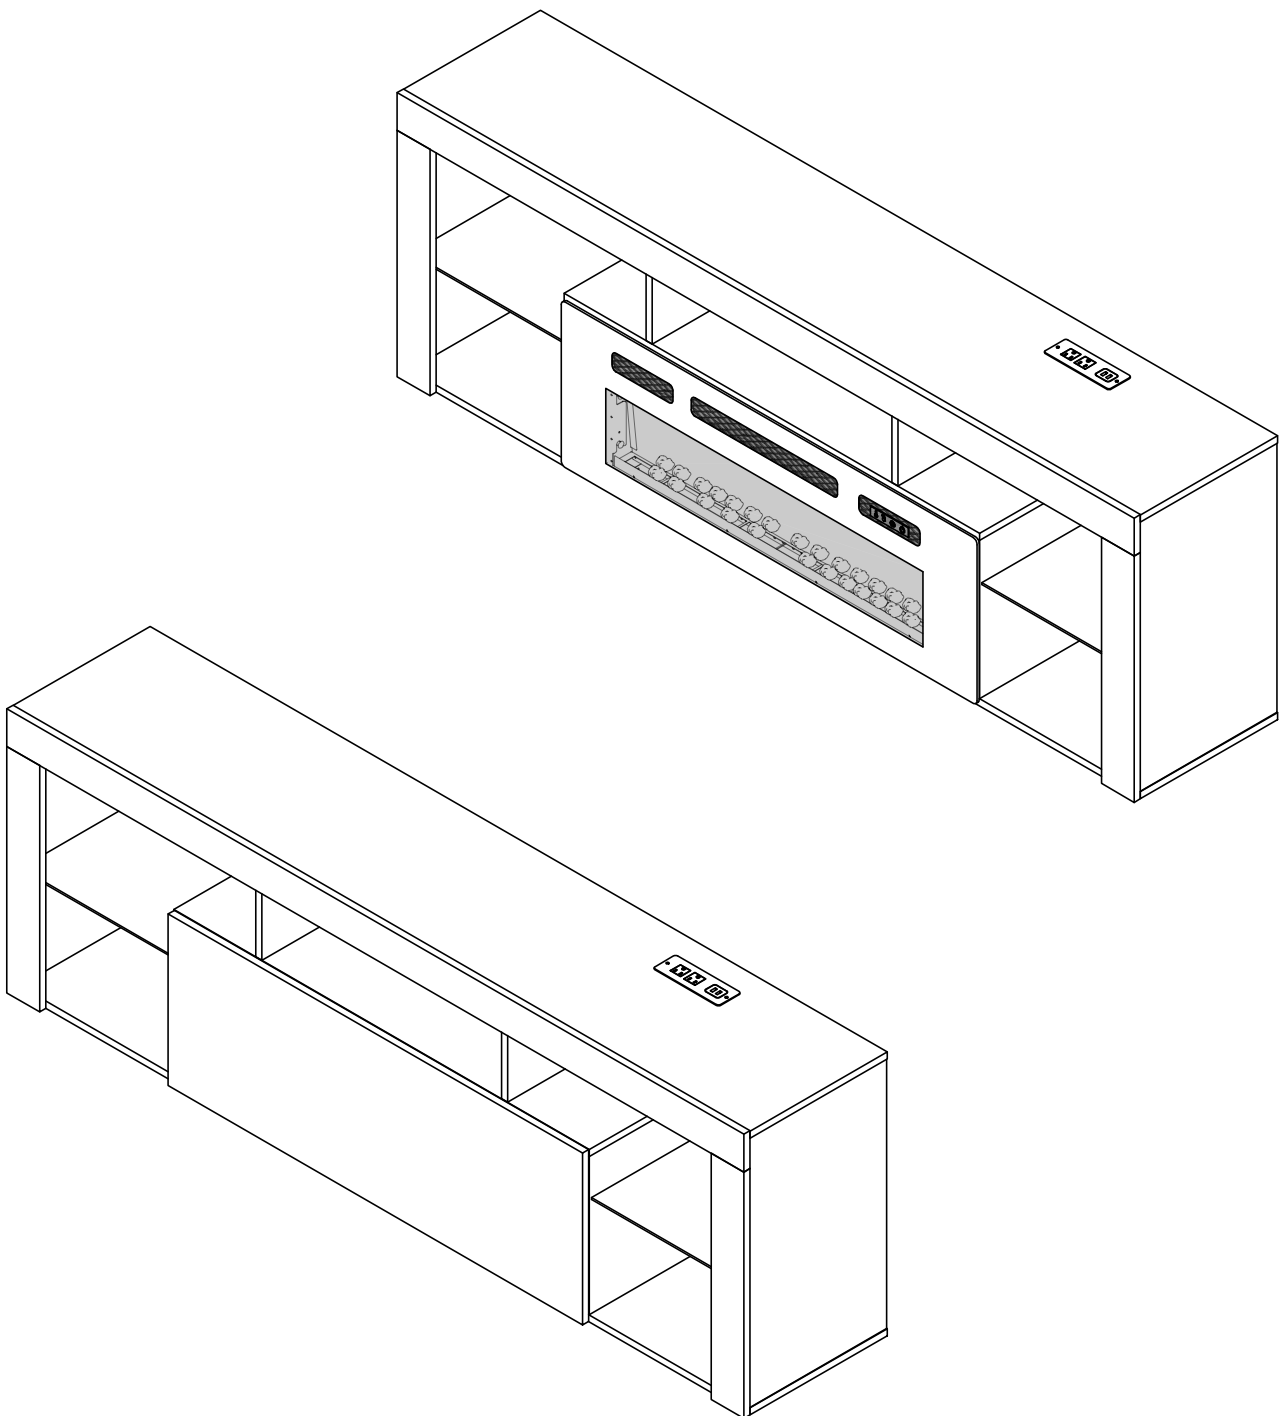

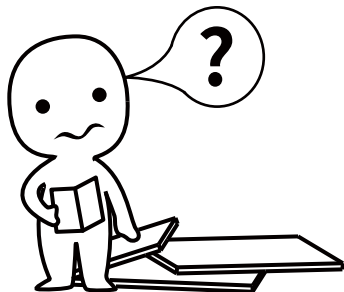


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

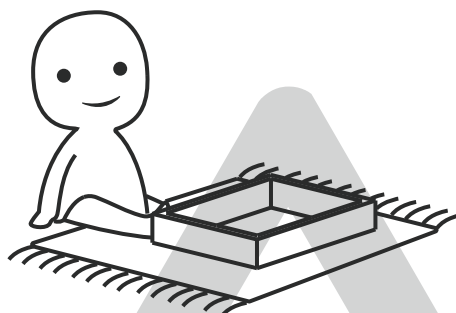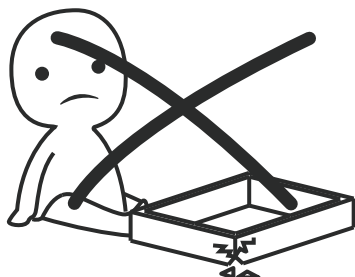



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

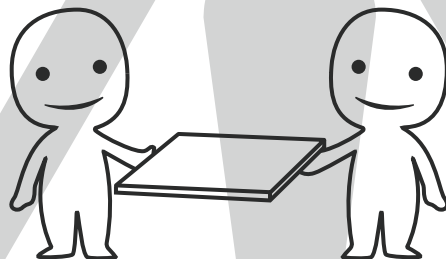

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

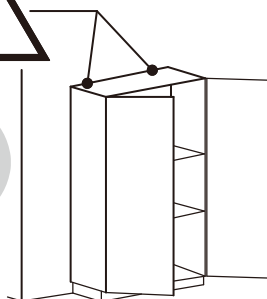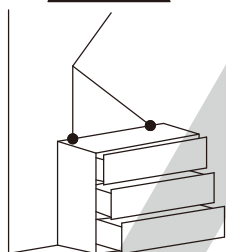

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

SAFETY TIPS:

 
Static charge may cause dust on foam - clean with a dry or damp cloth.

Small foam strands may be present - handle gently and dispose of properly.


Do not burn or incinerate. Check local recycling guidelines.

Peel off film before use


Board Identification

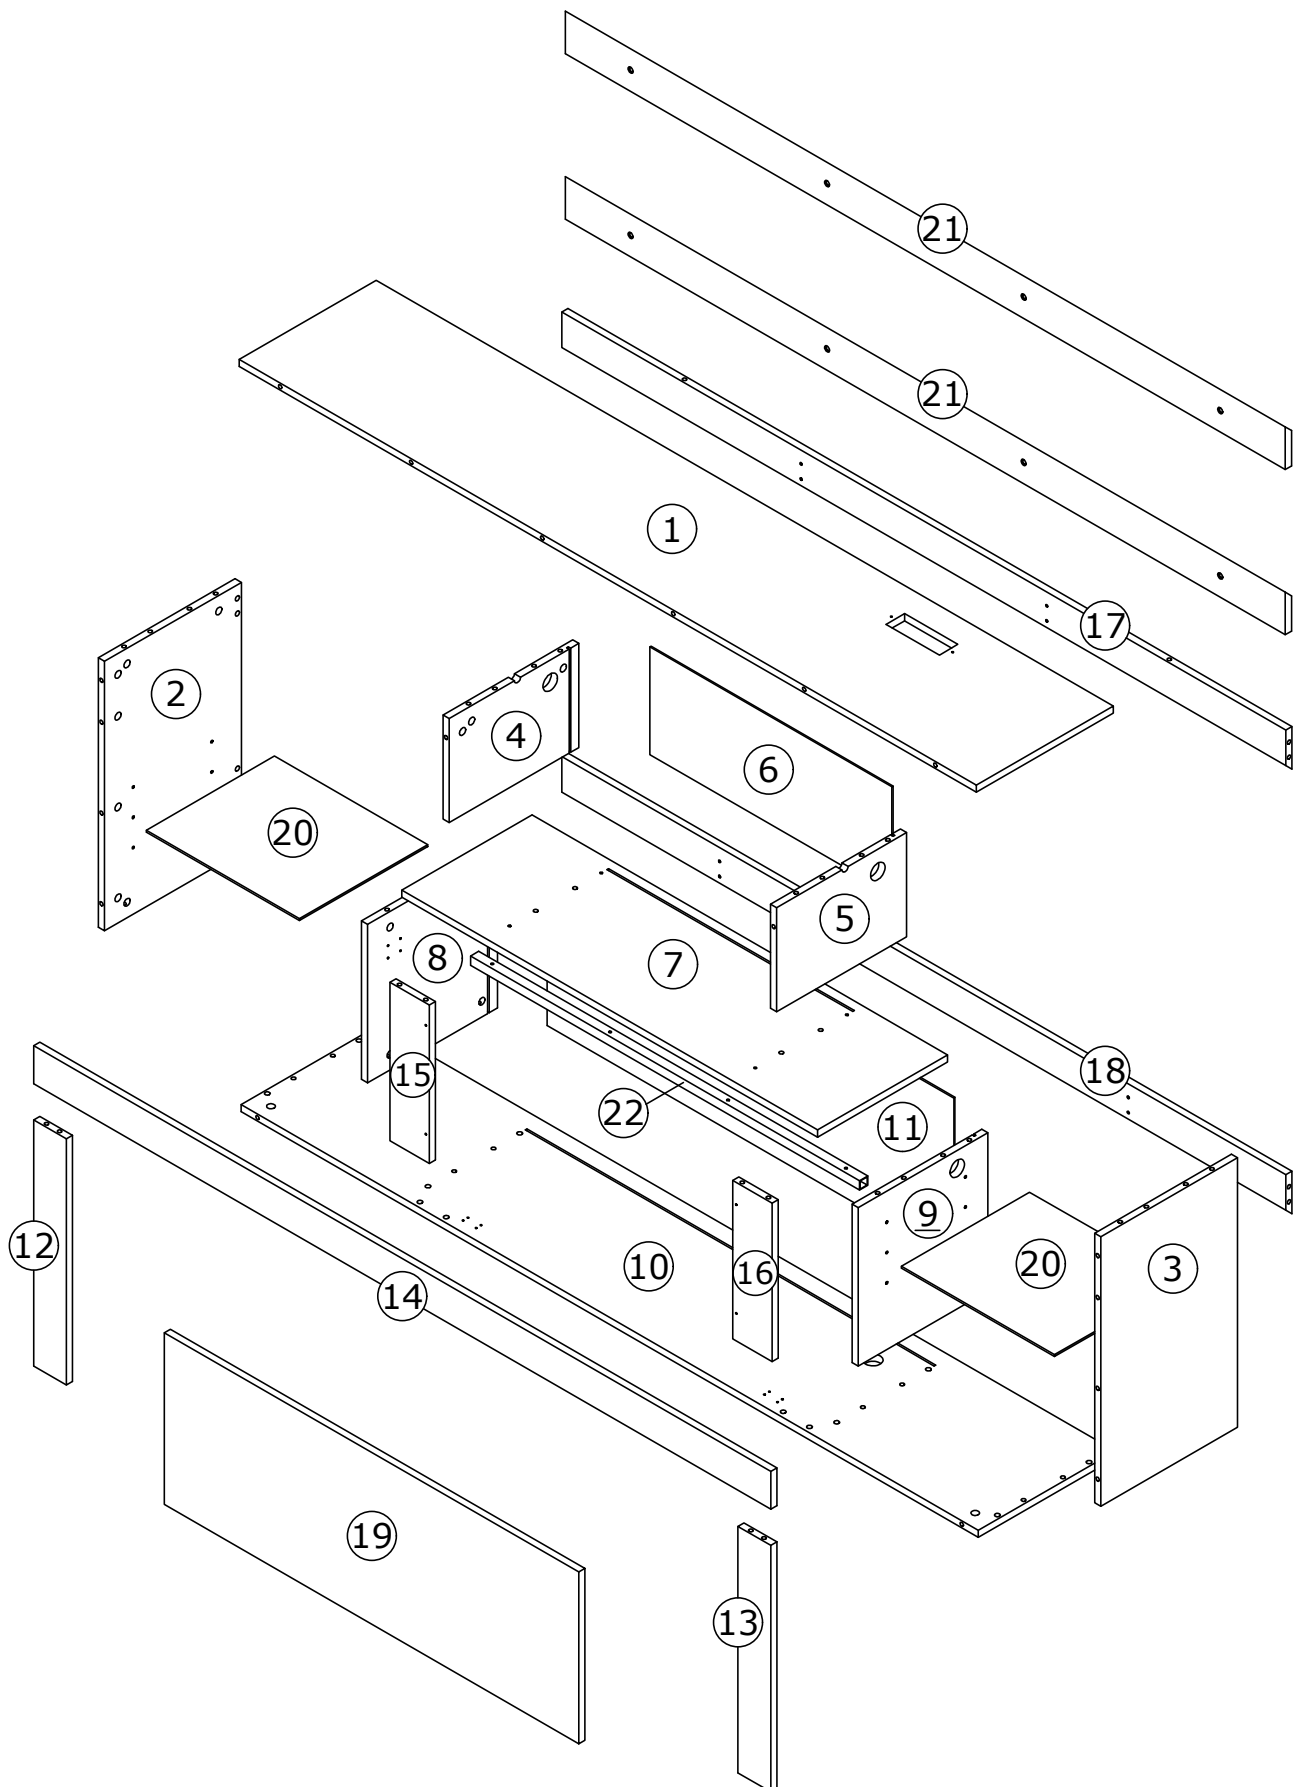


PARTS LIST

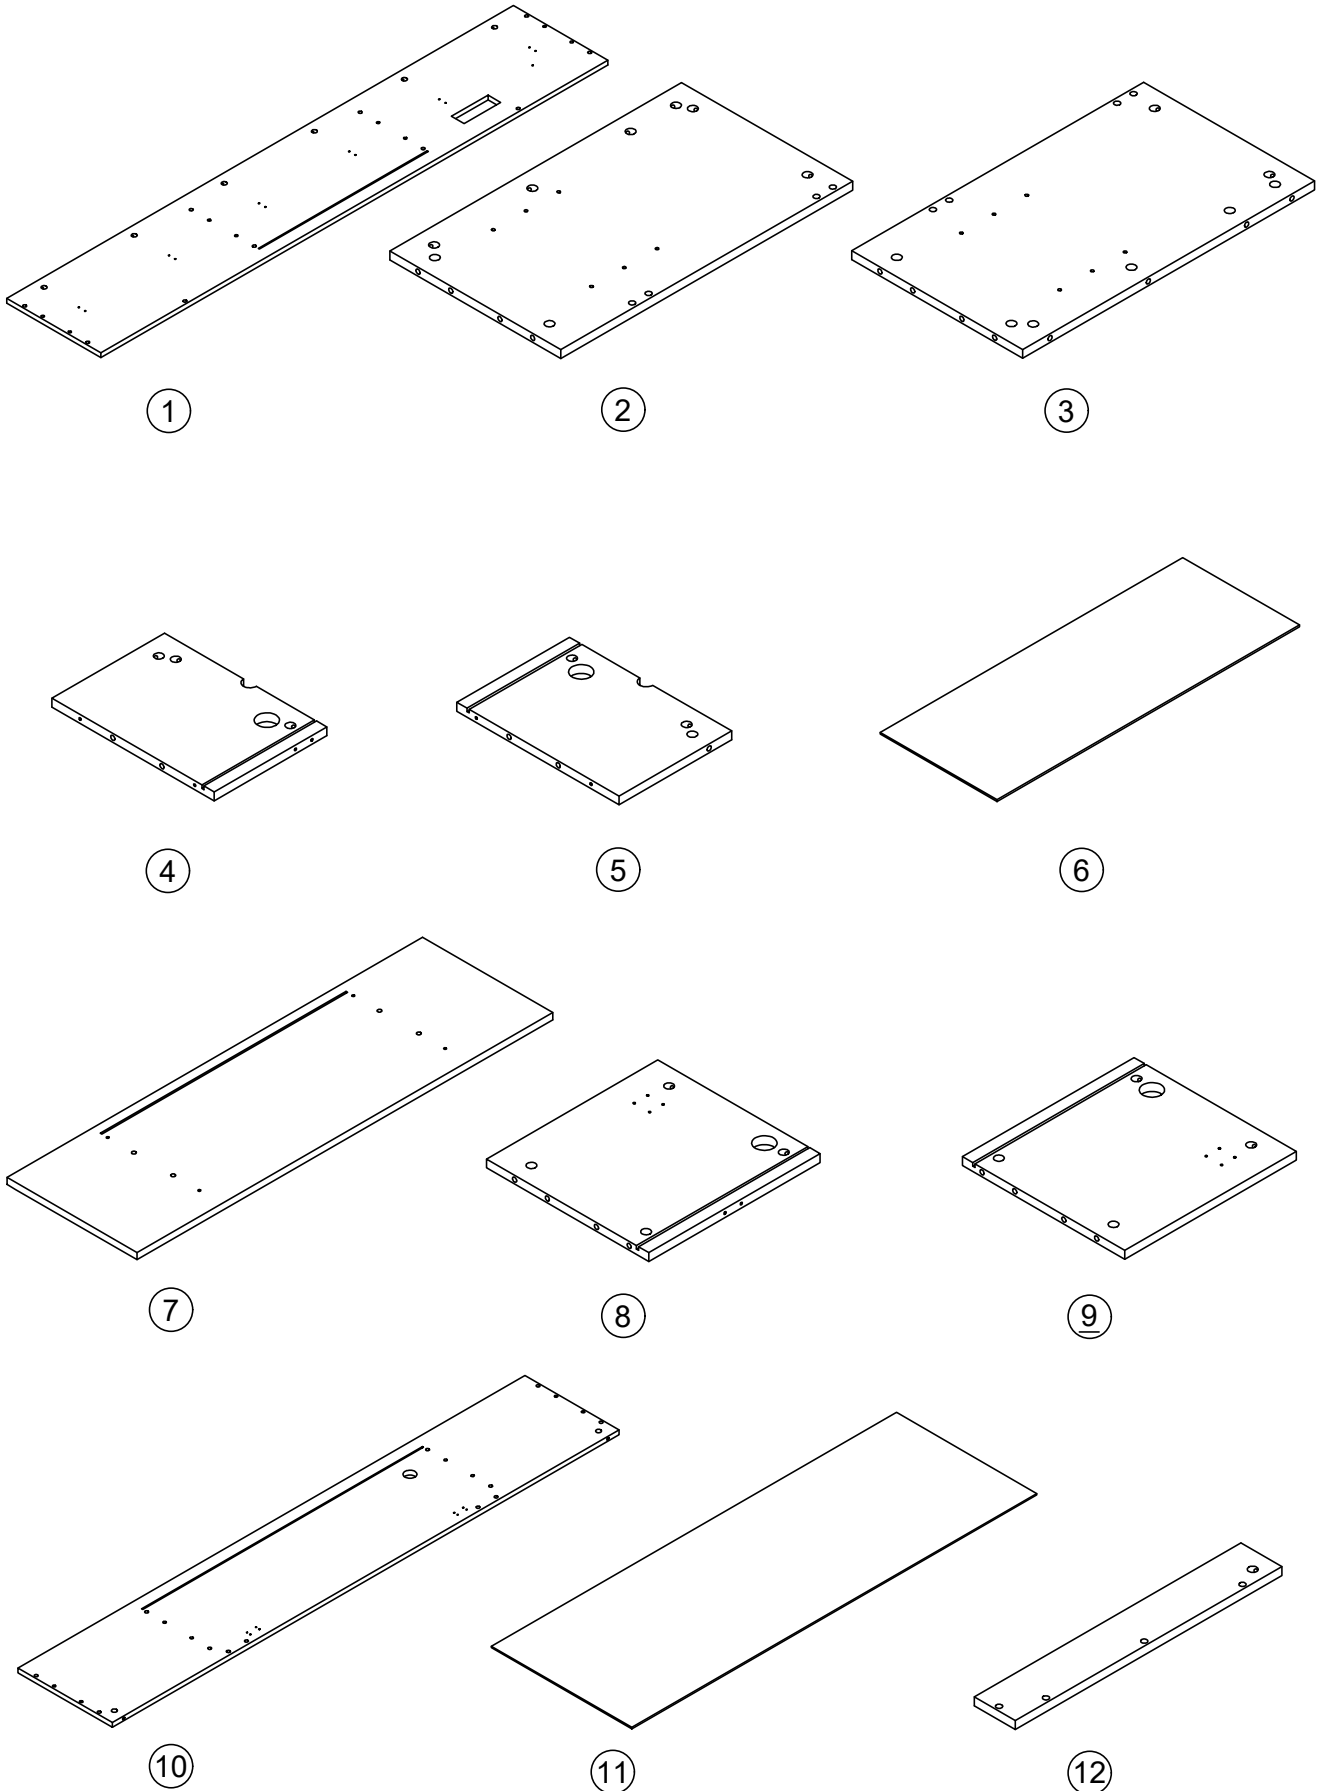 


PARTS LIST

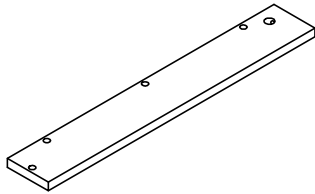 


⑬

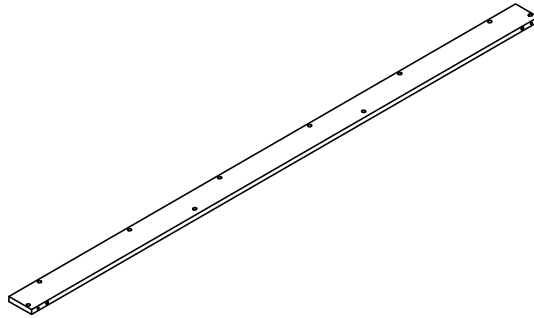 


⑭

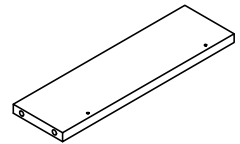 


⑮

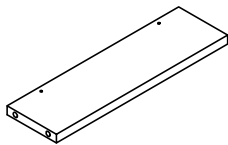 


⑯

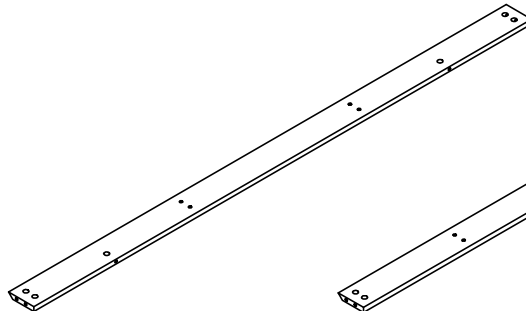 


⑰

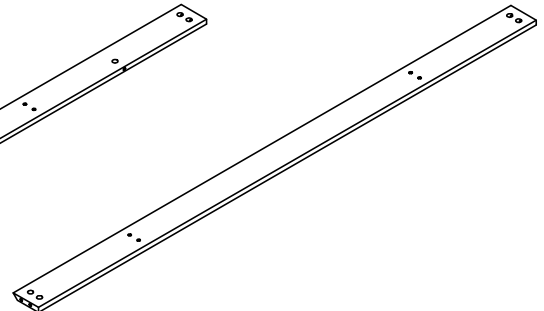 


⑱

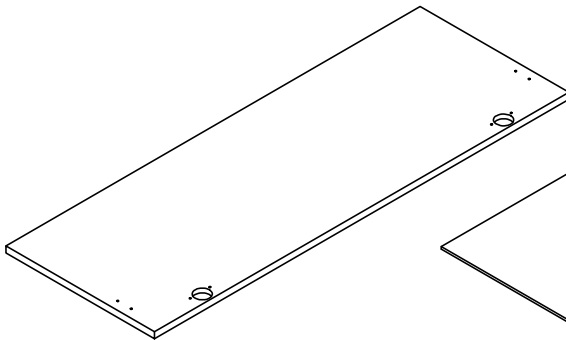 


⑲

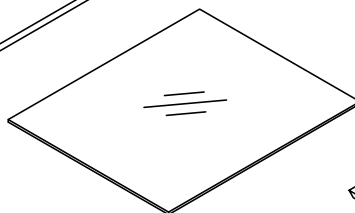 


⑳ X2

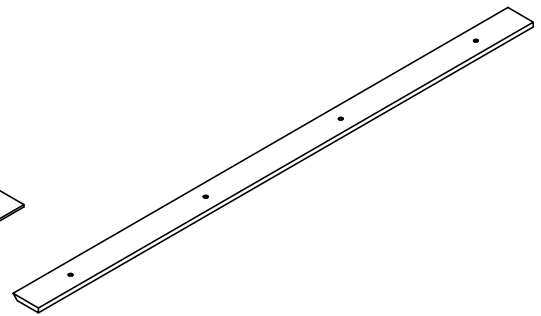 


㉑ X2

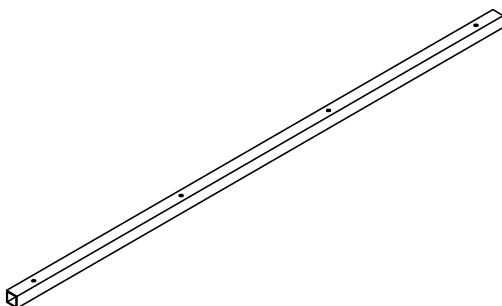 

㉒

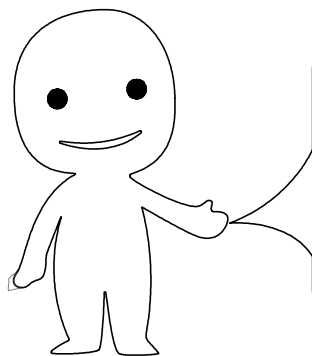 


Please prepare the following tools

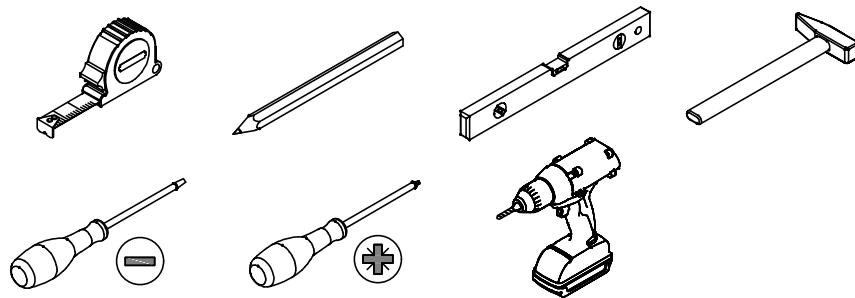 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 58




Ø 15 x 11.5 mm

 B x 56

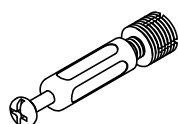


Ø 7 x 40 mm

 C x 26

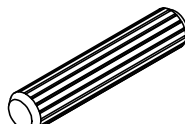


Ø 8 x 40 mm

 D x 30

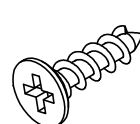


Ø 3.5 x 14 mm

 E x 12

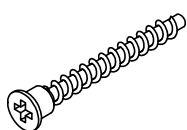

Ø 5 x 40 mm

 F x 1

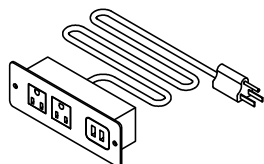


G x 3




Ø 3.5 x 14 mm

 
H x 2

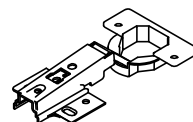

J x 2

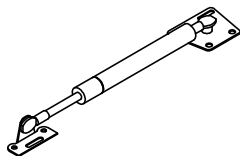 


K x 8

 

K-1

K-2

 L x 2

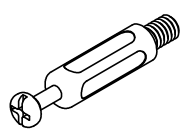

Ø 7 x 40 mm

 
M x 1




N x 36



P x 1

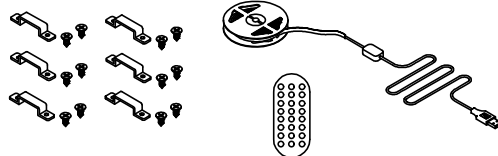


Q x 8

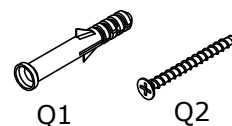 


Q1

Q2

 R x 8



S x 4

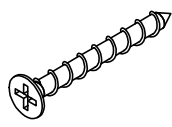 


Ø 4 x 32 mm

+2


SPARE BAG

1

 F x 1



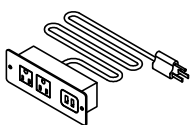


G x 2

 








Ø3.5 x 14 mm

   P x 1

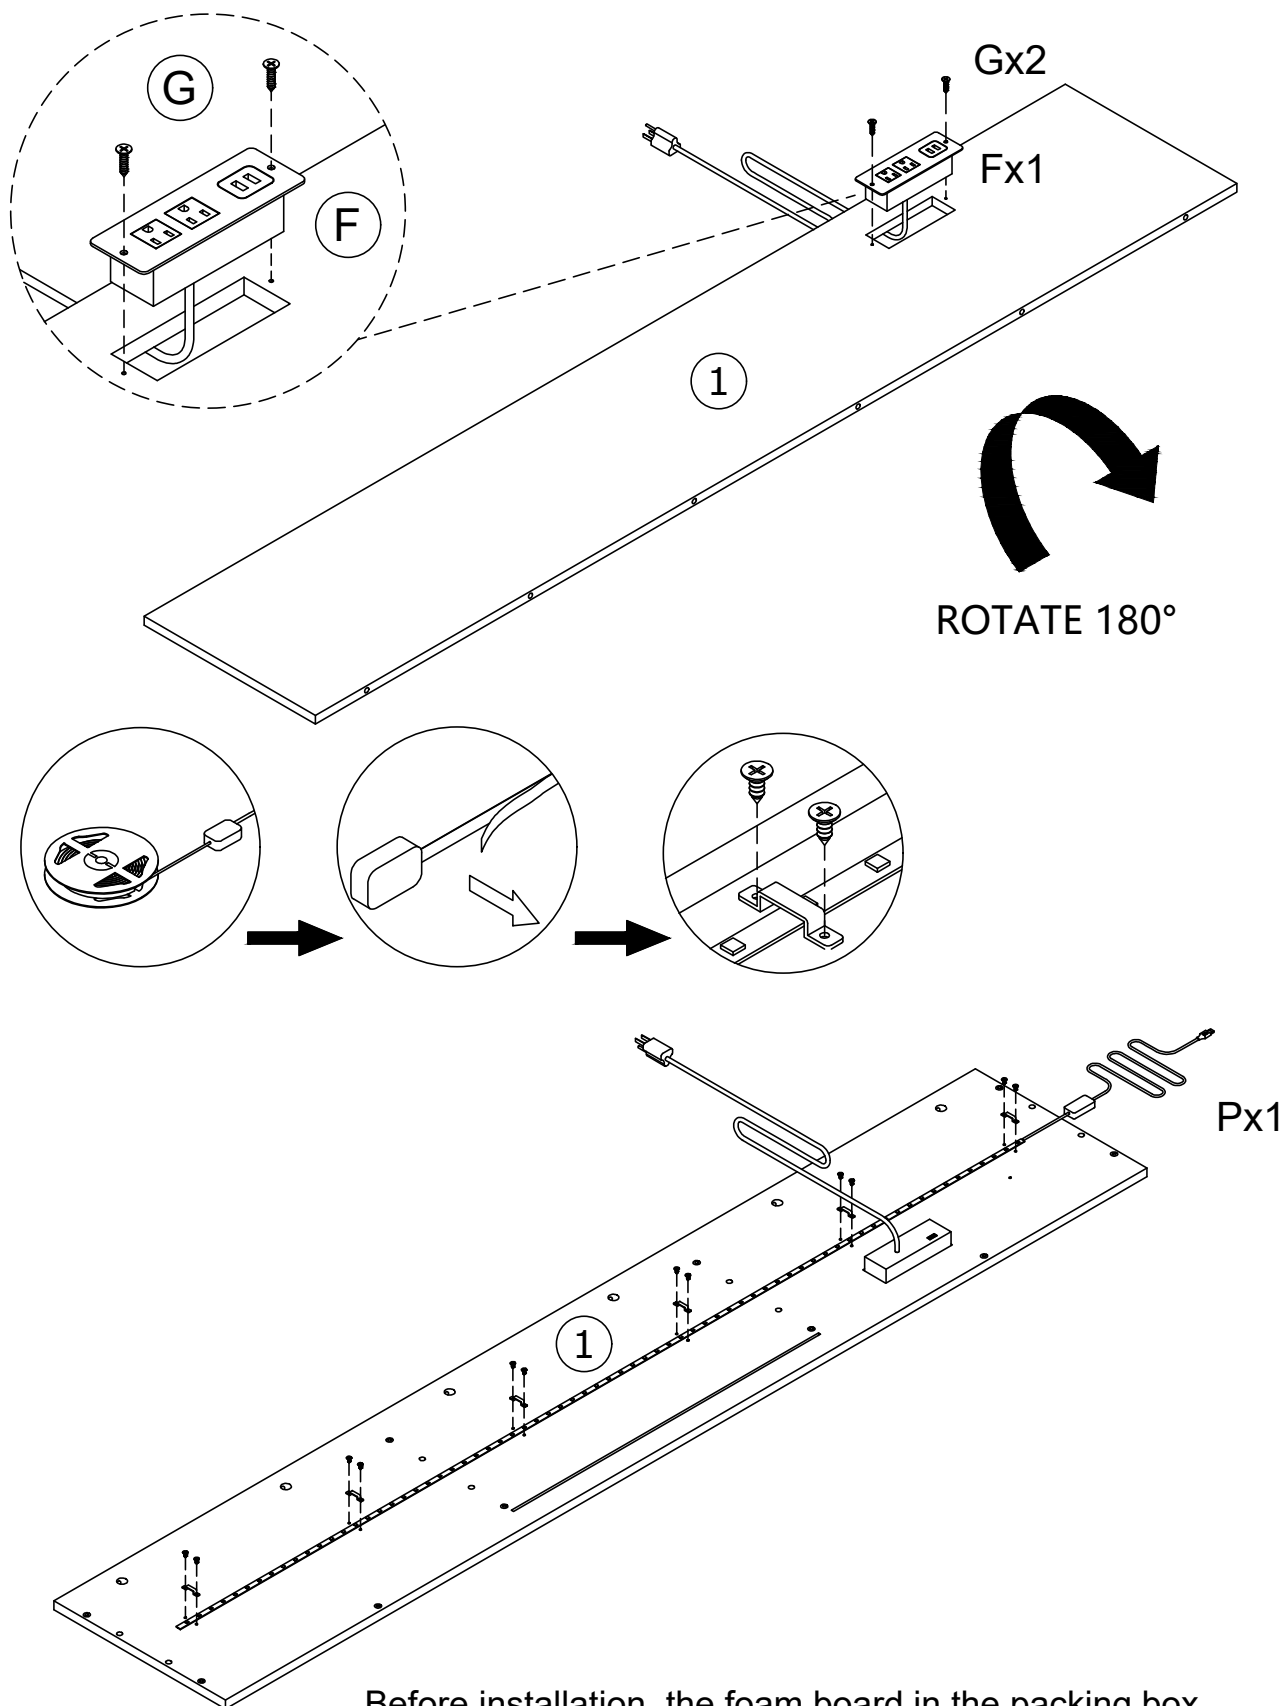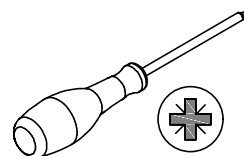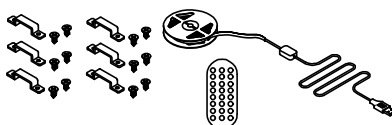

Before installation, the foam board in the packing box can be placed under the ① board to prevent scratches.


A x 4	B x 4	C x 4	G x 1	M x 1	
					
Ø 15 x 11.5mm	Ø 7 x 40 mm	Ø 8 x 40 mm	Ø 3.5 x 14 mm		

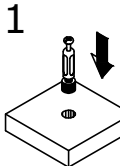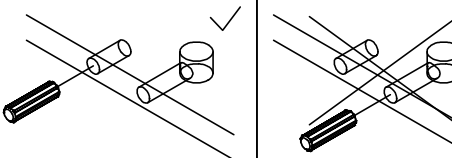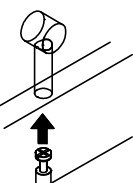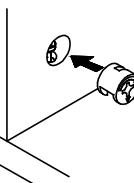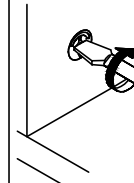       	1 	2 	3 
			
			




3

 C x 4



Ø 8 x 40 mm

 E x 4






Ø 5 x 40 mm

S x 4



   Ø 4 x 32 mm

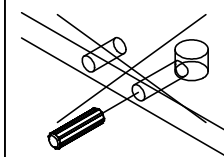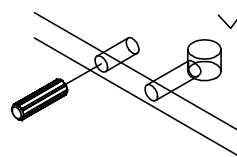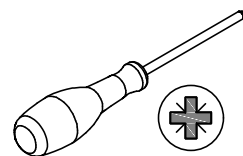

C




Cx4

4

5

6

 1



S

Sx4



E

Ex4

22

7

7

5

6

4

 
1

4





B x 14





Ø7 x 40 mm

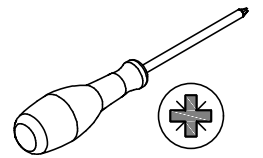

    
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

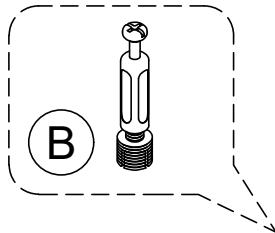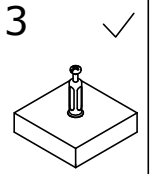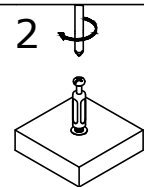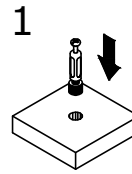

Bx10

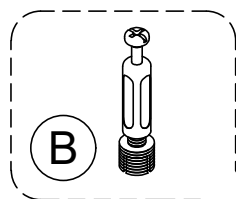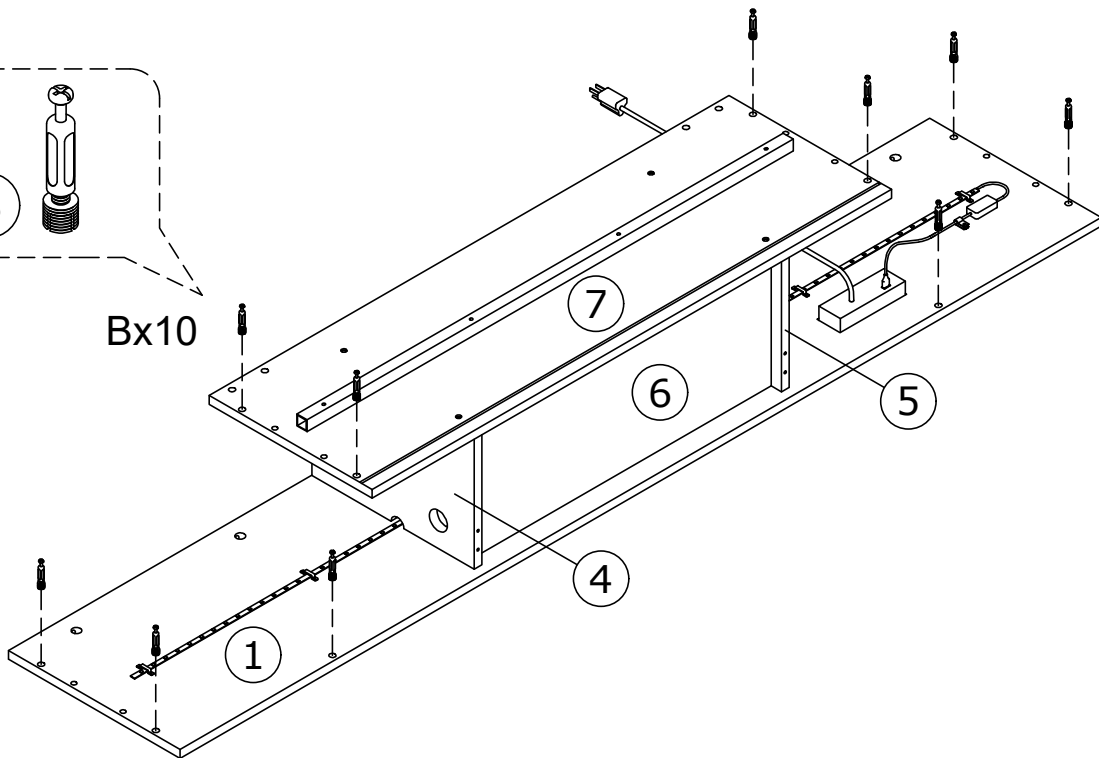  


Bx14

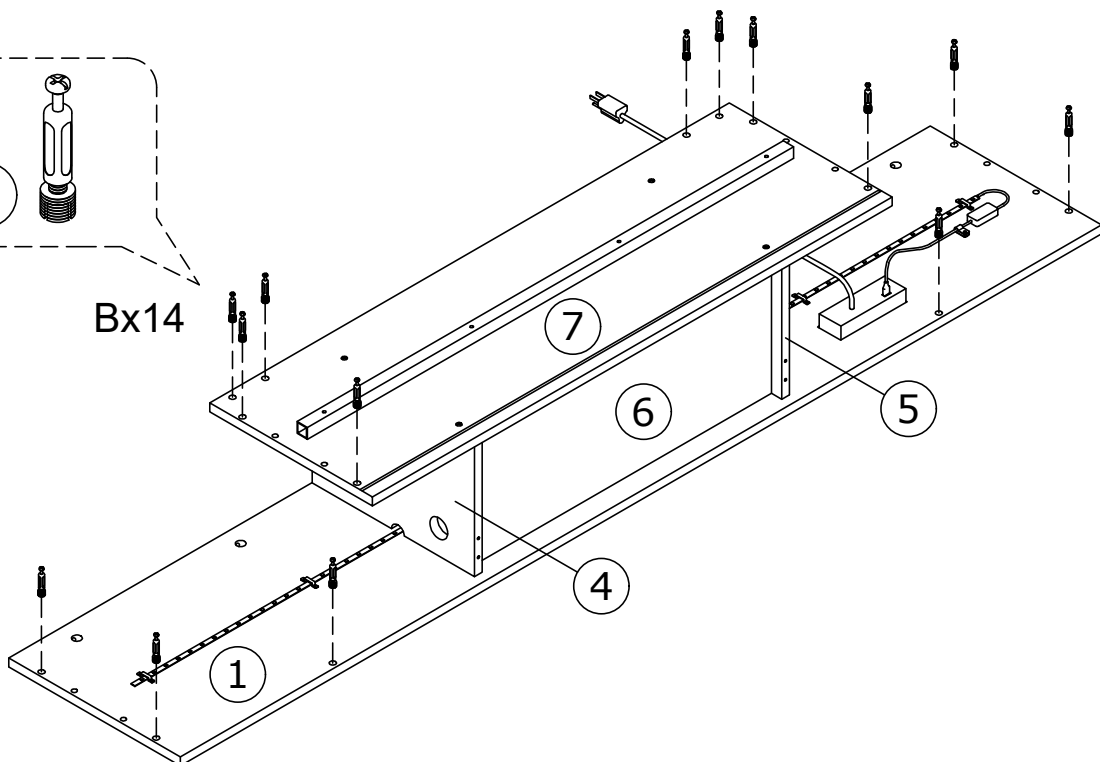 


5

 B x 12




Ø7 x 40 mm











 
C x 8



Ø8 x 40 mm

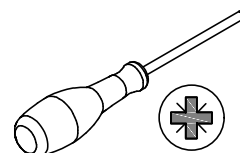 

           To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

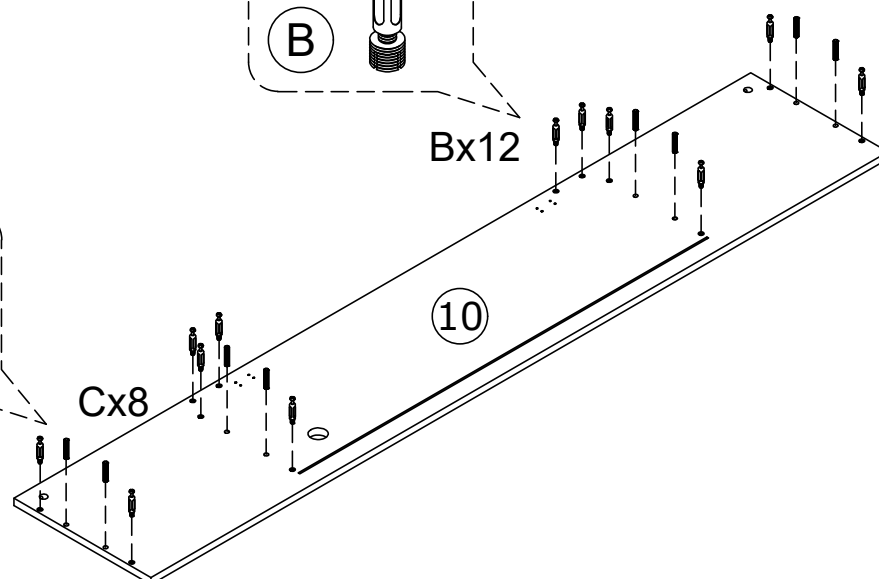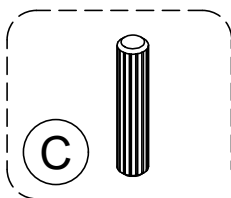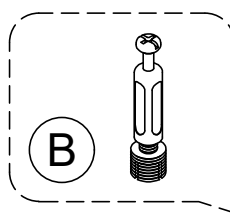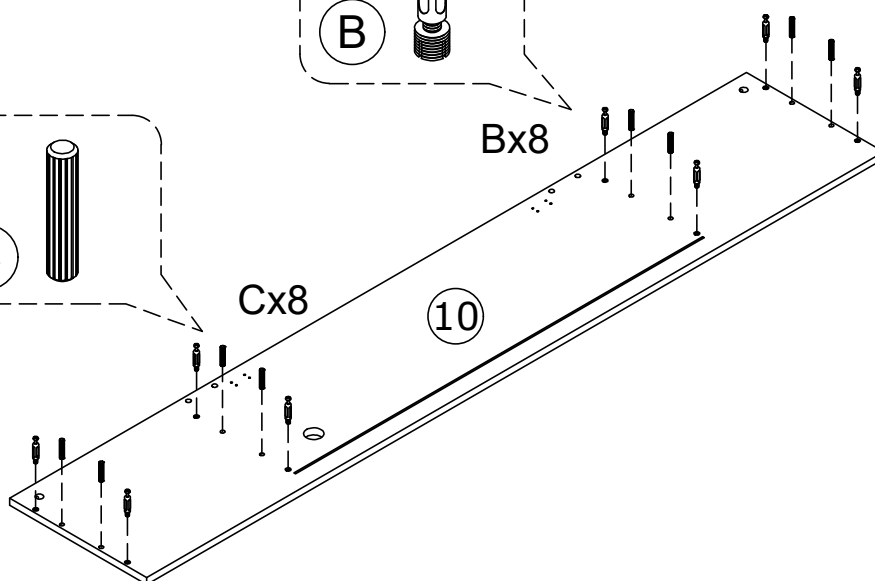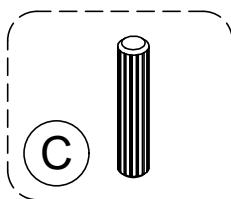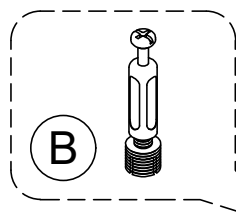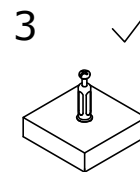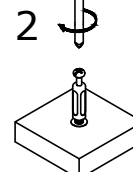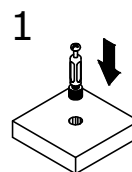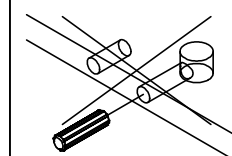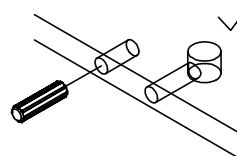


6




A x 8



 Ø15 x 11.5mm

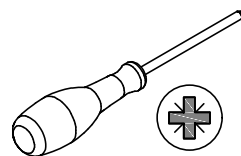

   To assemble a cabinet with a fireplace,
please follow the steps outlined in the
dashed box.

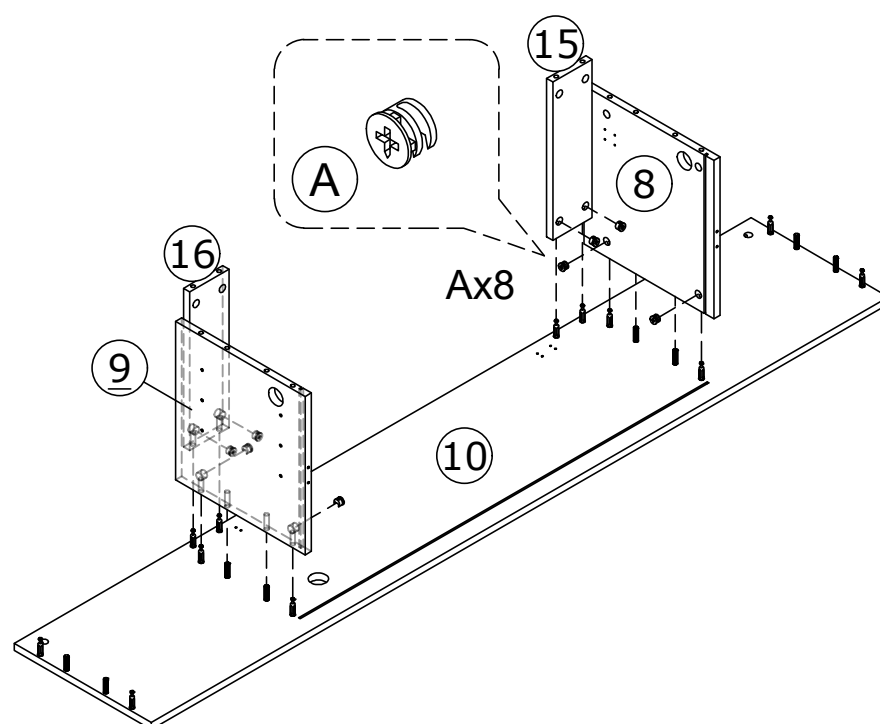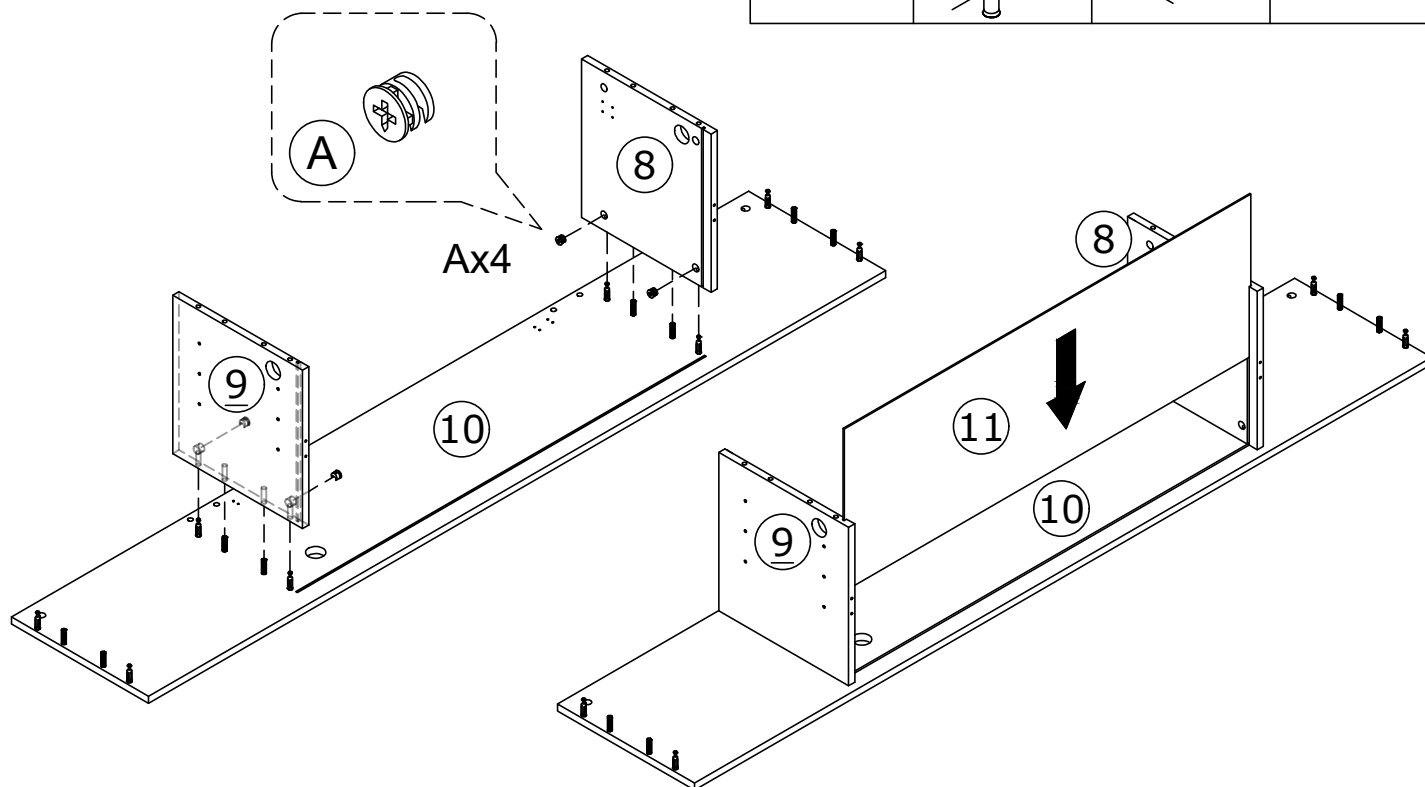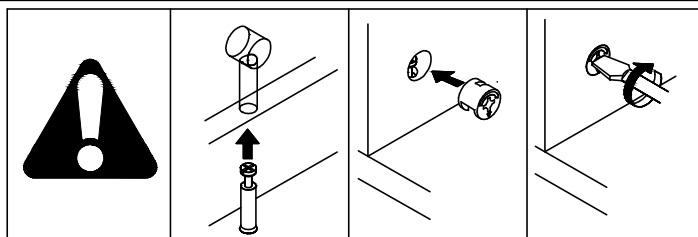


7

A x 8









Ø15 x 11.5mm

 B x 8



Ø7 x 40 mm

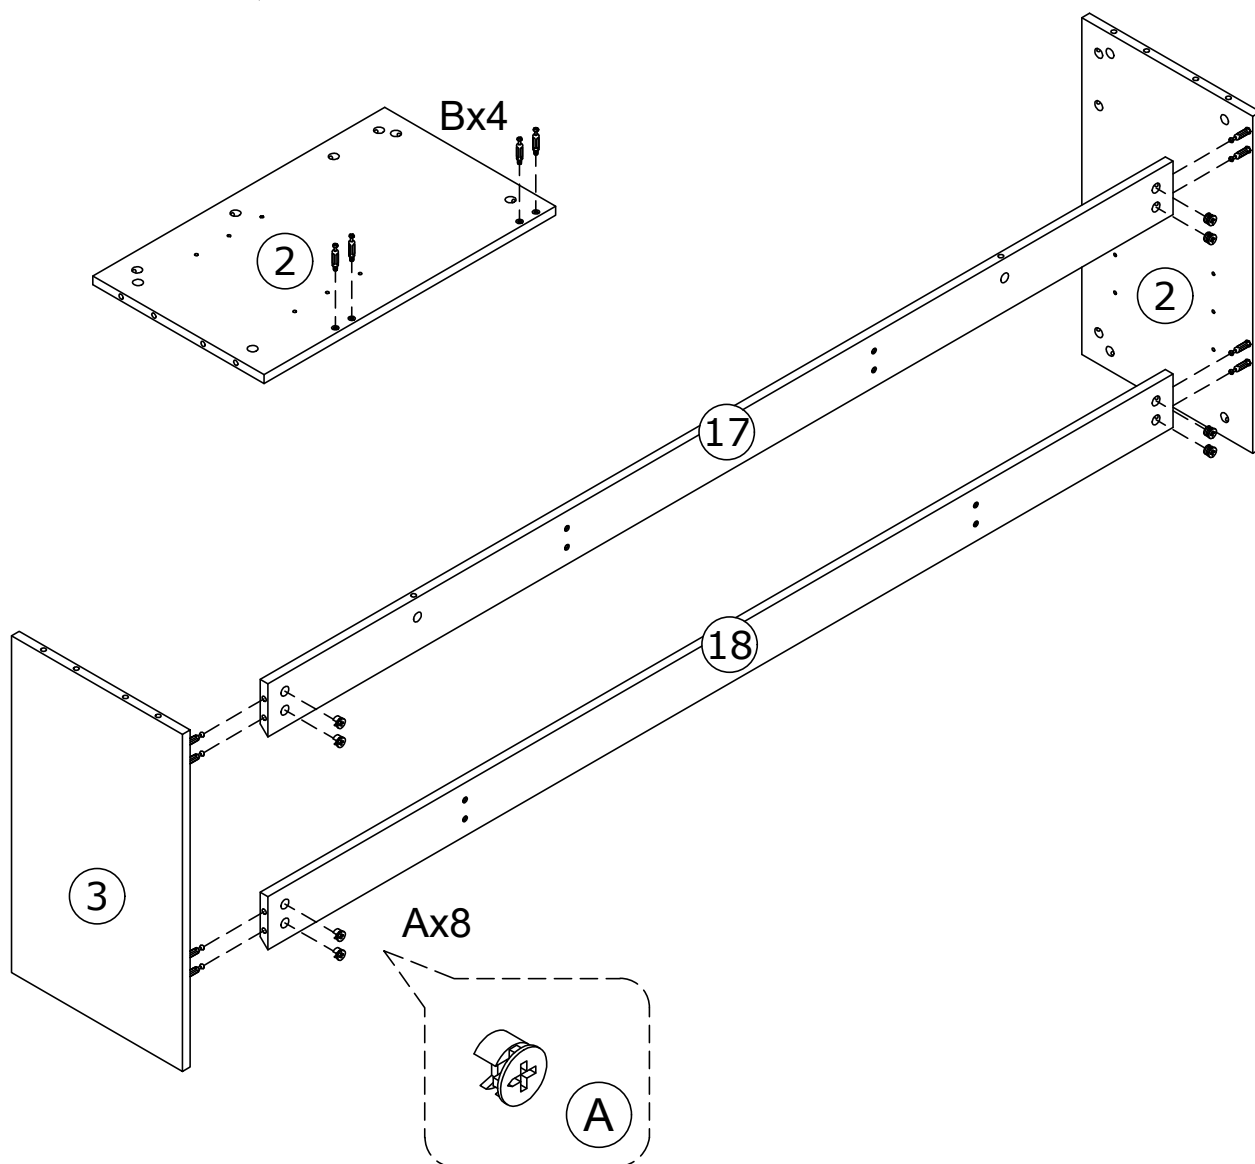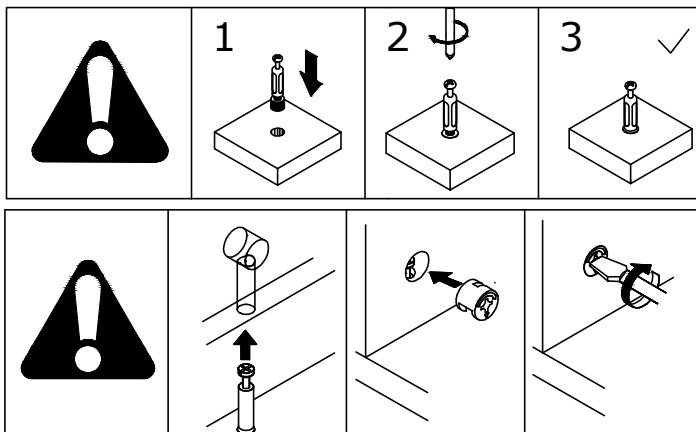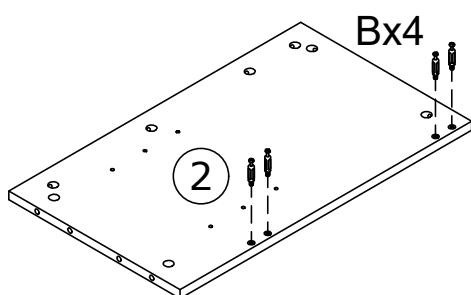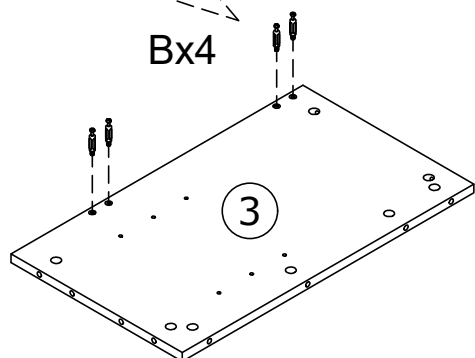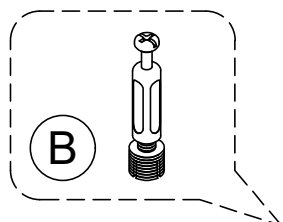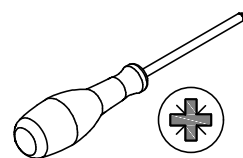      


8








A x 4




 
Ø15 x 11.5mm

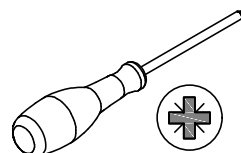

     
 
 
To assemble a cabinet with a fireplace,
please follow the steps outlined in the
dashed box.

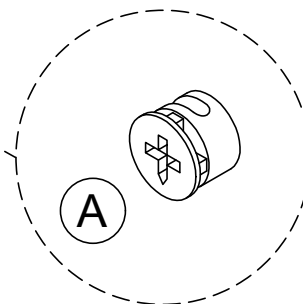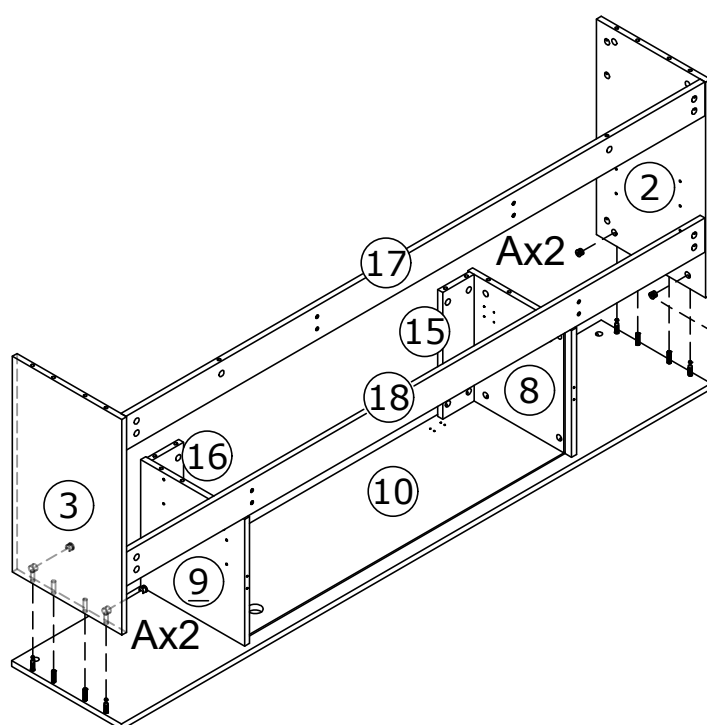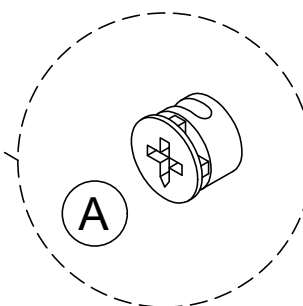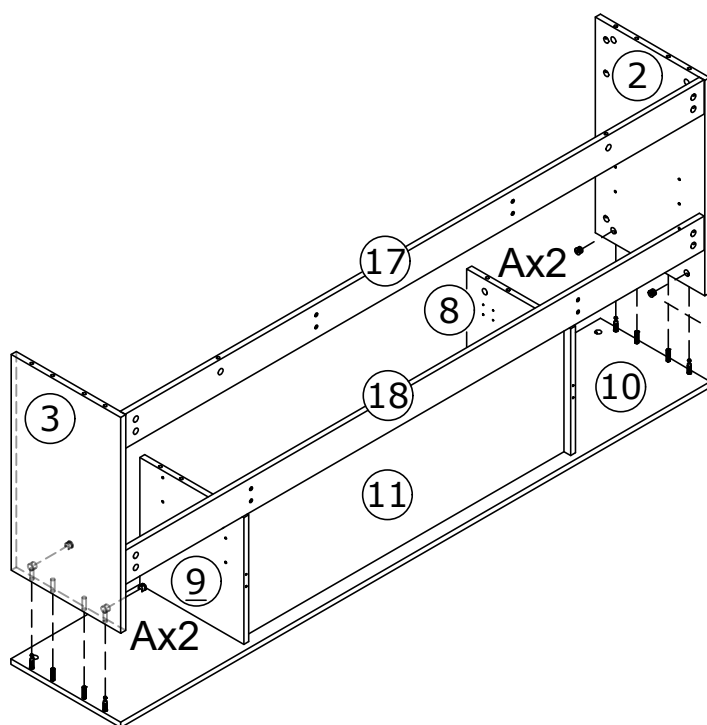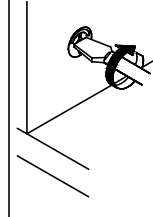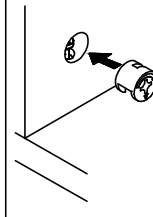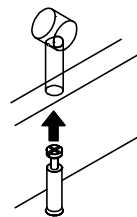

9

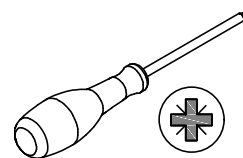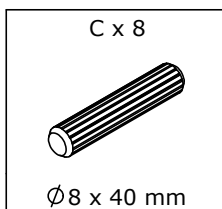  

   To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

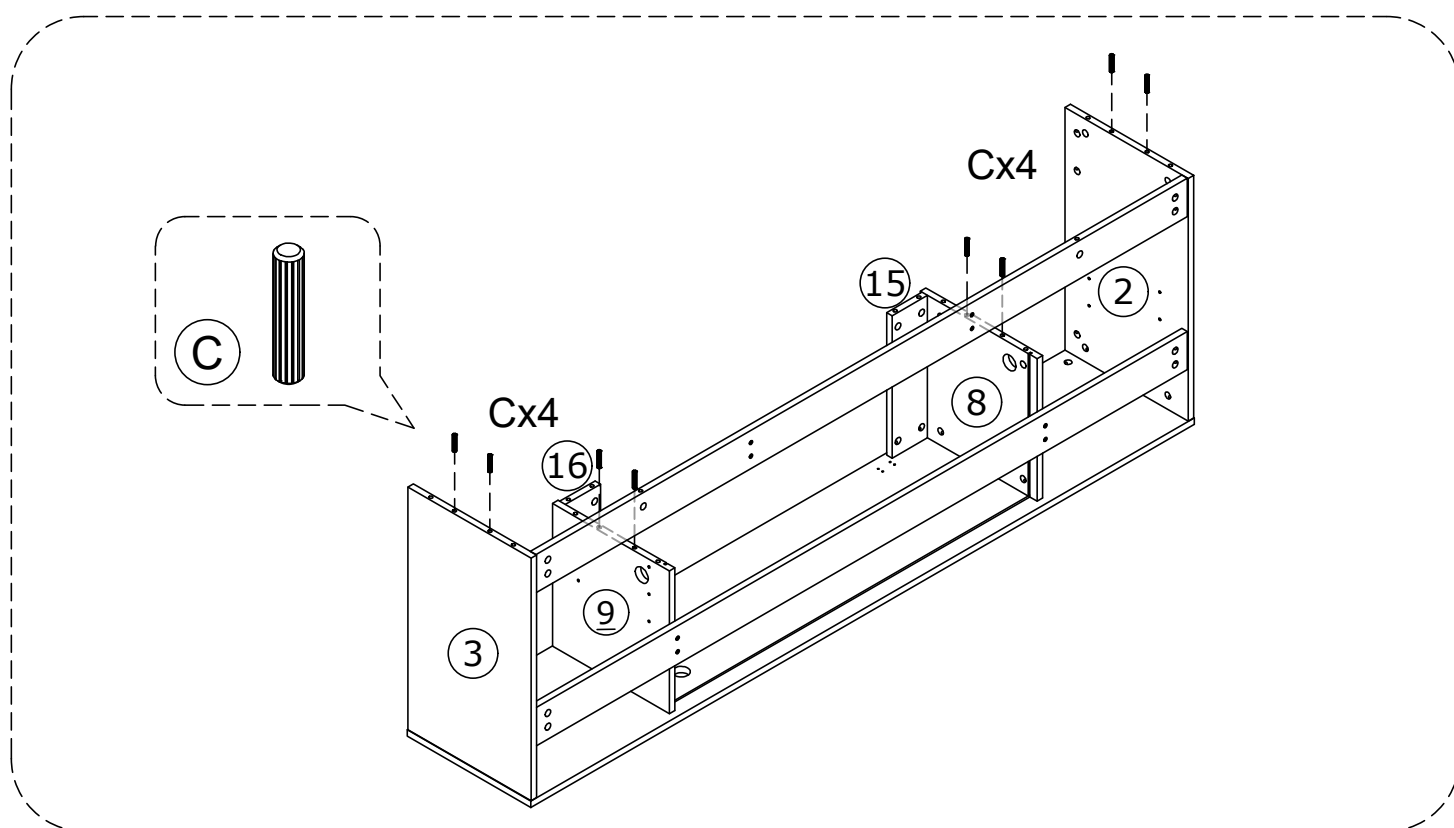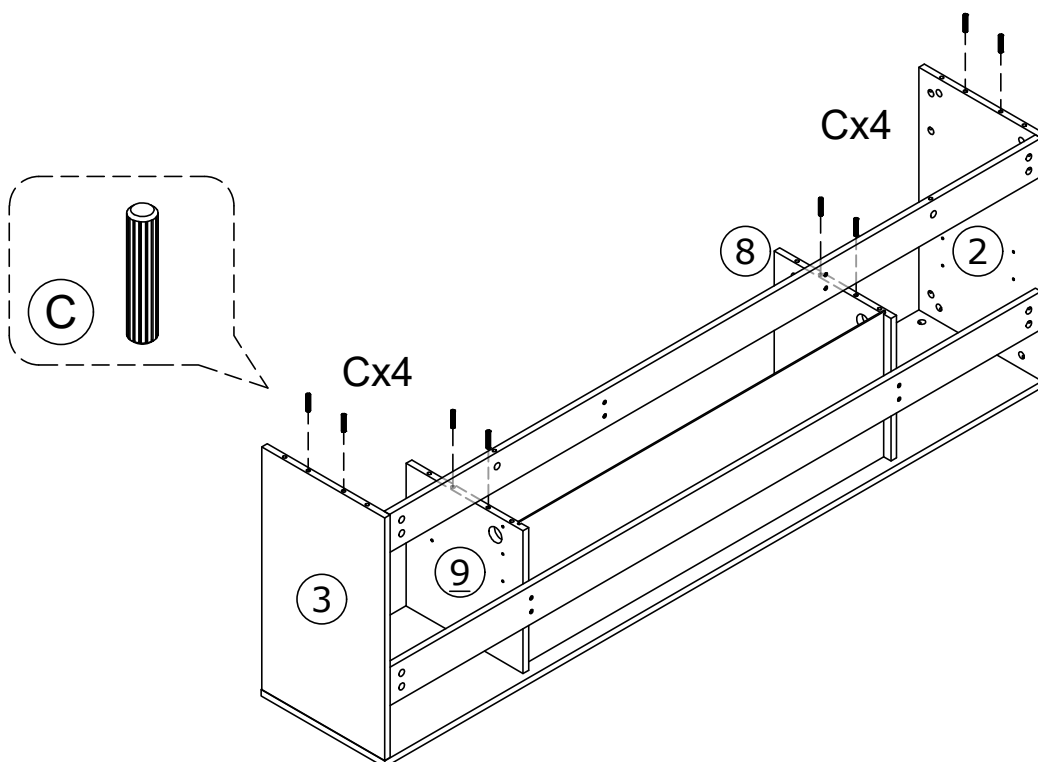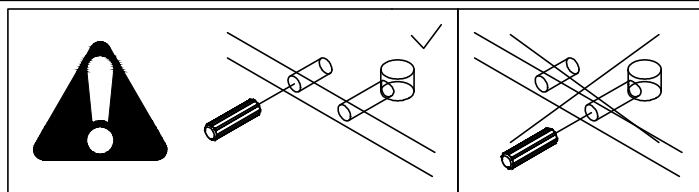


10



A x 14



 
Ø15 x 11.5mm

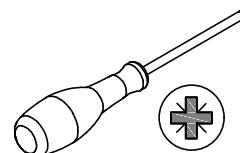

  
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

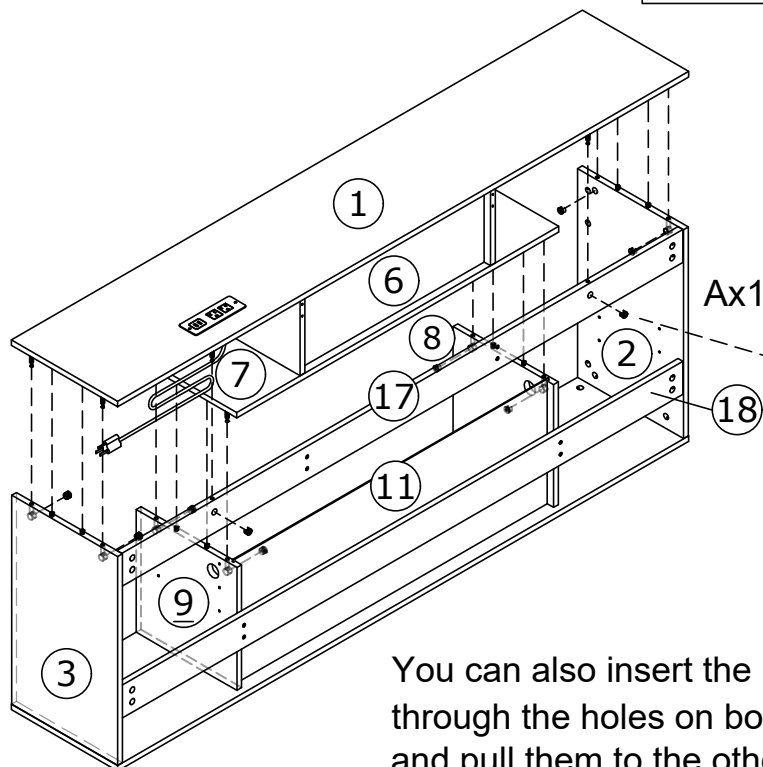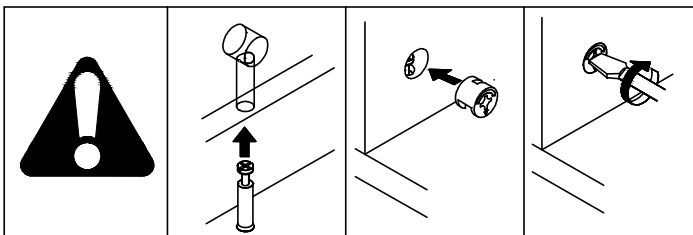


Ax10

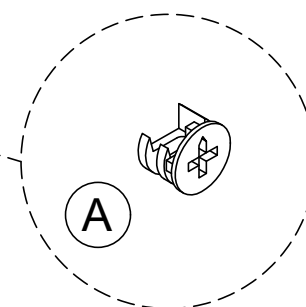 

 You can also insert the power plugs of the power strip through the holes on board ⑤ and board ④ respectively, and pull them to the other side of the cabinet.

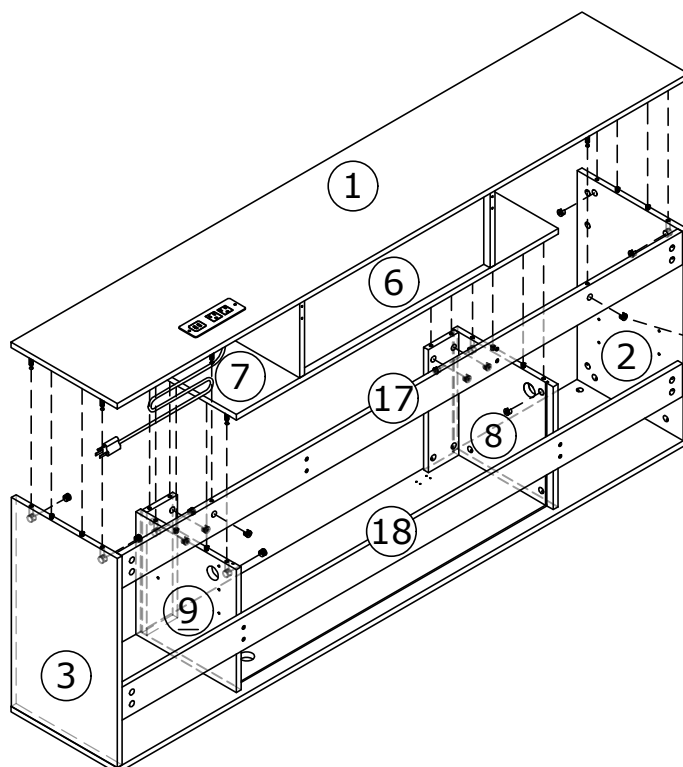


Ax14

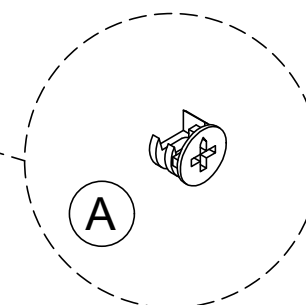 


11


 
E x 8






Ø5 x 40 mm



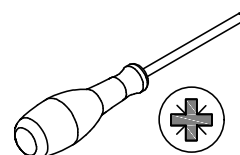 


  To assemble a cabinet with a fireplace,
please follow the steps outlined in the
dashed box.

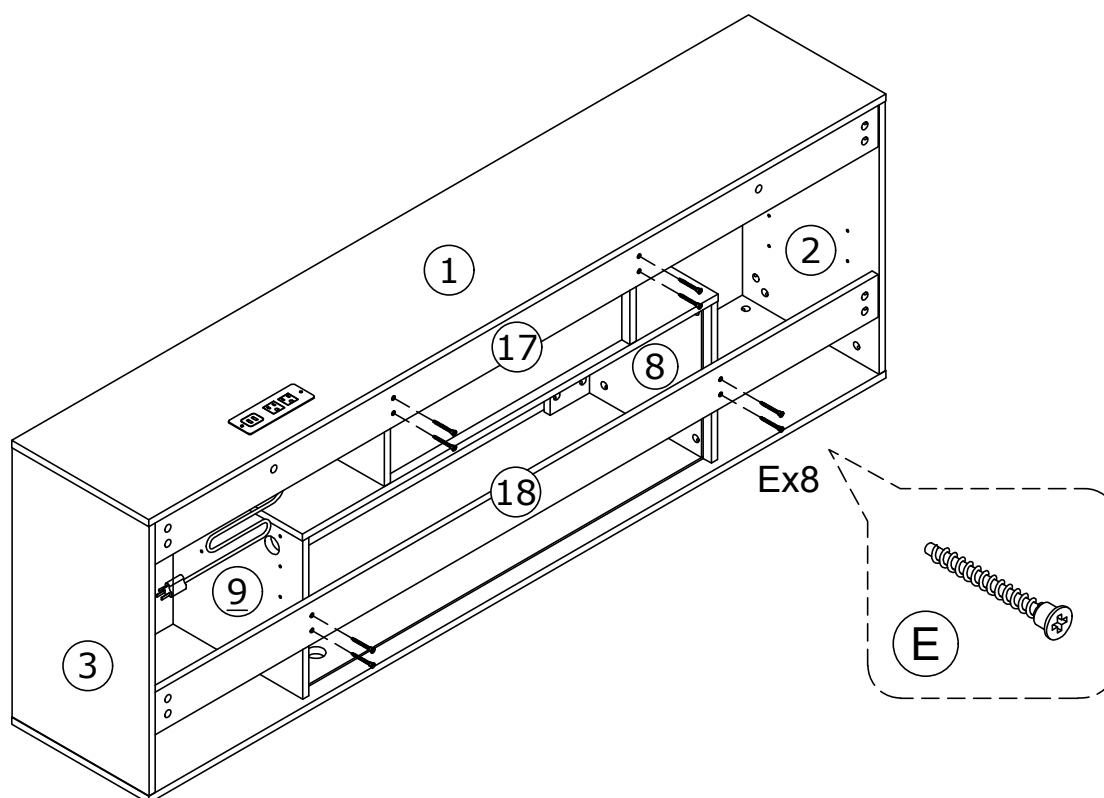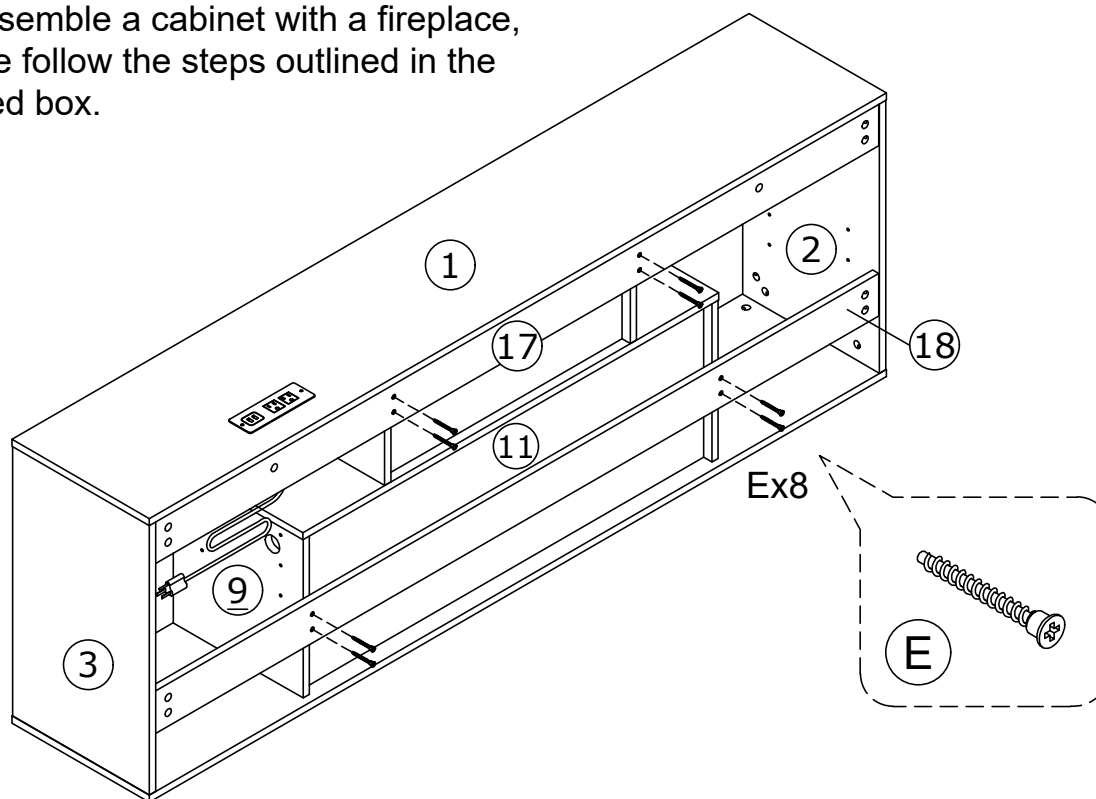

12

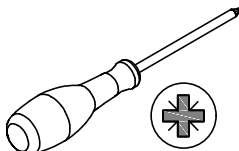   A x 2  Ø15 x 11.5mm	B x 18  Ø7 x 40 mm	C x 2  Ø8 x 40 mm	L x 2  Ø7 x 40 mm	
--	---	--	---	--

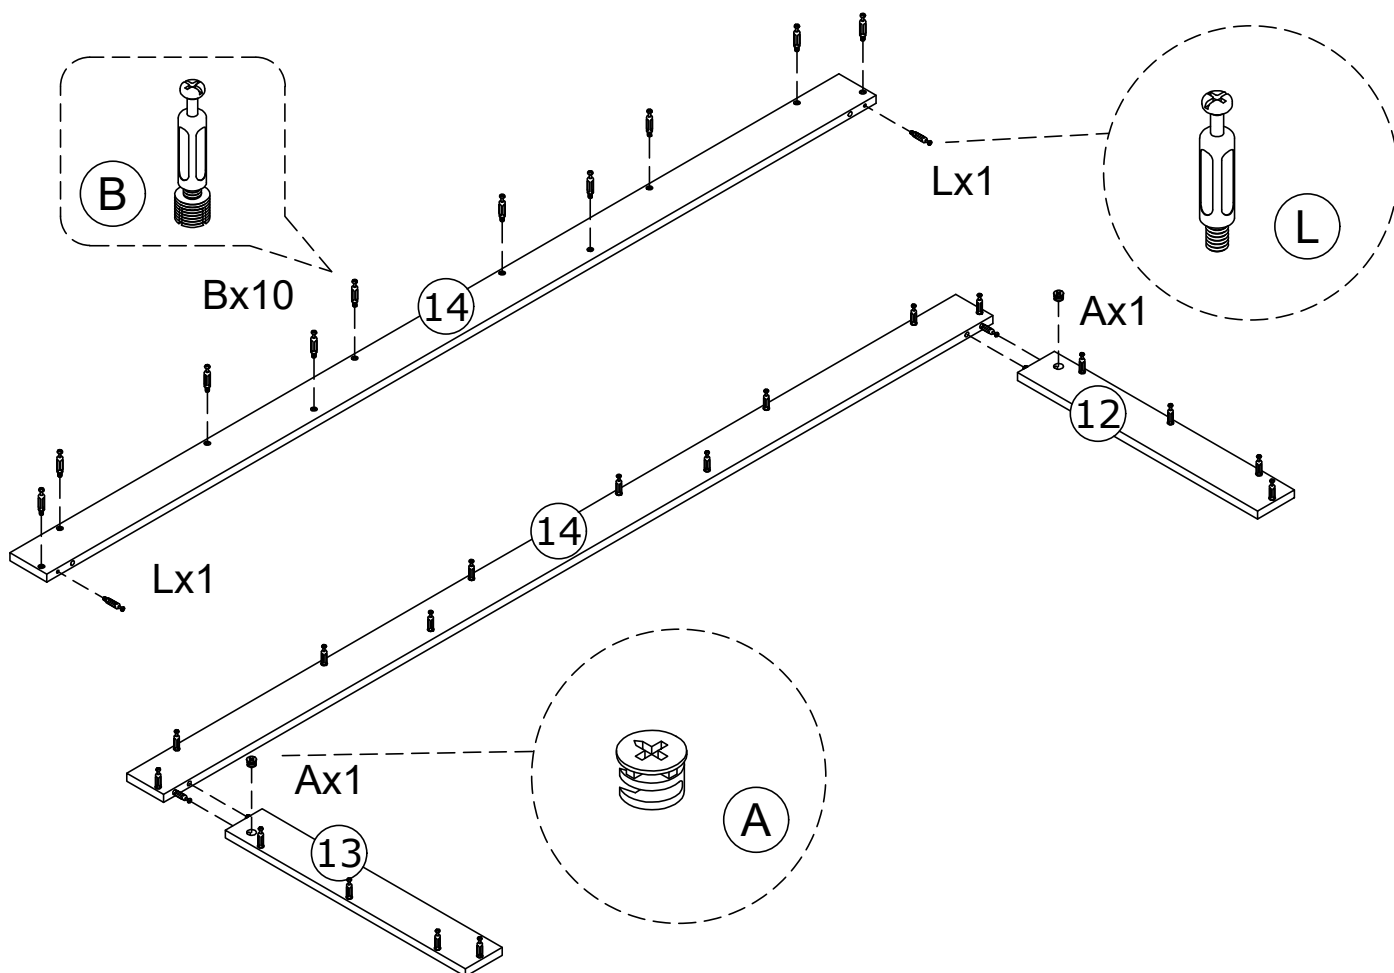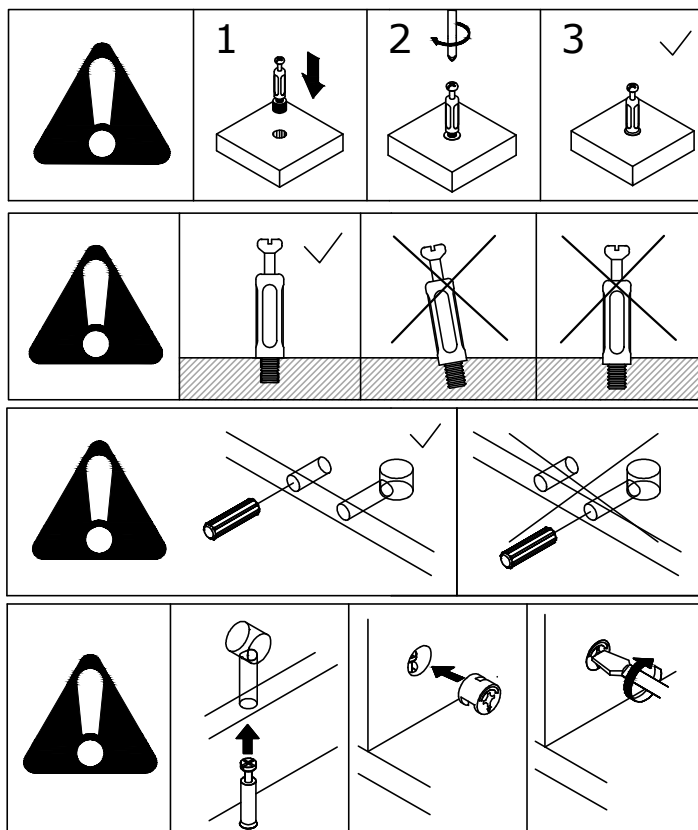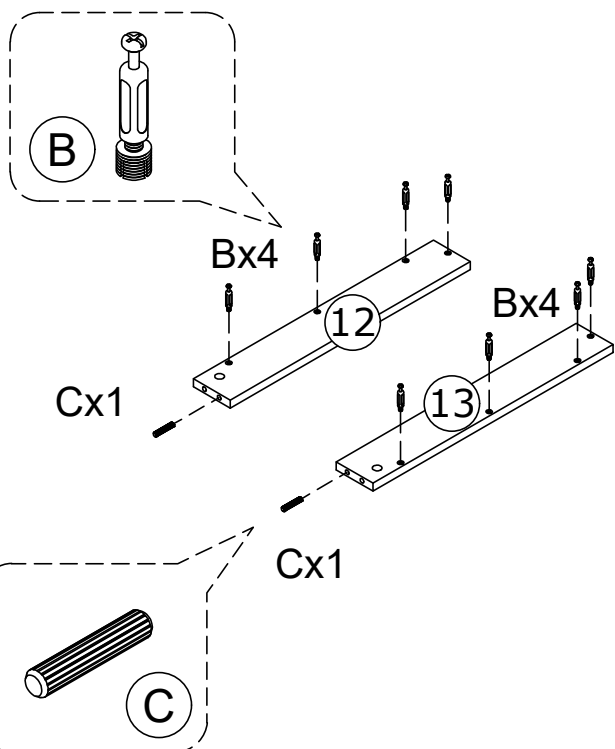   


13




A x 18



 Ø15 x 11.5mm

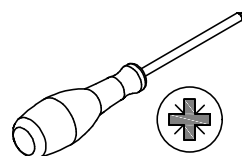


   To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

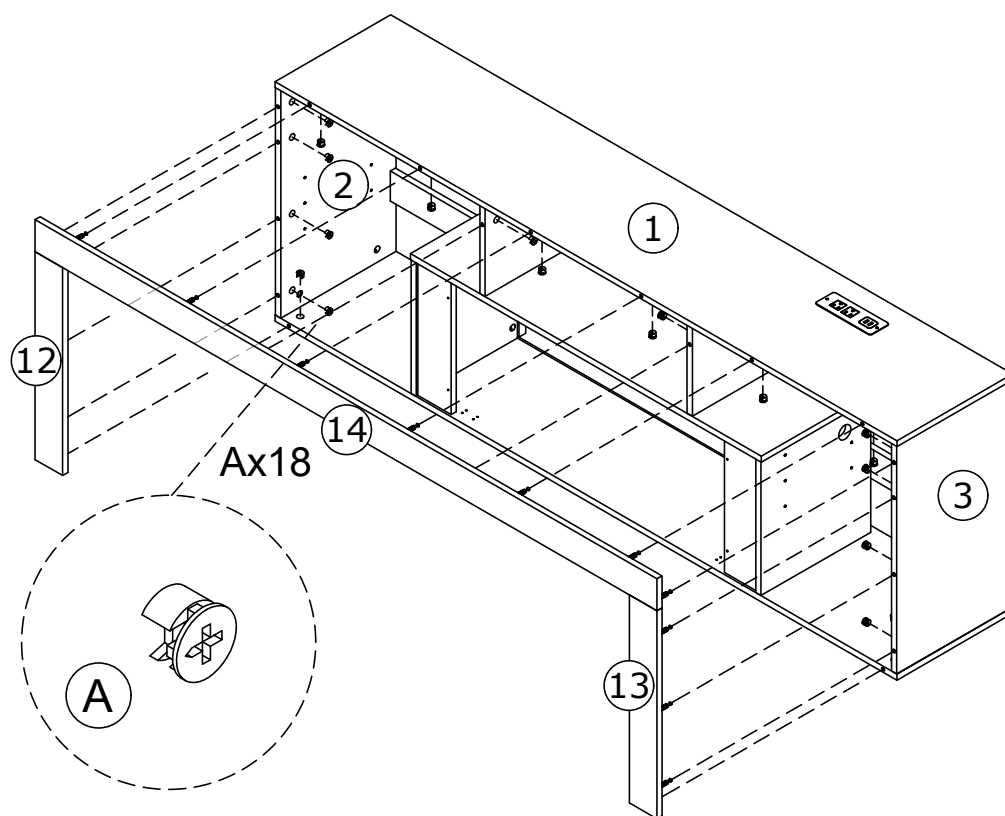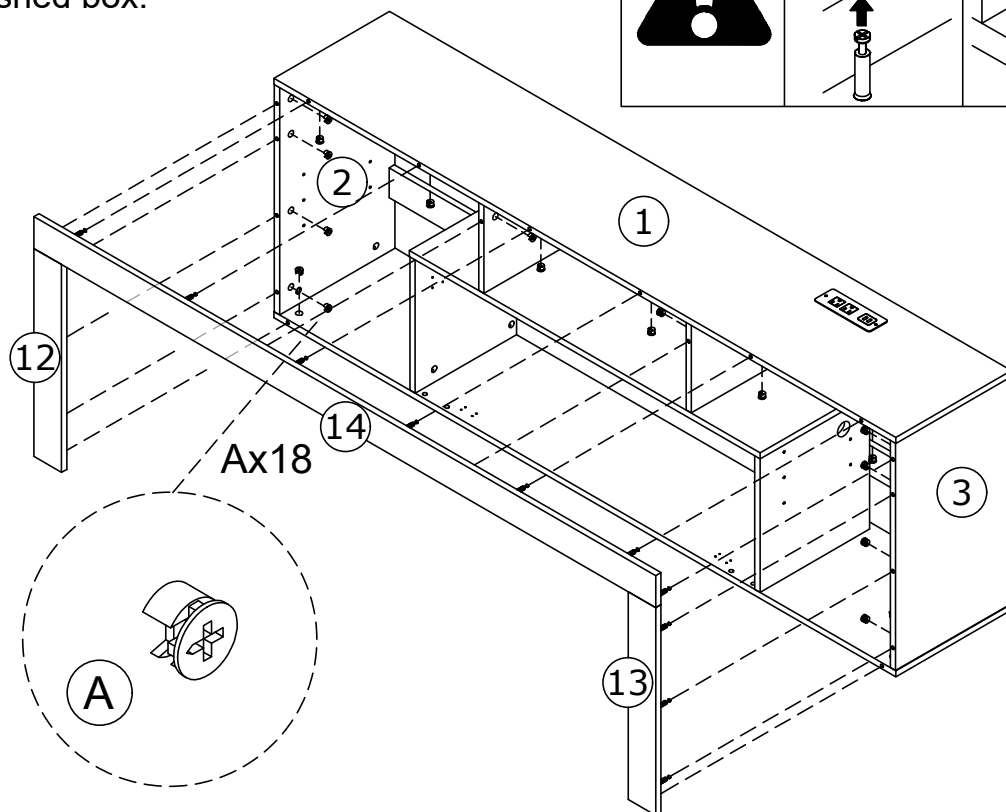
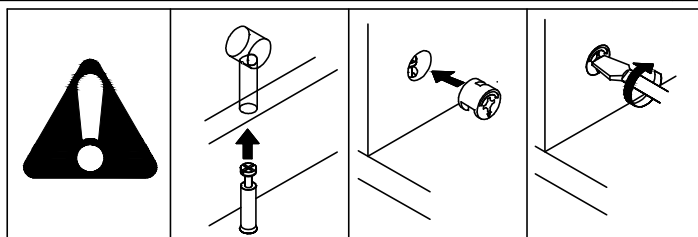


14

 N x 36

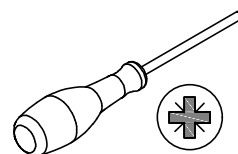

  To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

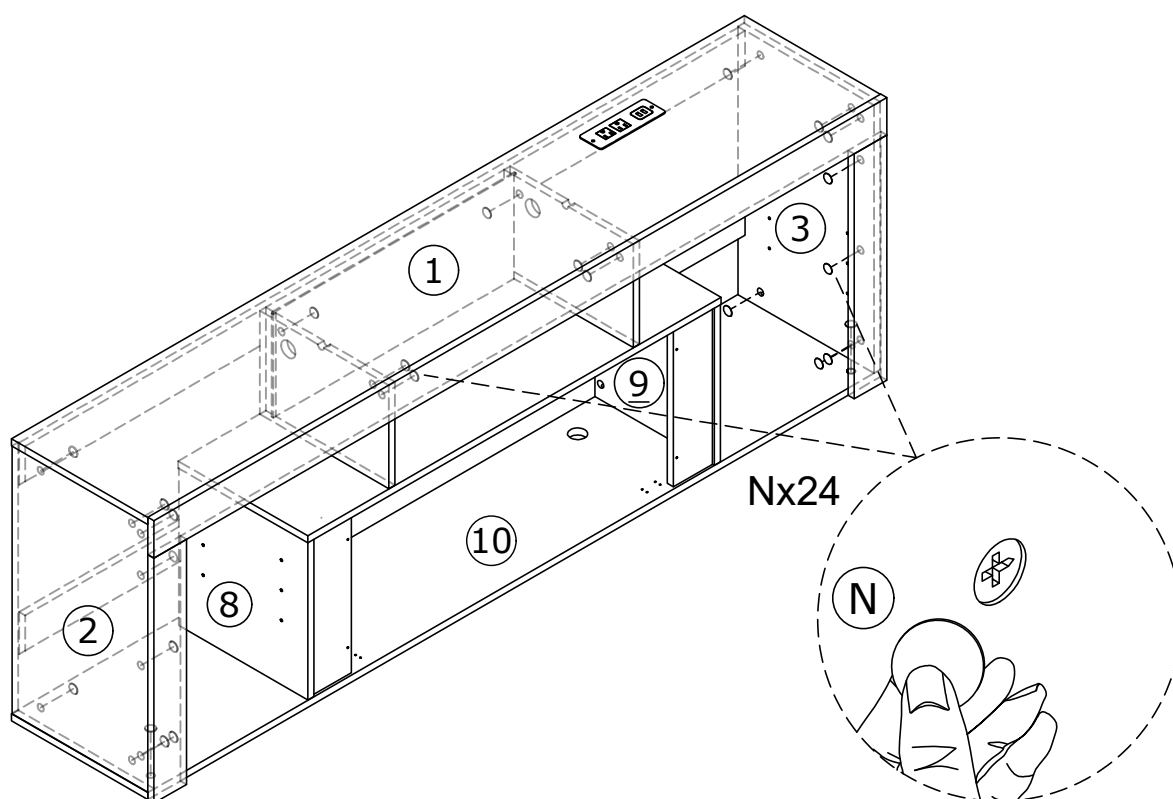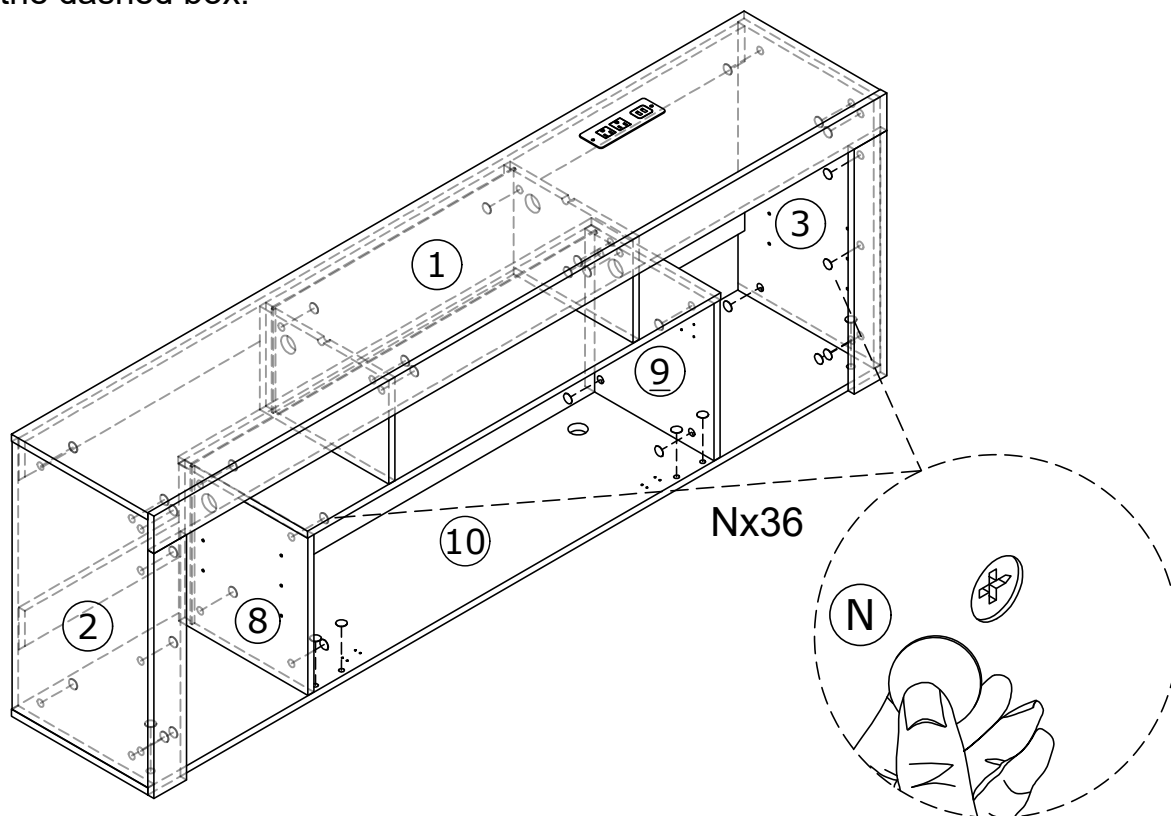

15

 
K x 8





K-1





K-2

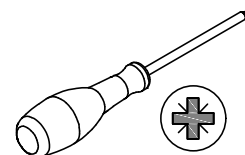

 
 
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

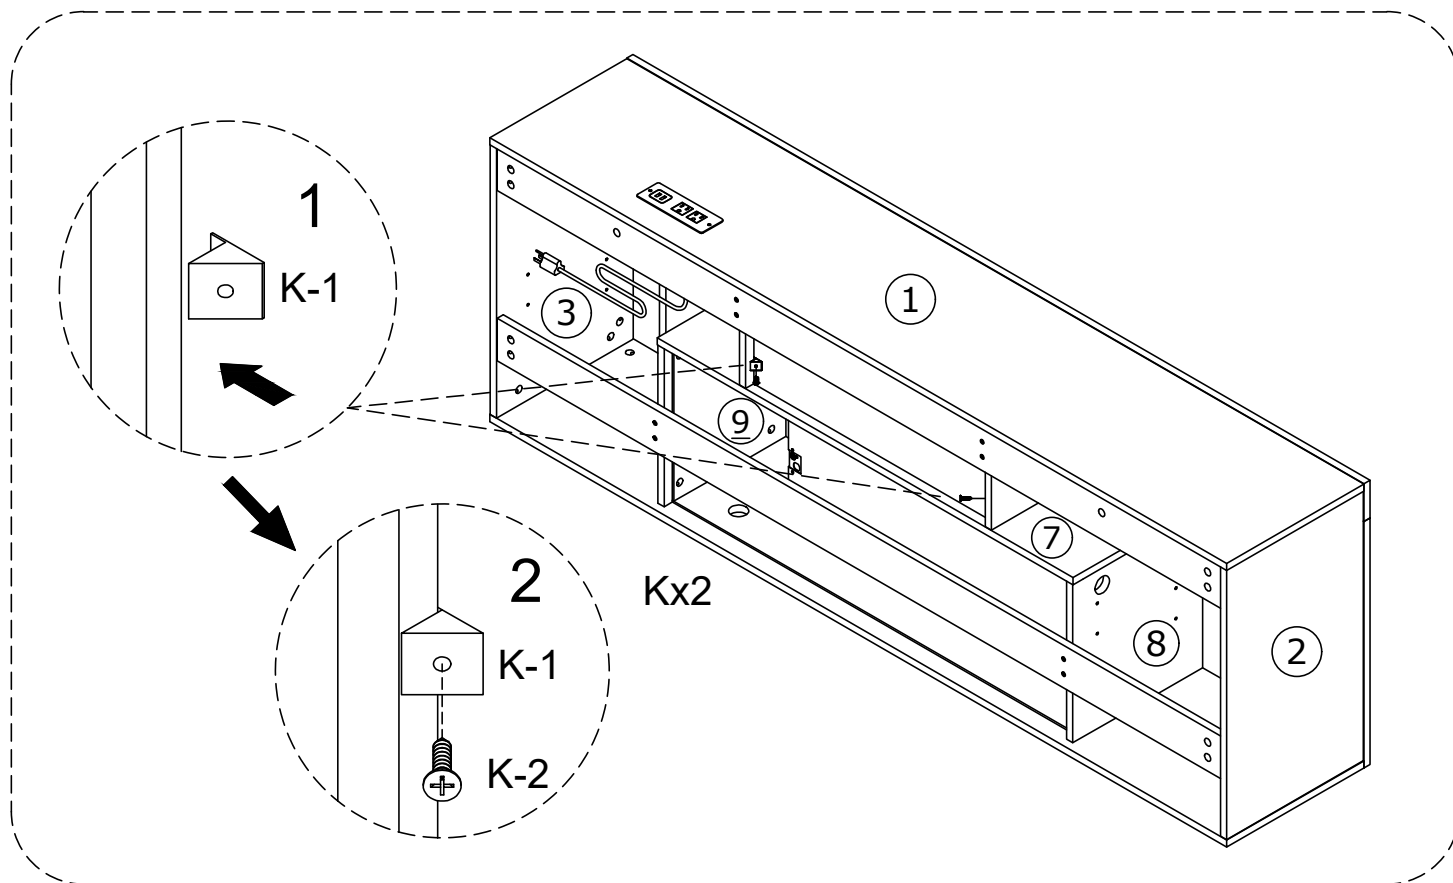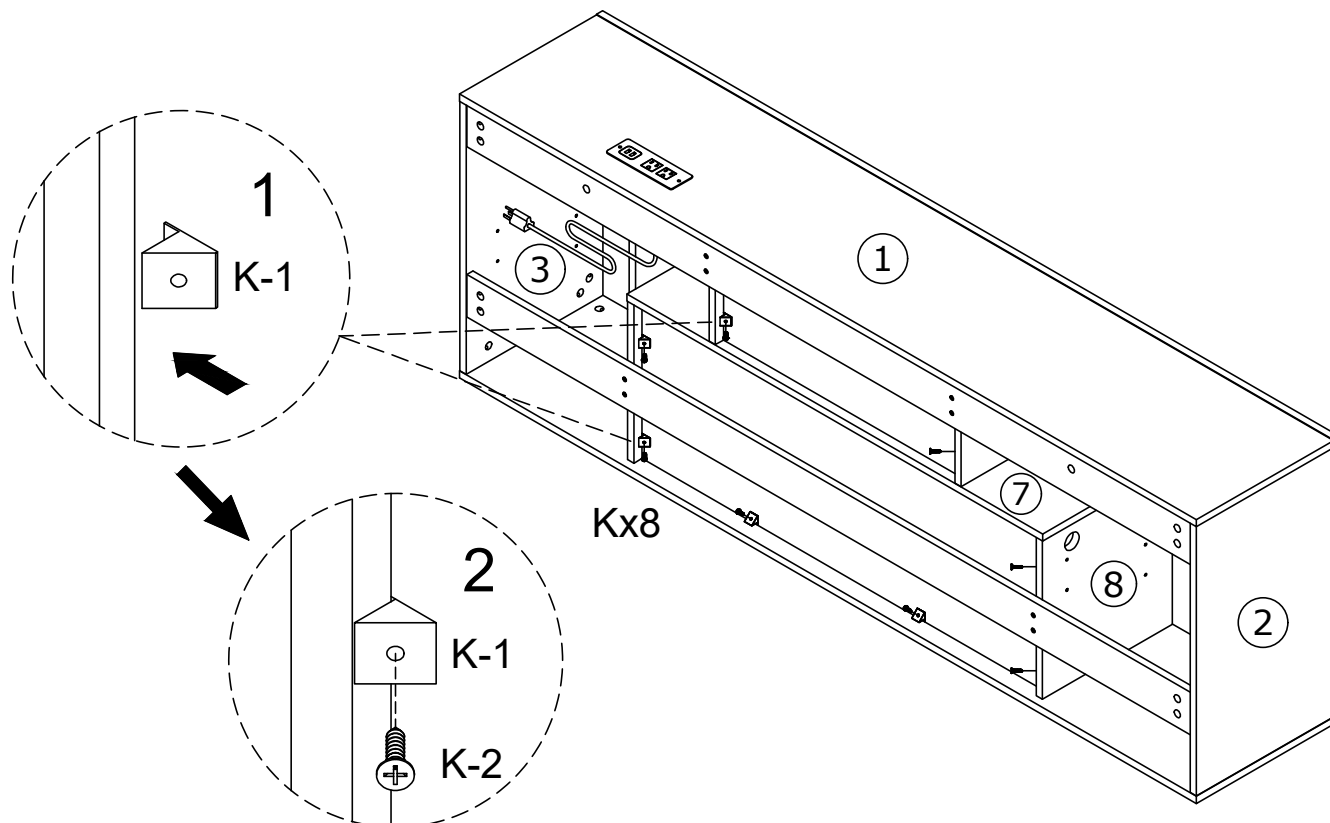


16

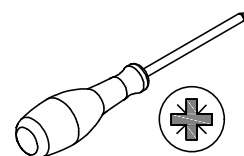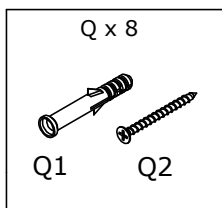  





 
 
When drilling holes on the wall, please be careful to avoid power cords.

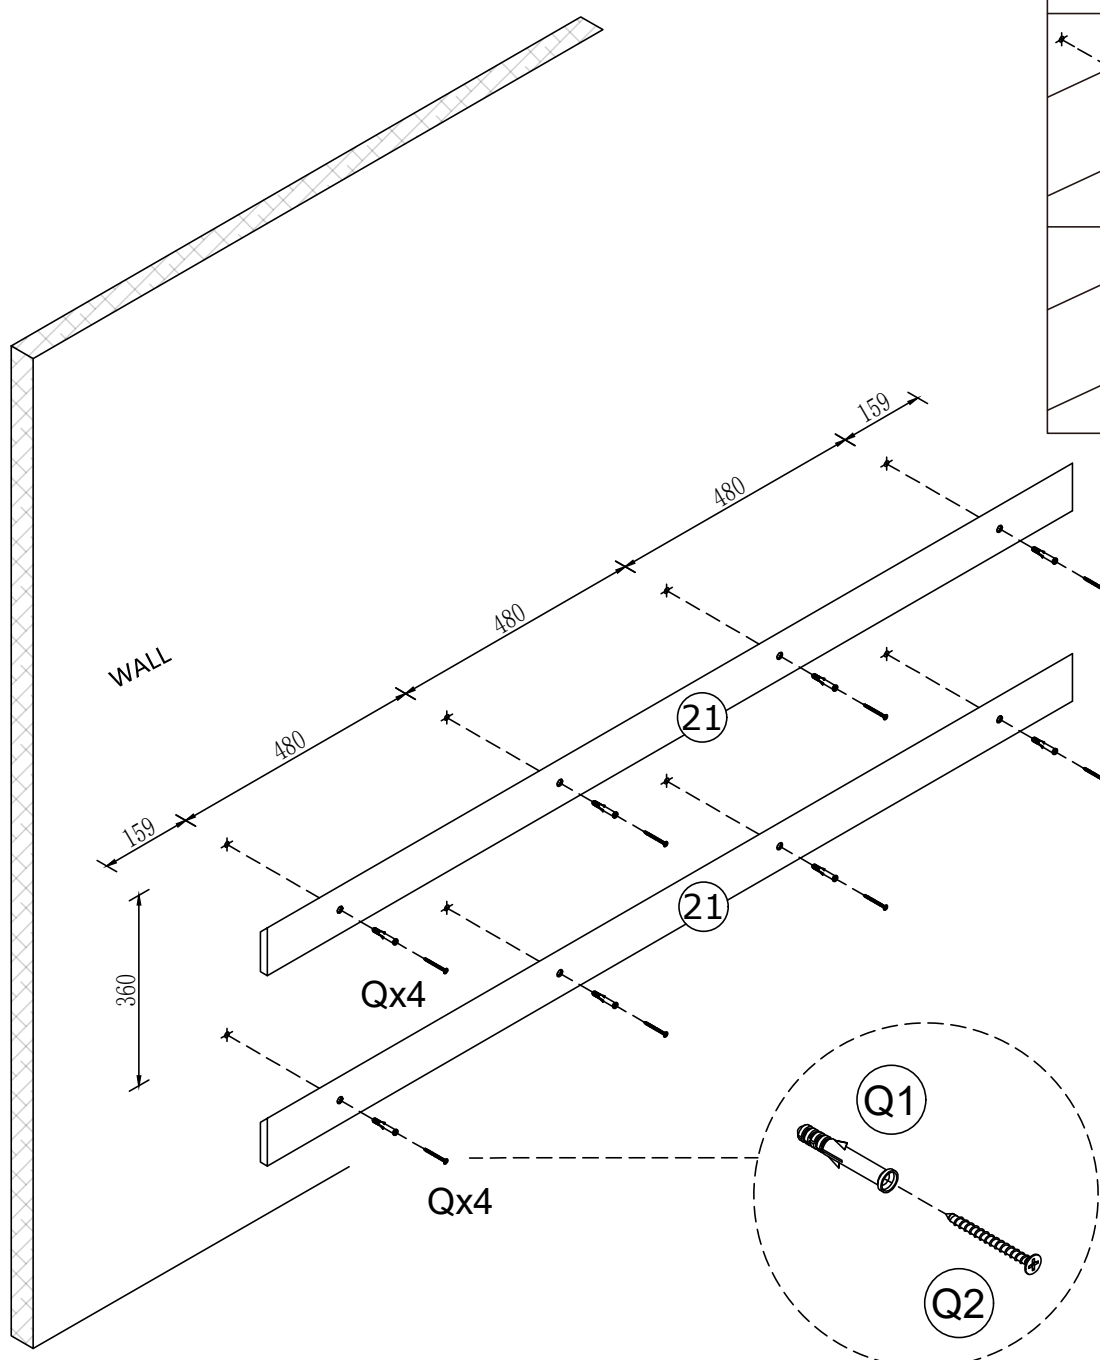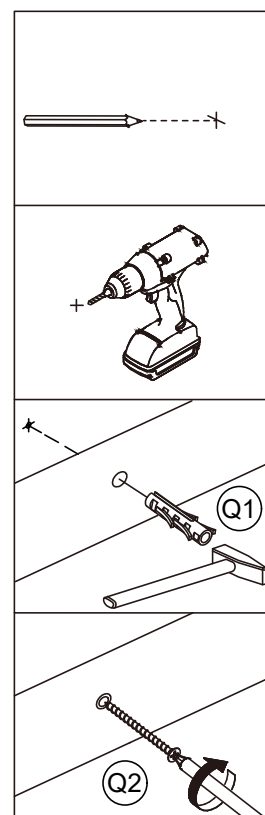


17

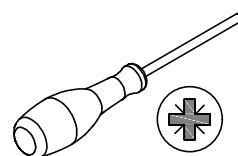 

      
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

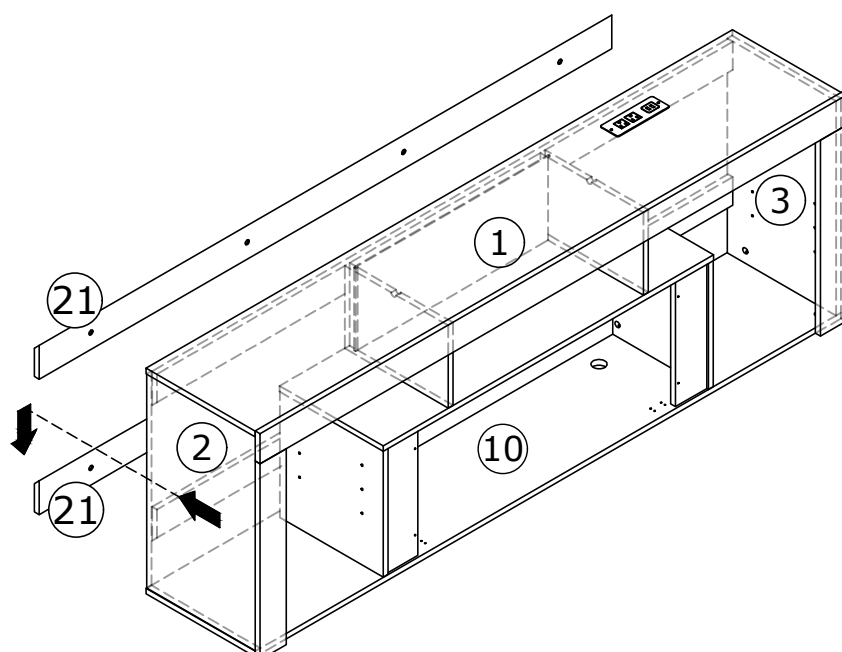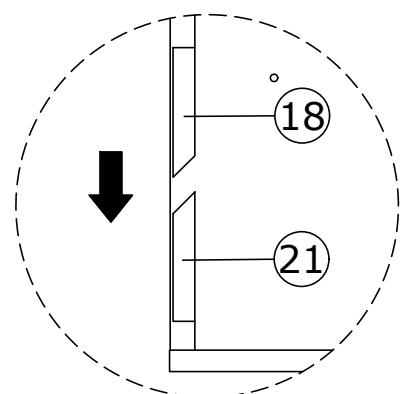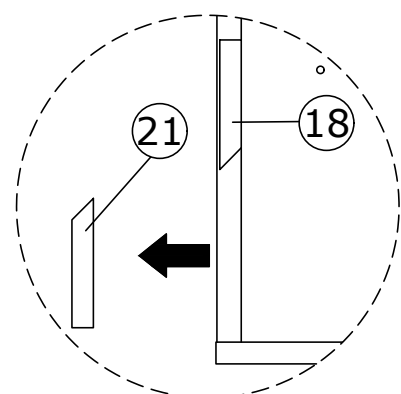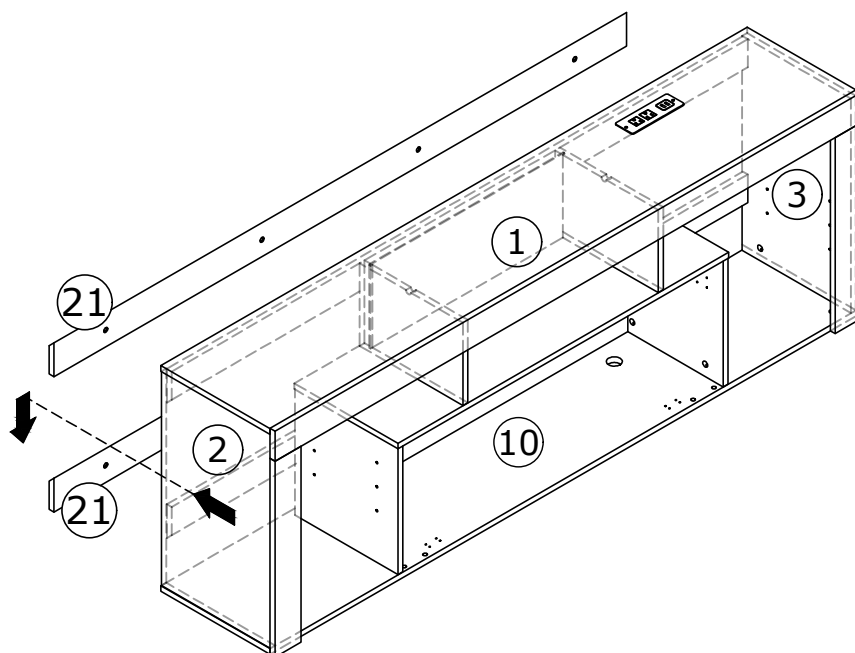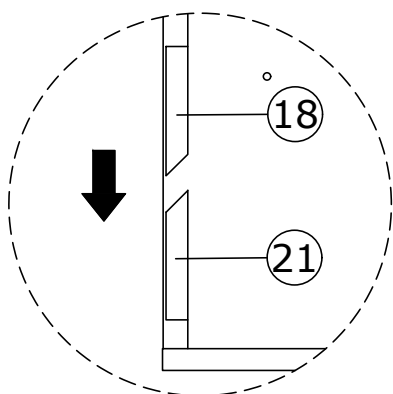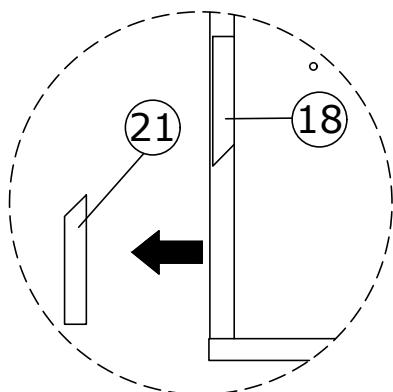

18

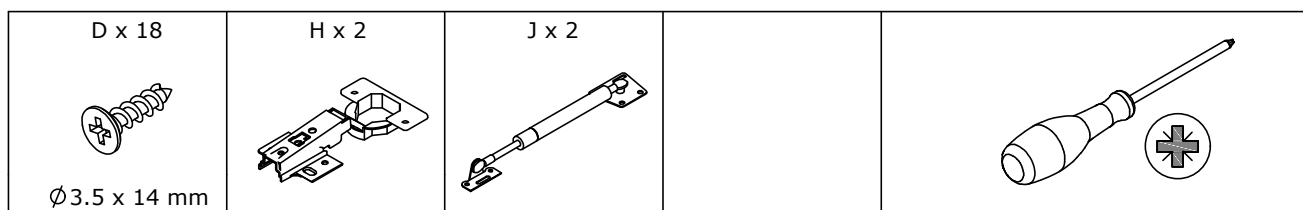 

 To assemble a cabinet with a fireplace, please skip this step.

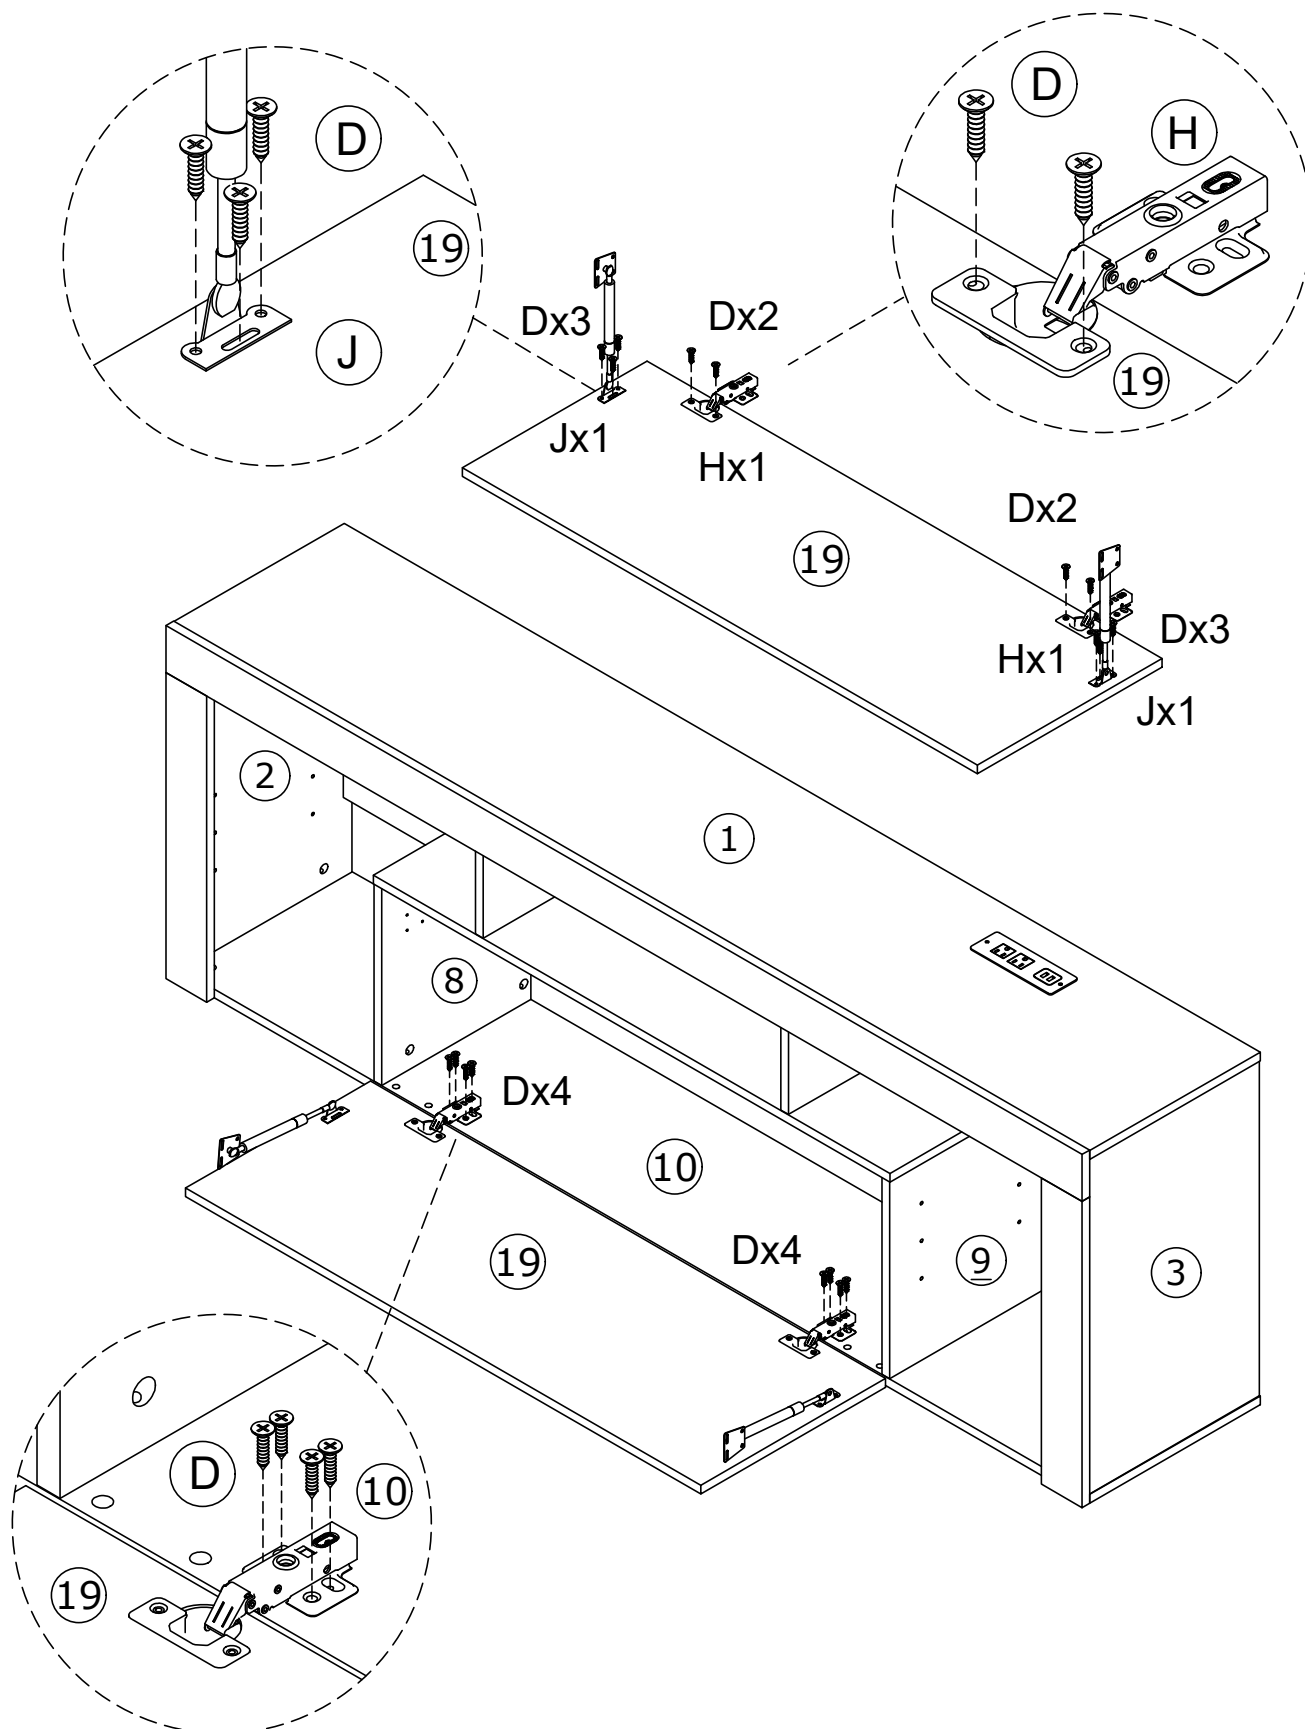


19


D x 8



 
Ø3.5 x 14 mm

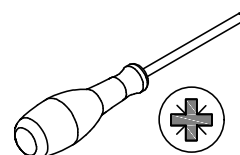

 To assemble a cabinet with a fireplace, please skip this step.

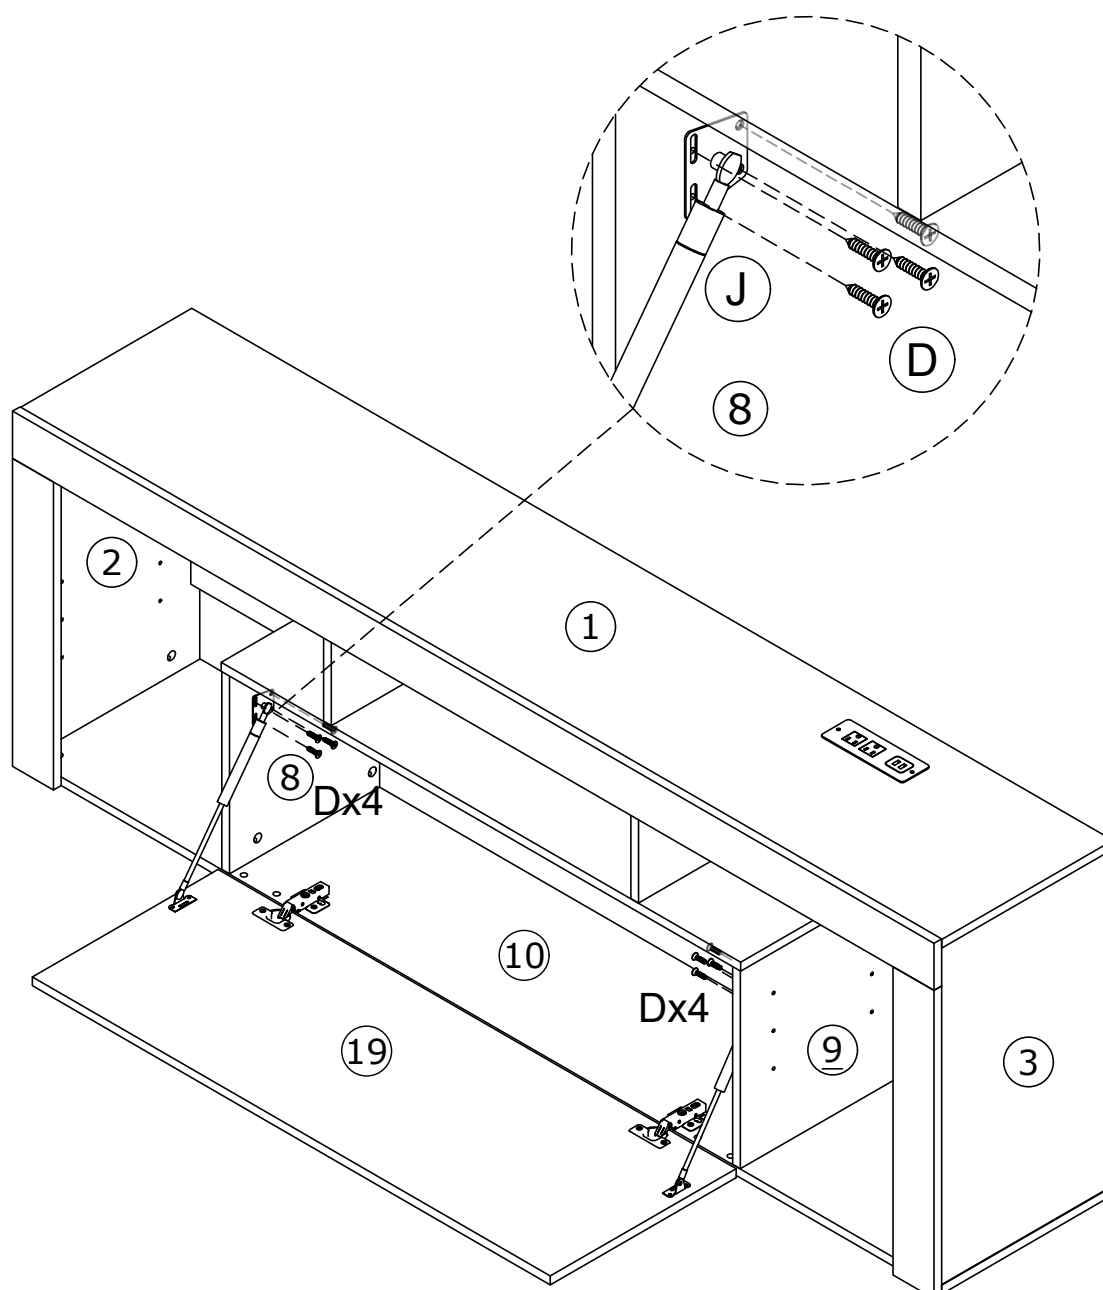


20

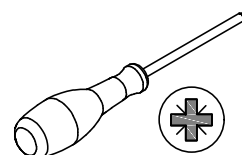 

To assemble a cabinet without a fireplace, please skip this step.

 
Unscrew the four silver screws on both sides of the fireplace, lift up the glass panel to remove it, and place it on a soft and clean object.

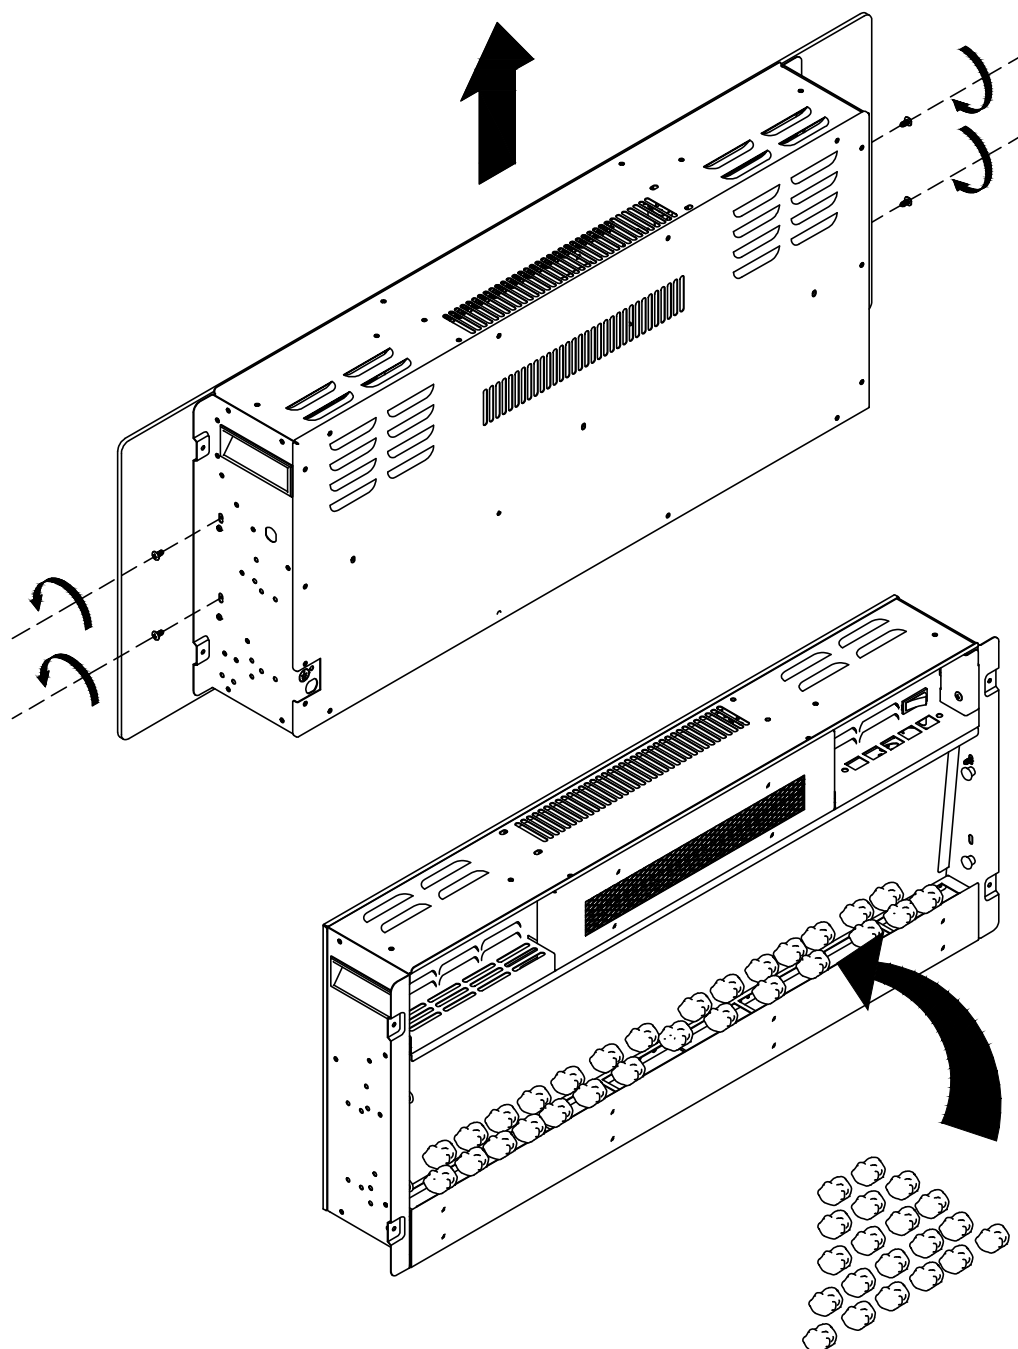


Place the crystal ornament
in the fireplace.

21

 D x 4




Ø3.5 x 14 mm

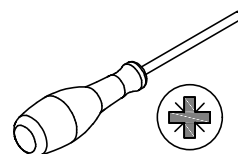 



To assemble a cabinet without a fireplace, please skip this step.

 According to the position of the power socket, select the holes on board ⑧, board ⑨, and board ⑩, and pull out the power plug of the fireplace from the cabinet.


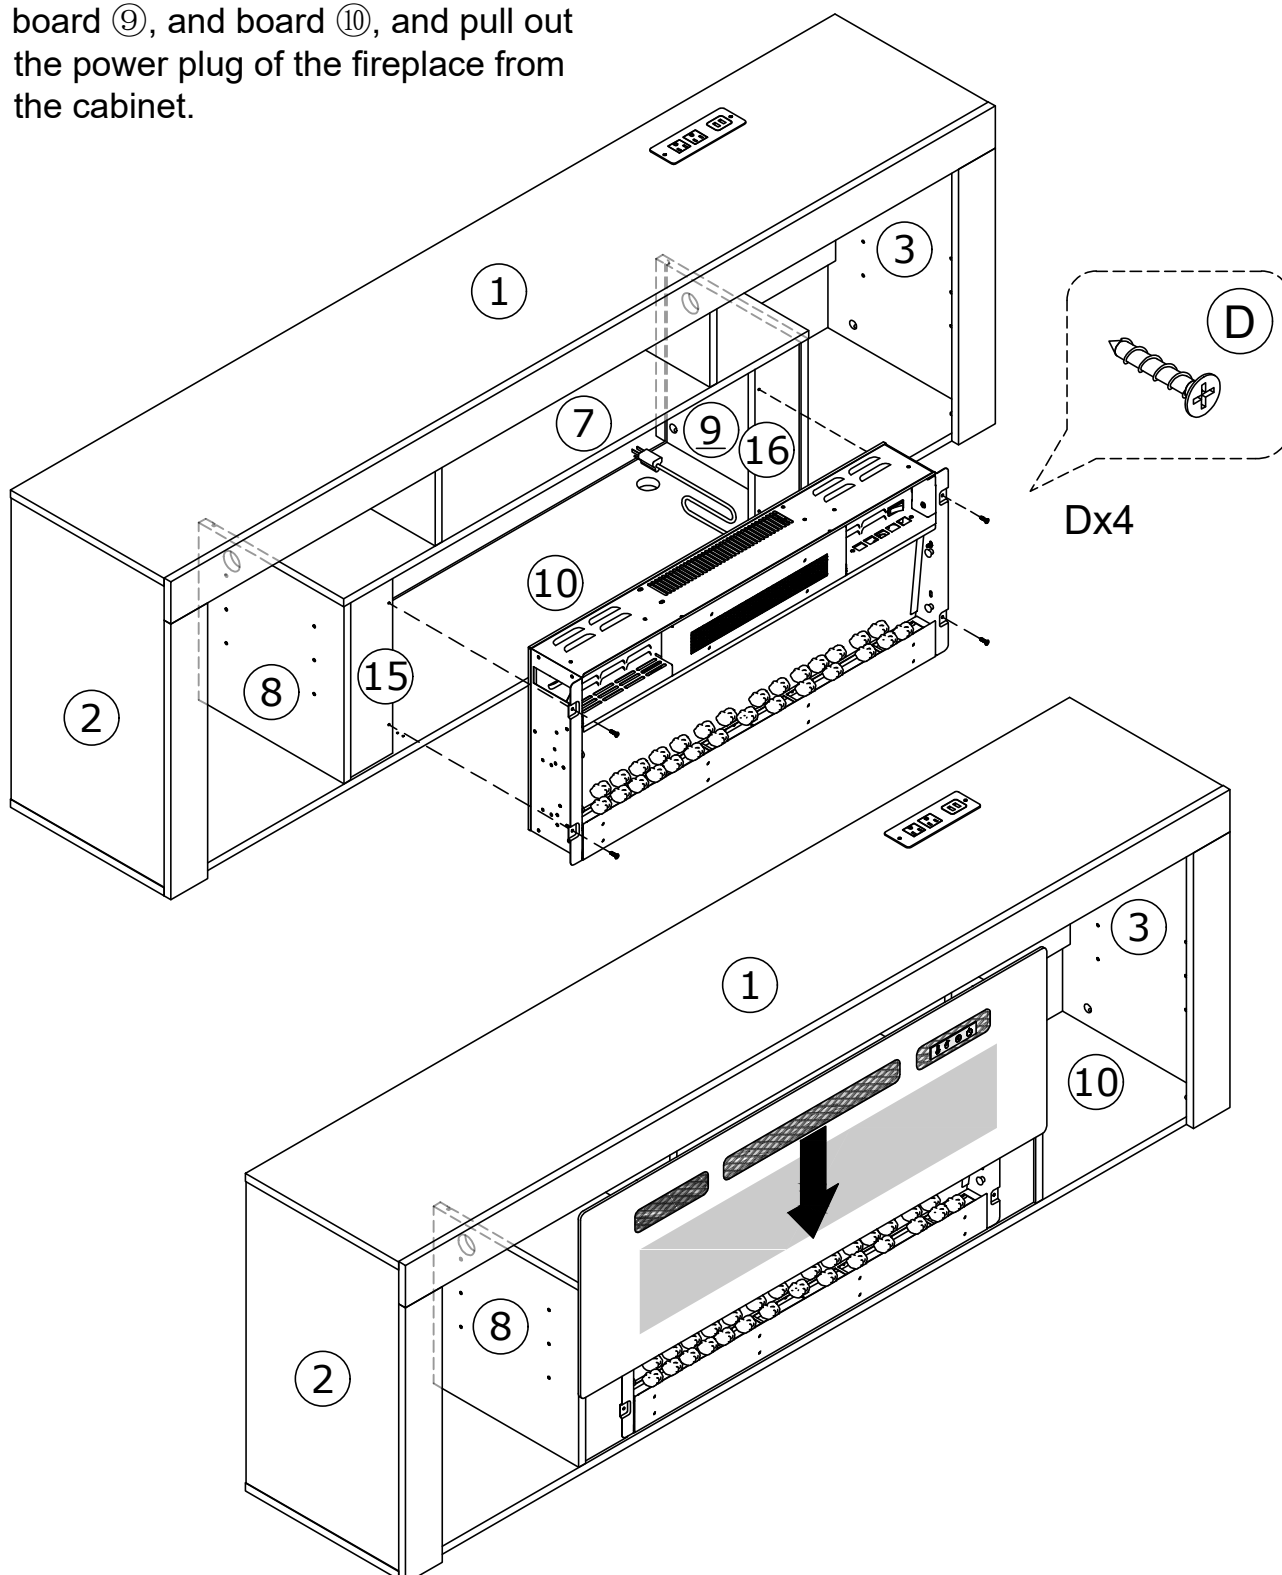


22

  
R x 8

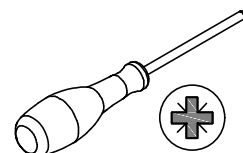

 
 
To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

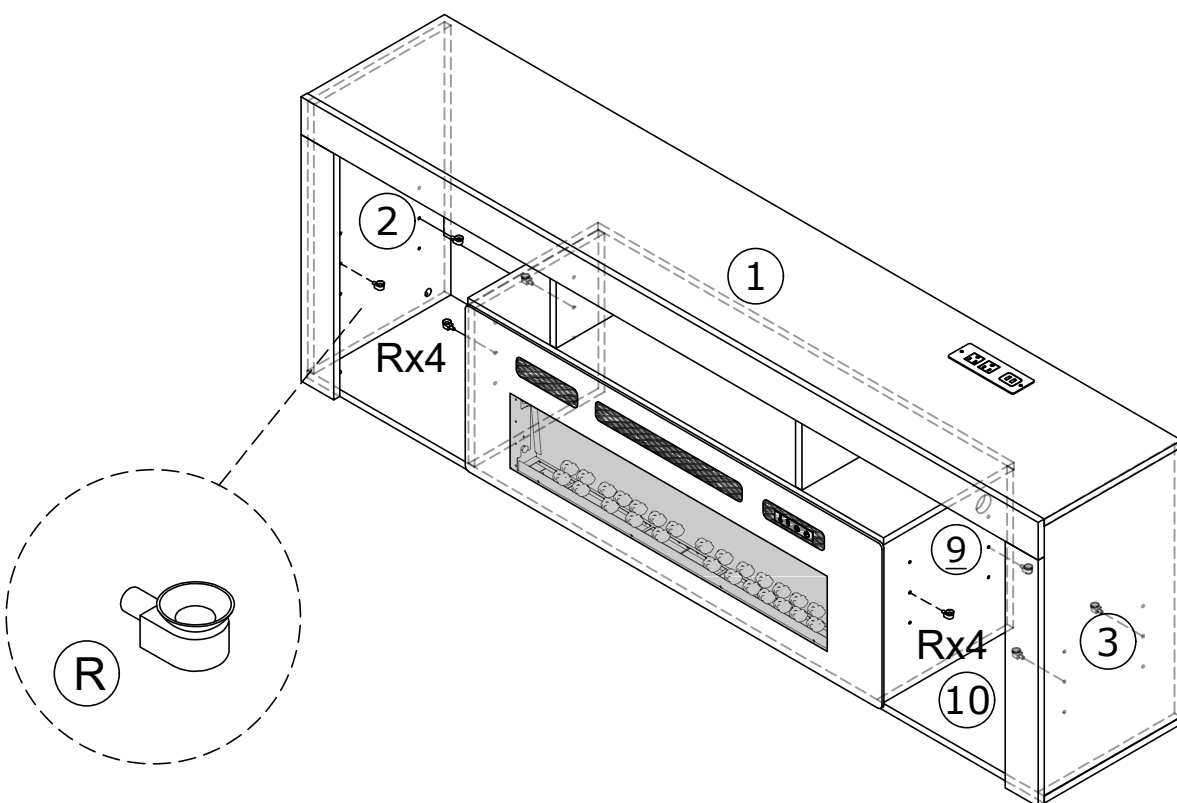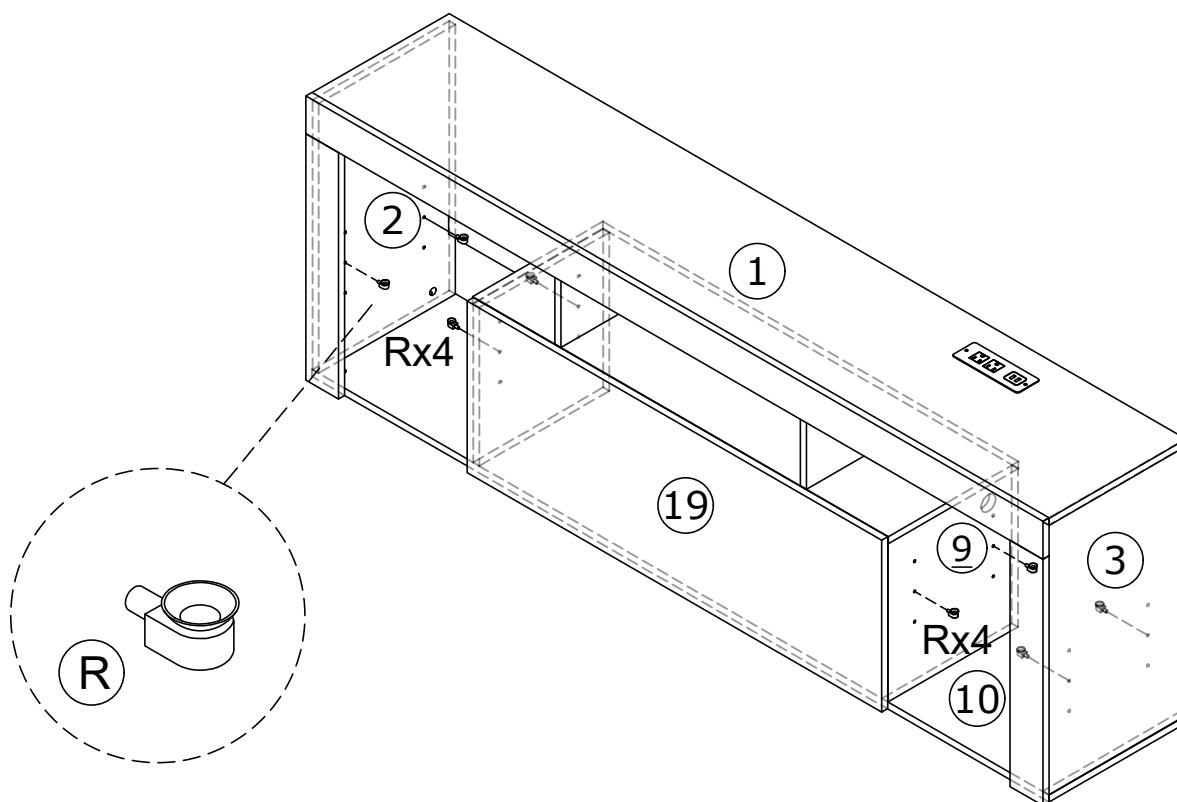


23



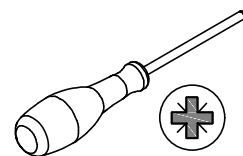 


   To assemble a cabinet with a fireplace, please follow the steps outlined in the dashed box.

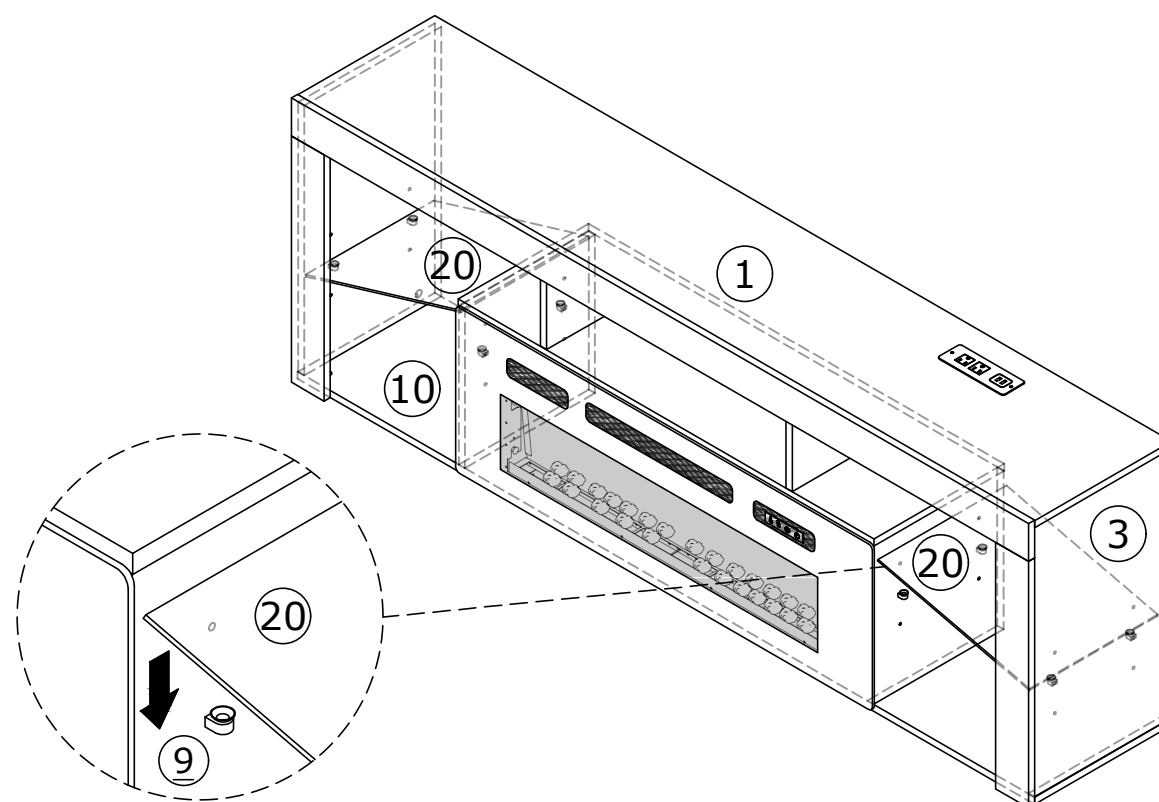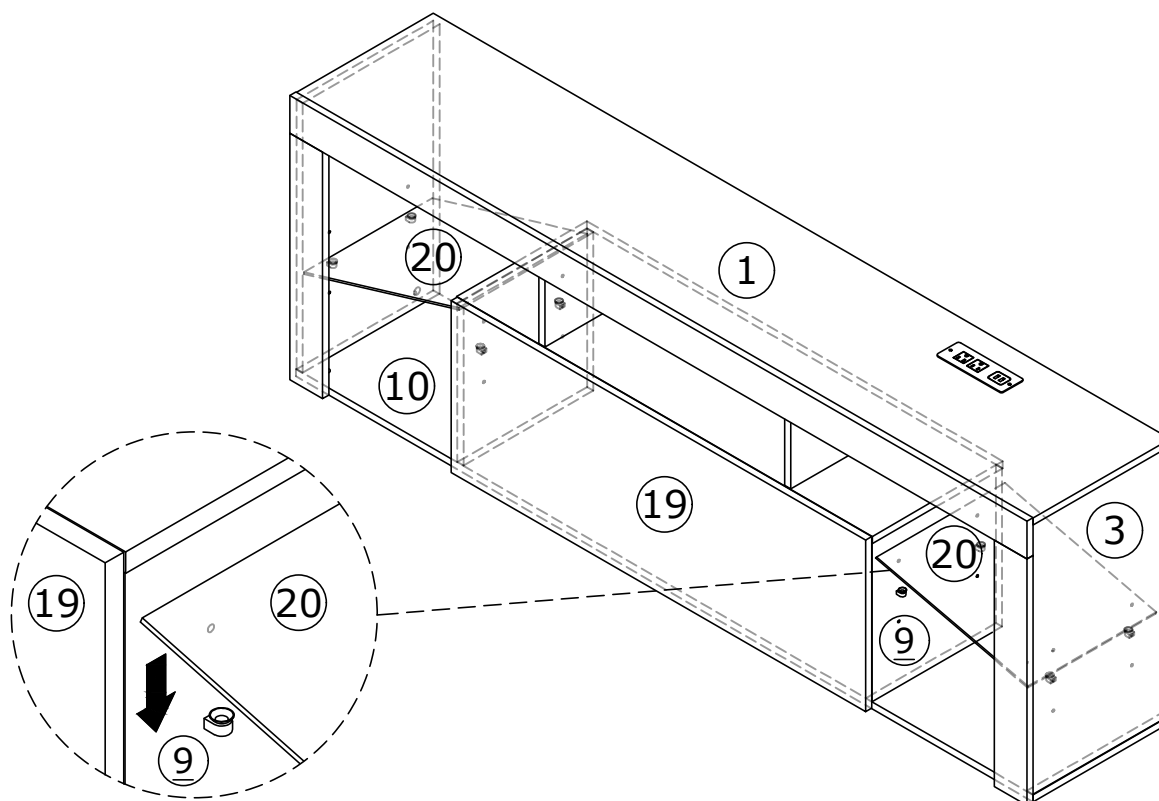


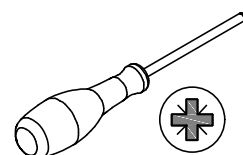


   To assemble a cabinet with a fireplace, please skip this step.

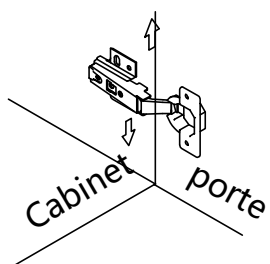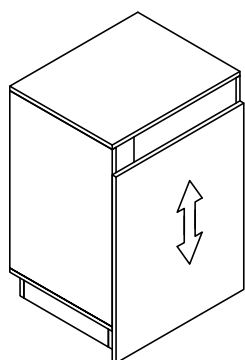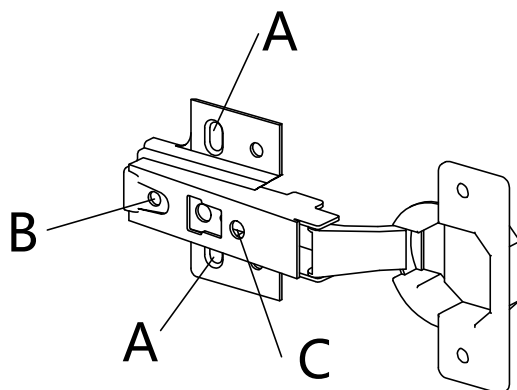



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

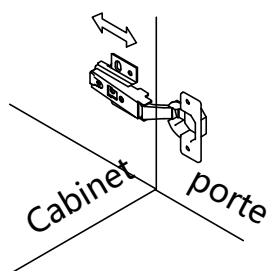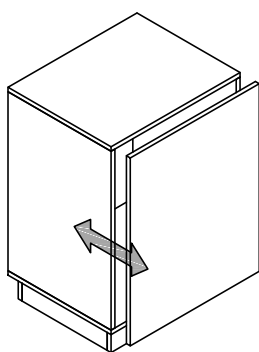

To adjust depth.

  
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

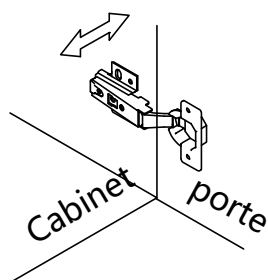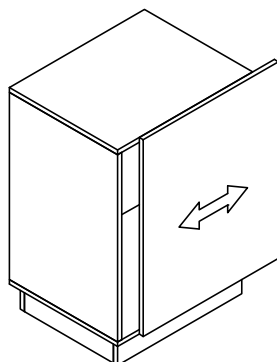

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

 -LED lamp with effective remote control distance of 5 meters

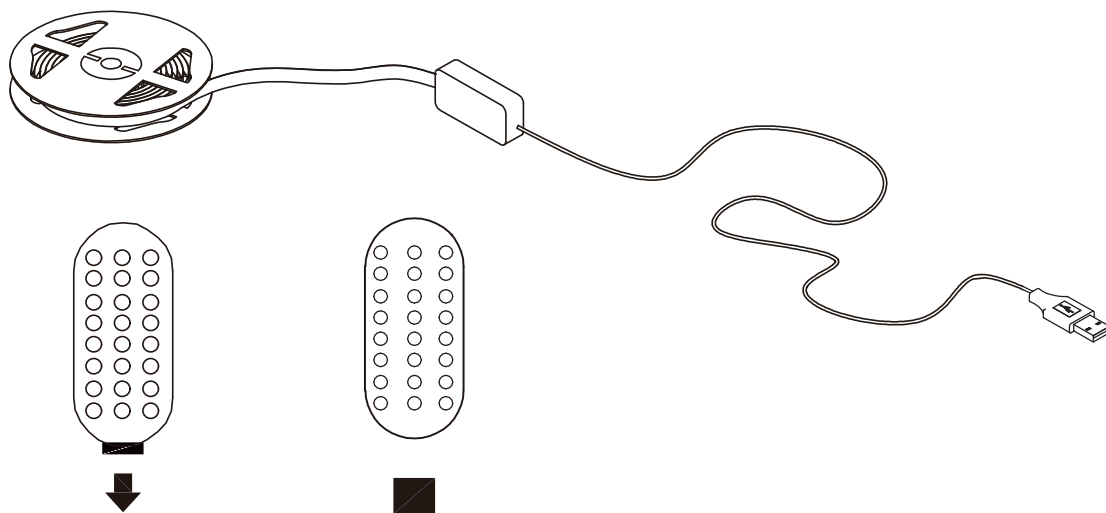


1. Take out the remote control gasket

Remote control mode

 	In any state press these two keys to turn on/off the light strip.
 	When light is on, press these two keys to reduce-or increase+brightness there are 10 brightness levels for adiustment.
      	Press relevant keys to select particular colors
	Press this key to switch static colors There are 16 kinds for chosen.

 APP PROGRAM USAGE

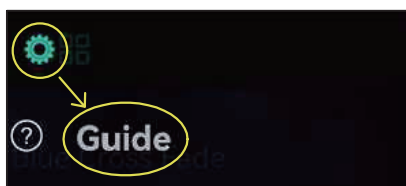

Notes:
detailed operating instructions,
enter the menu "Guide":

Product Paramters:

- Bluetooth: BLEV4.2
- Input Voltage:4.5~26V
- Working Temp:-25~75°C
- Size:43*22*11mm
- Weight:30g
- Max Power:144W(24V)

Scan two-dimensional code download APP

- ① Connect LED color strip and controller, power on controller
- ② Scan two-dimensional code download APP:



- ③ Start APP, search and connect controller
- ④ Enjoy the Bluetooth wireless control experience

LED mobile phone Bluetooth controllerProduct Features

- LED Bluetooth controller is directly via mobilephone control remote distance can reach 20m without the need to set up, easy to connect open the software within 5 seconds you can automatically connect the controller
 - Flow the rhythm of the music changes
 - Group control
 - Brightness, speed addition and subtraction
 - Maximum can be 10 meters RGB(W) strip
 - The software shows that the text is based onthe language of the mobile phone set up automatic transformation of Chinese and English
- Animation Effect:
- Colorful gradient
 - All kinds of monochrome, double color gradient
 - All kinds of monochrome, double color,colorfull flashing
 - Colorful jump
 - Follow the thythm of the music chagnes