


Twelve Drawer Dresser


DJ0972-160CM

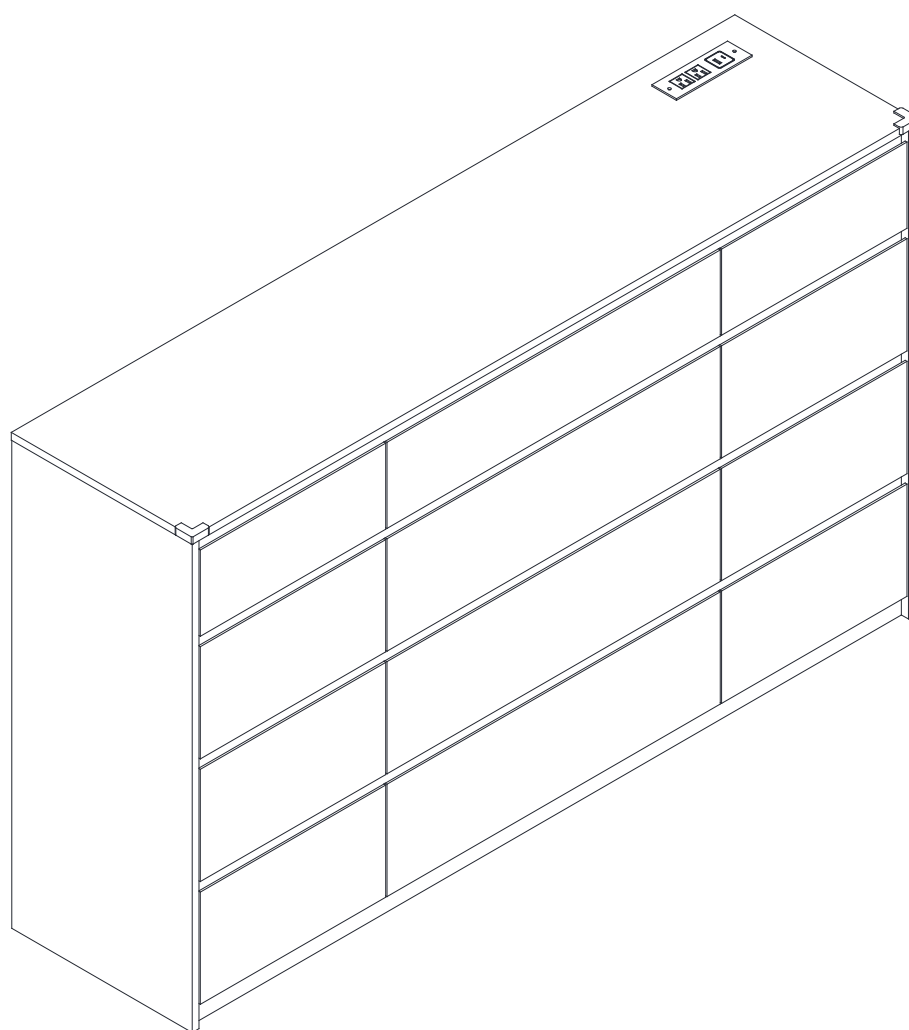

Installation Video QR





DJ0972
<https://vimeo.com/1097520186>

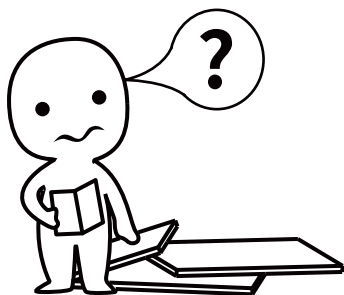


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

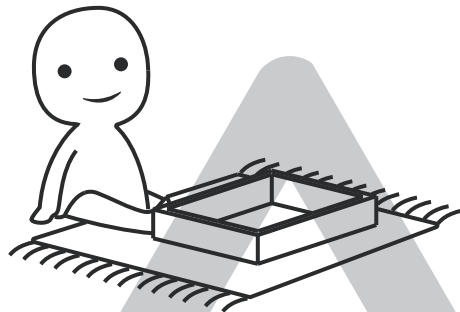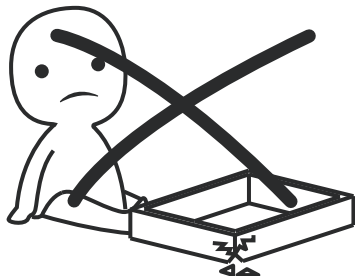



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

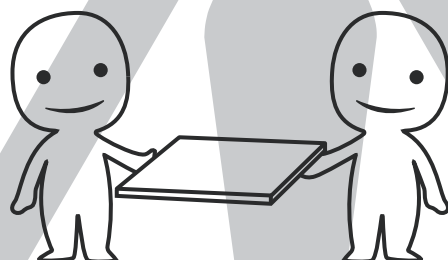

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

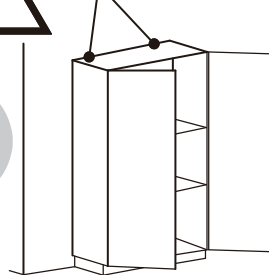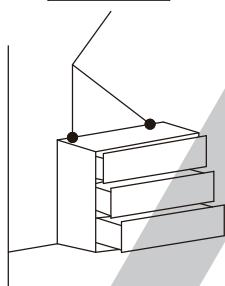

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Please use proper tools for assembly. Using an electric screwdriver can accelerate the assembly speed, but please do not overtighten the screws.


SAFETY TIPS !

Static charge may cause dust on foam - clean with a dry or damp cloth. Small foam strands may be present — handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.


Board Identification

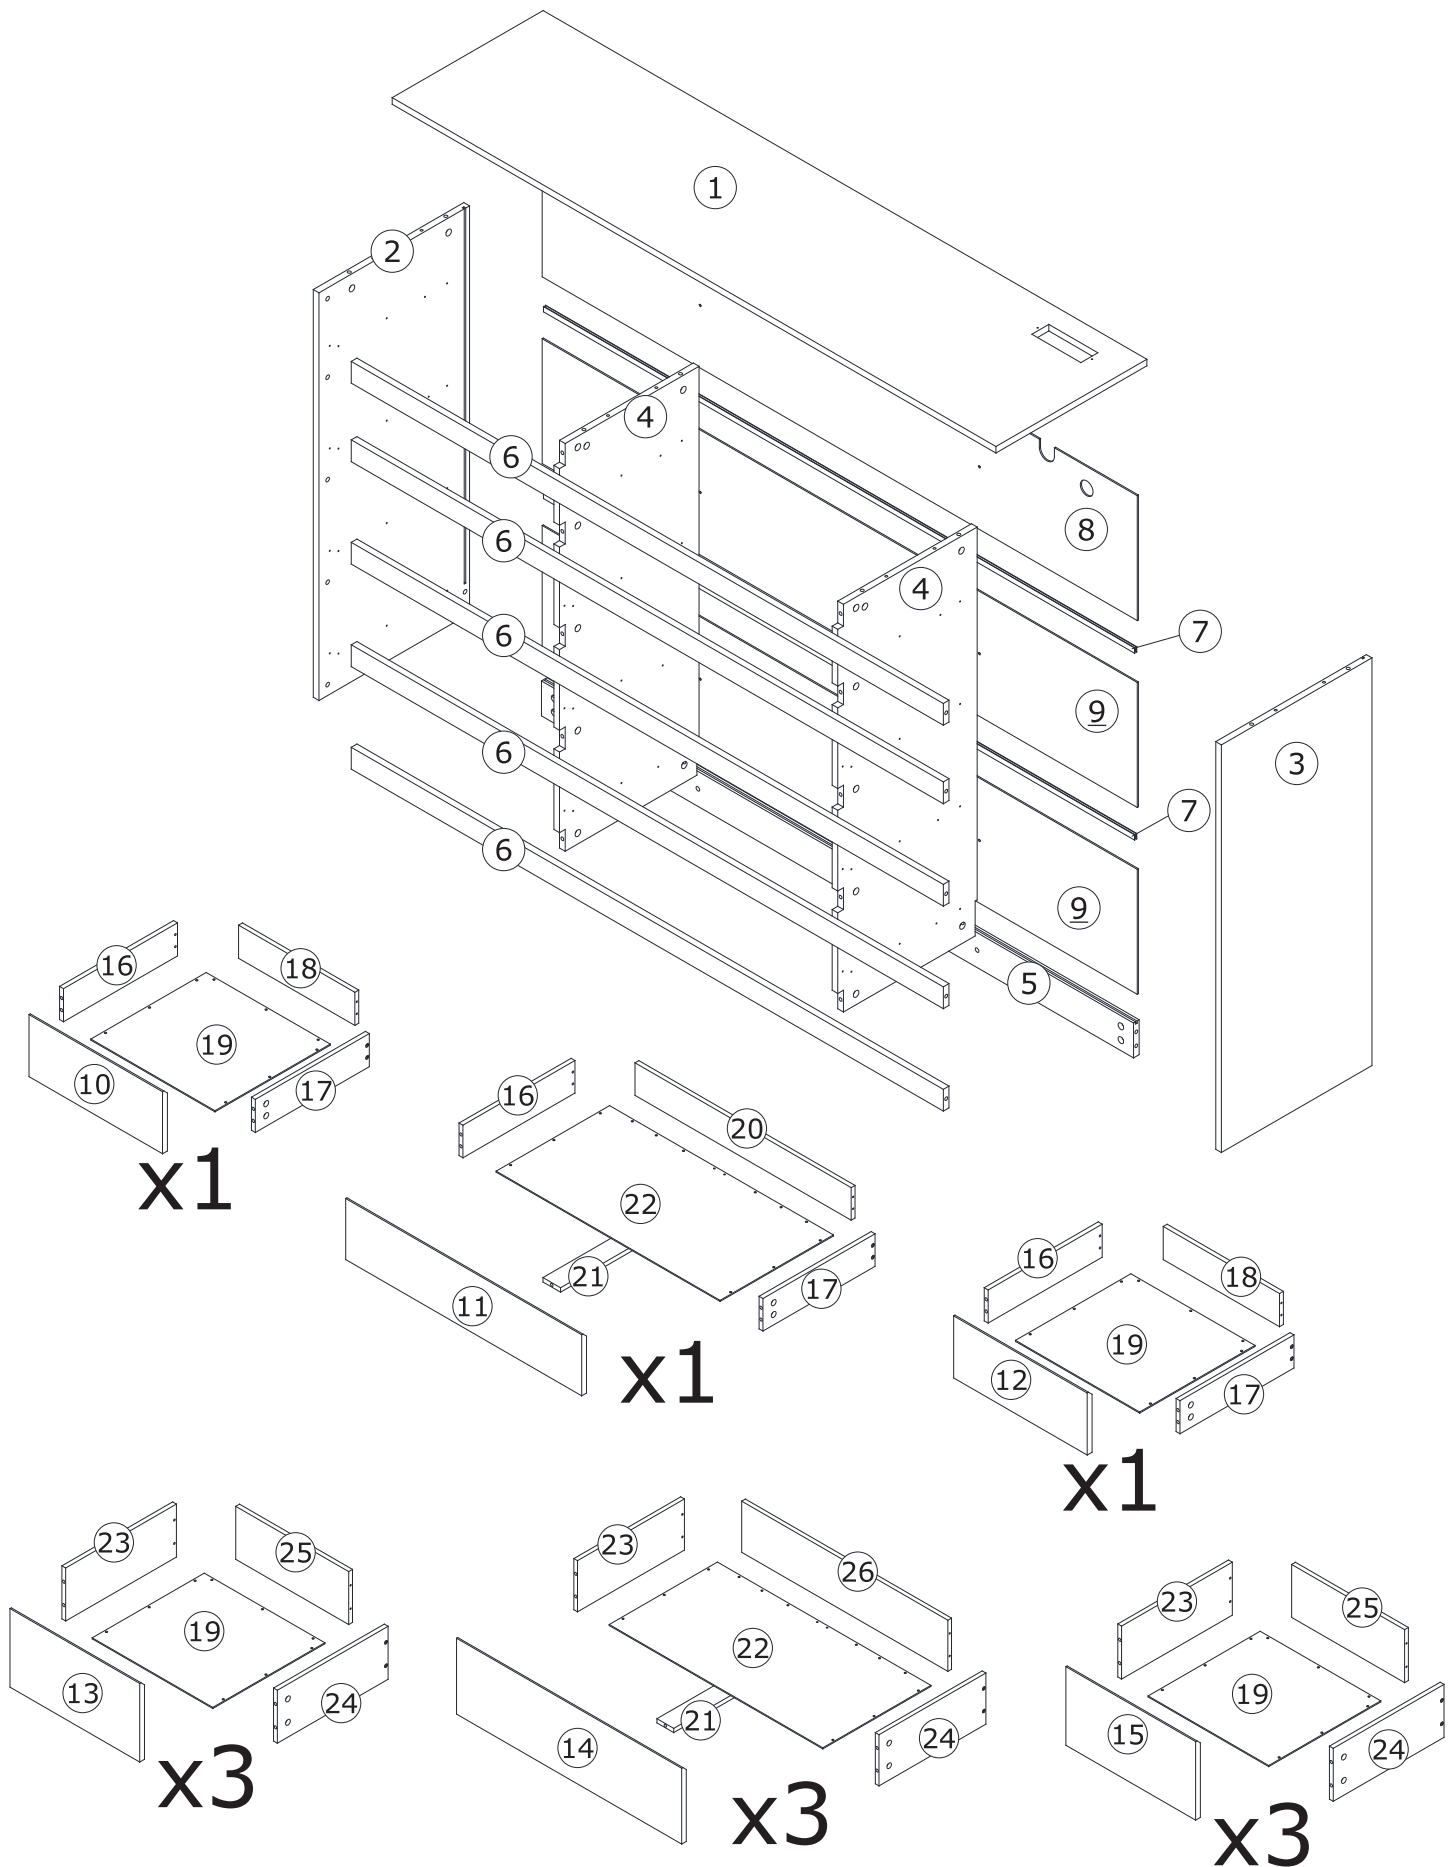


PARTS LIST

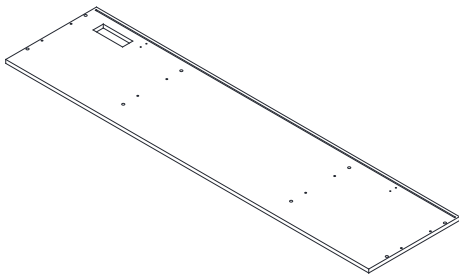


①

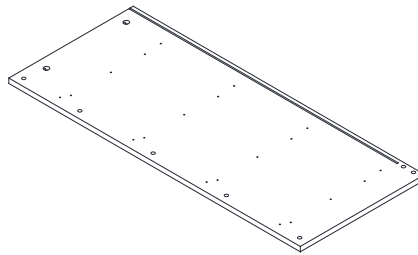


②

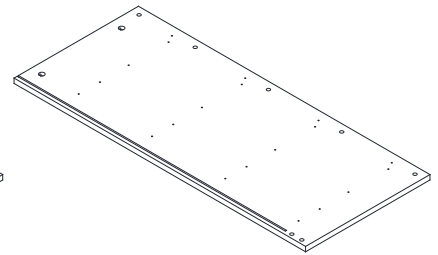


③

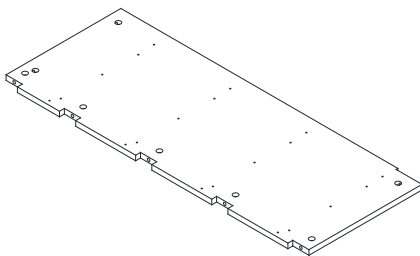


④ x2

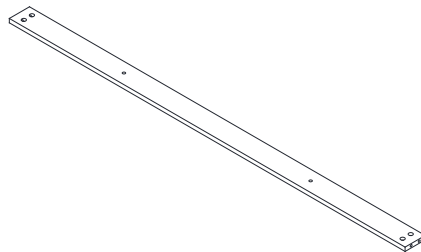


⑤

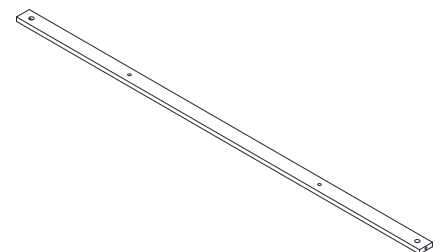


⑥ x5

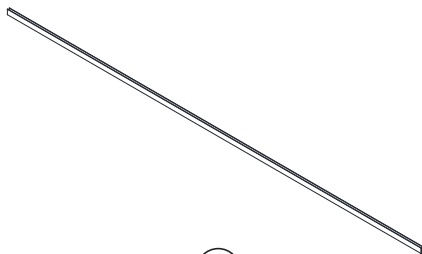


⑦ x2

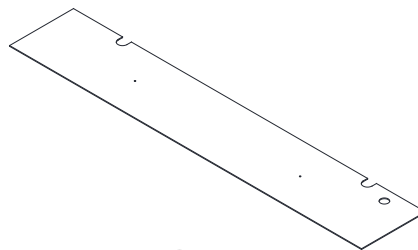


⑧

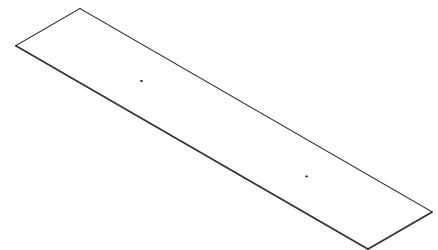


⑨ x2

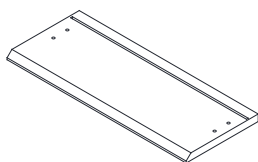


⑩

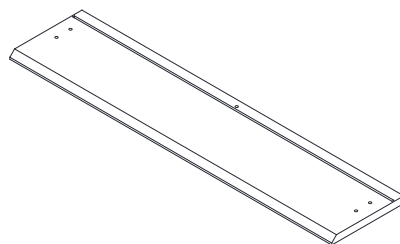


⑪

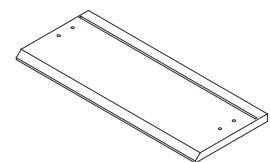


⑫

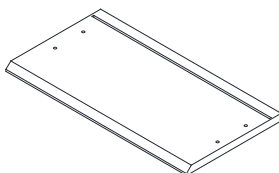

⑬ x3

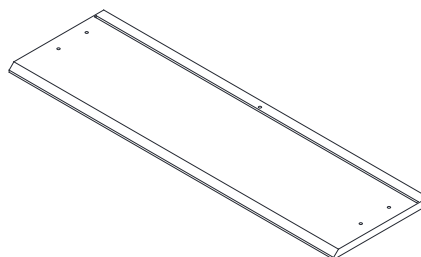


⑭ x3

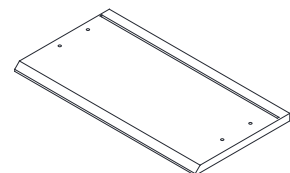


⑮ x3


PARTS LIST

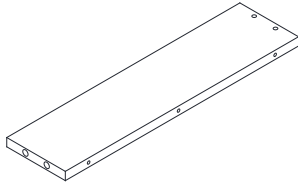


①⑥x3

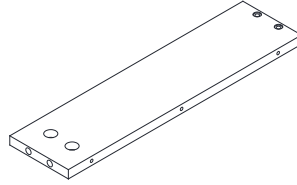


①⑦x3

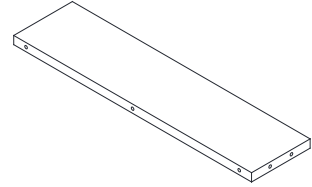


①⑧x2

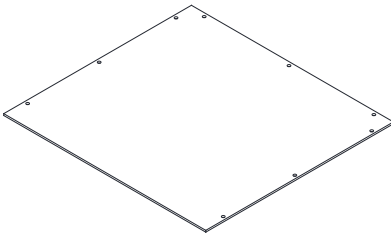


①⑨x8

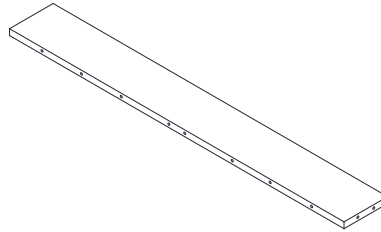


②⑦

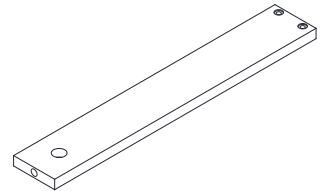


②①x4

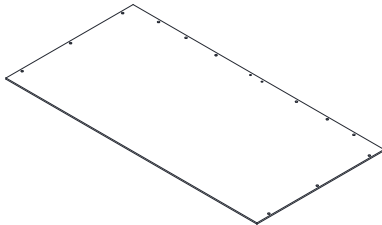


②②x4

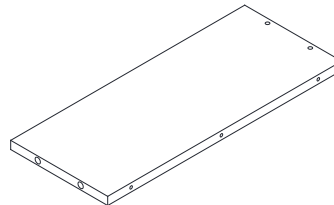


②③x9

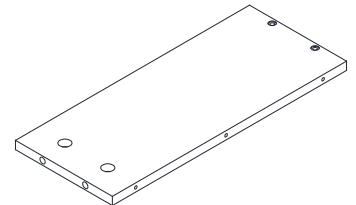


②④x9

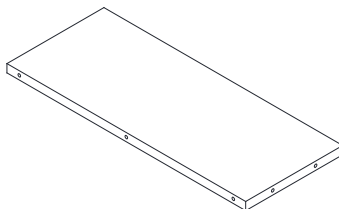



②⑤x6

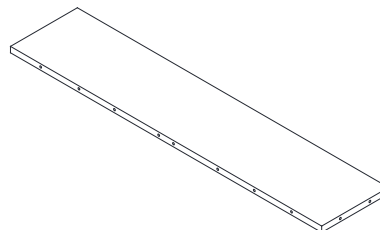

②⑥x3

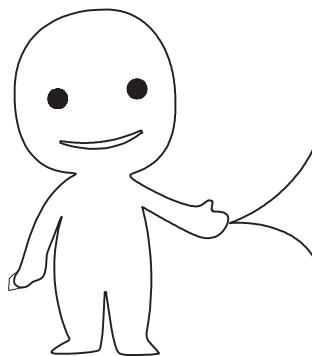

Please prepare the following tools

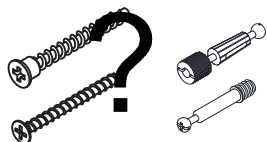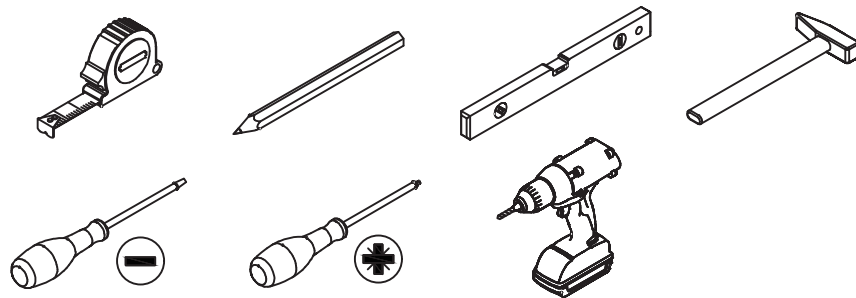

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size


Tips: The number after "+" represents the spare hardware.

A x 86




Ø15 X 9.5 mm

B x 34




Ø7 X 40 mm

C x 8



Ø 6 x 30 mm

D x 120




Ø3.5 X 12 mm

E x 120




Ø3.5 X 16 mm

F x 2



Ø3.5 X 12 mm

G x 1

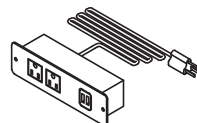

H x 12




H-1




H-2

K x 52



Ø7 X 40 mm

L x 56



Ø4 X 35 mm

M x 86




N x 10



x12

350mm

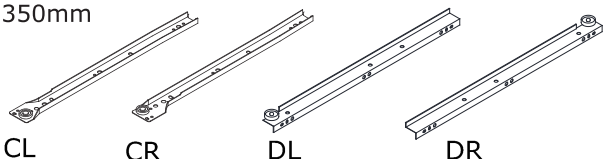

CL

CR

DL

DR

P x 2



R x 2



R-1



R-2



R-3




R-4

S x 6



Ø3 x 14 mm


+ 2

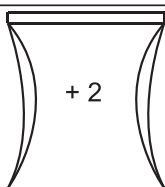




SPARE BAG







Please note during installation that the distance between the edges of the board is small, and it is the straight opening direction of the plastic particles. Do not install it incorrectly!


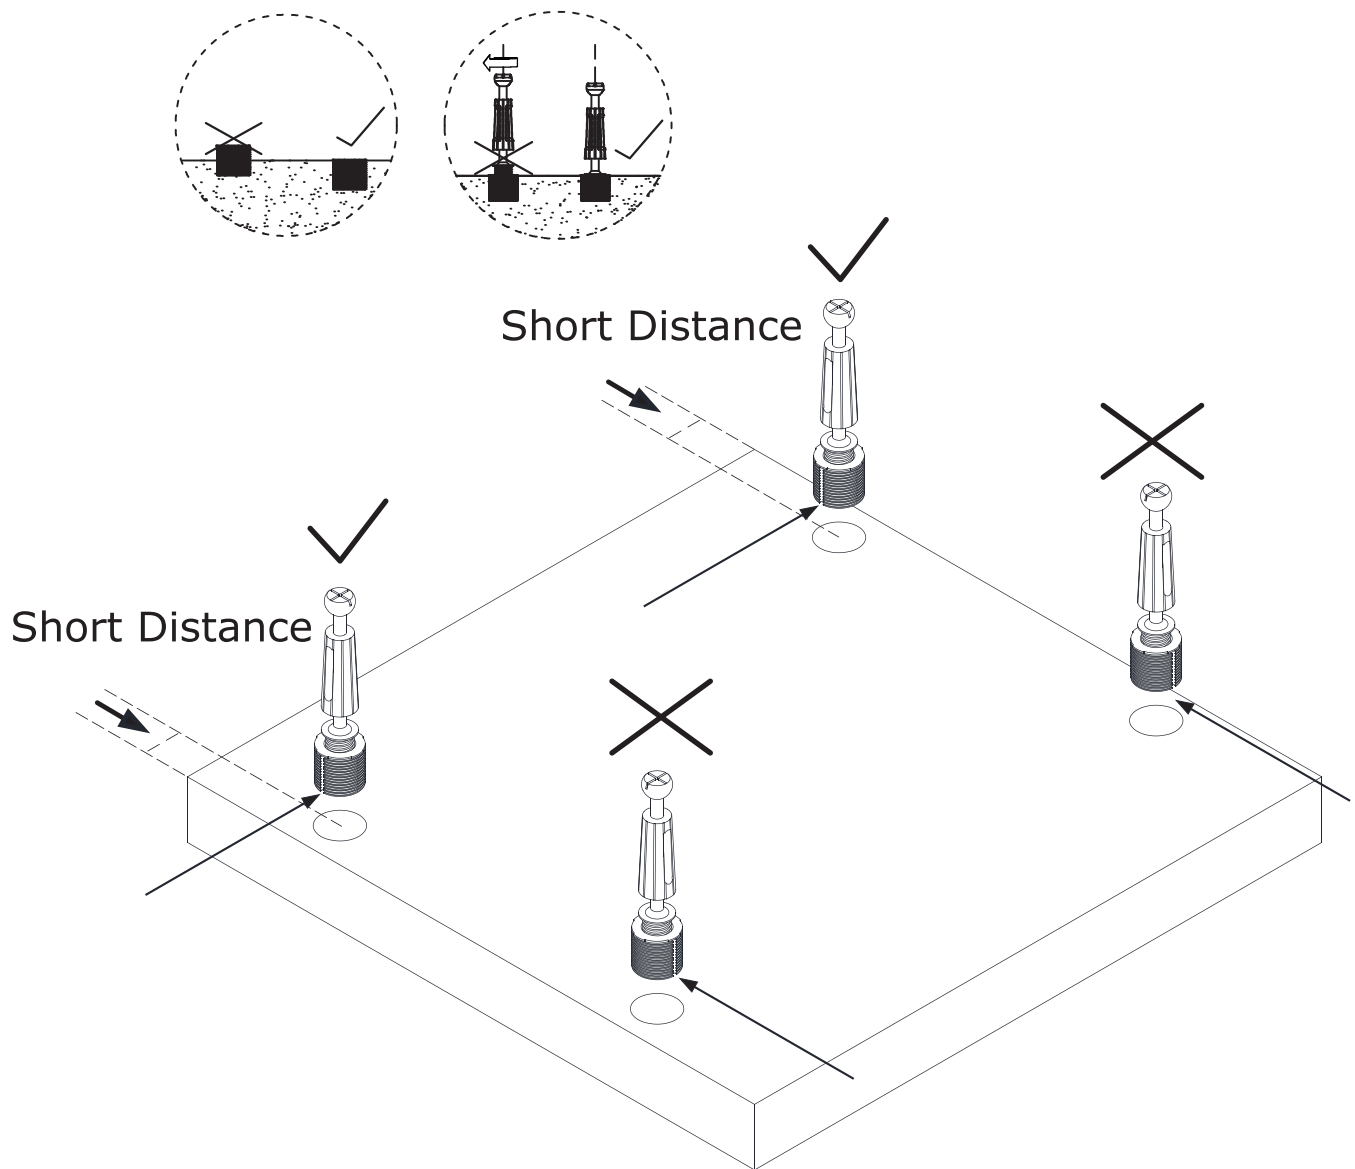




1

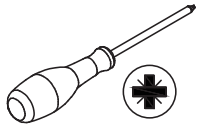D x 80  Ø3.5 X 12 mm	CL x 8  350mm	CR x 8  350mm	C x 4  Ø 6 x 30 mm	
---	--	--	---	---

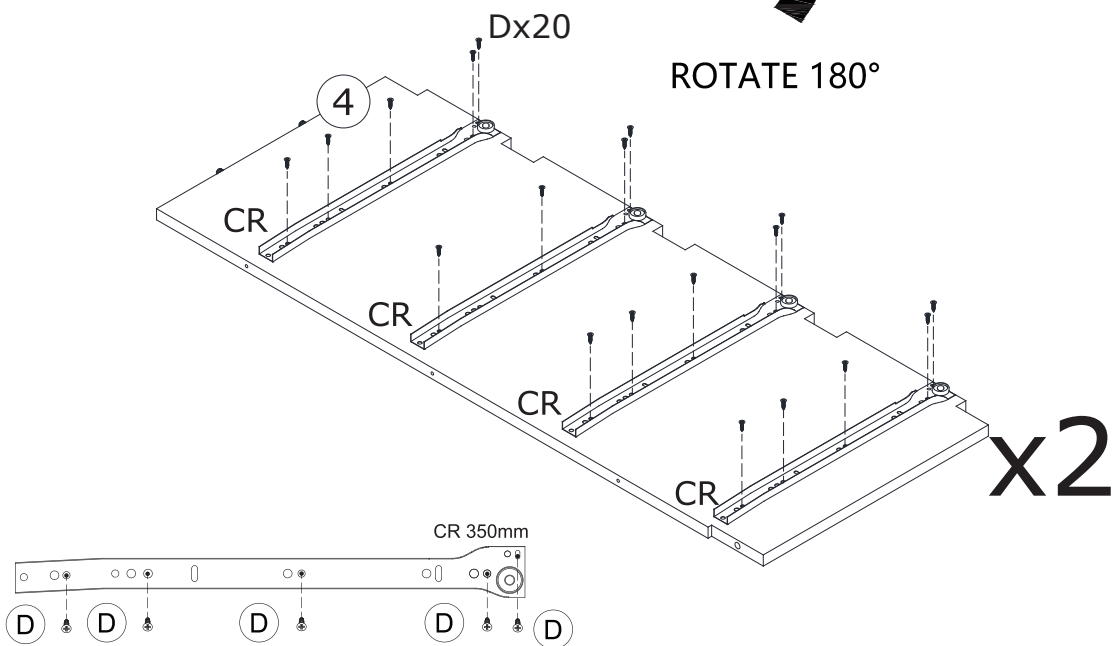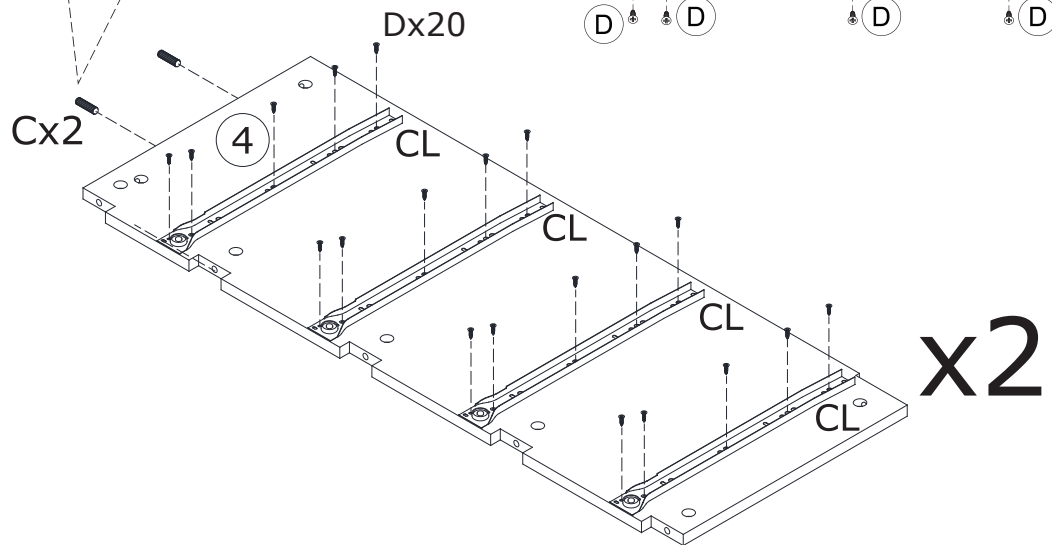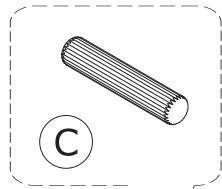
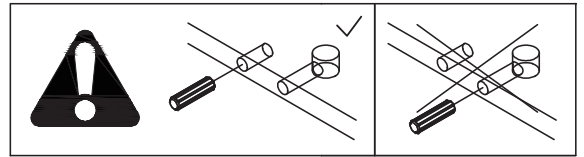




2

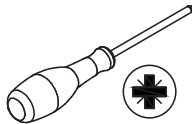B x 10  Ø7 X 40 mm	A x 10  Ø15 x 9.5 mm	
---	---	---

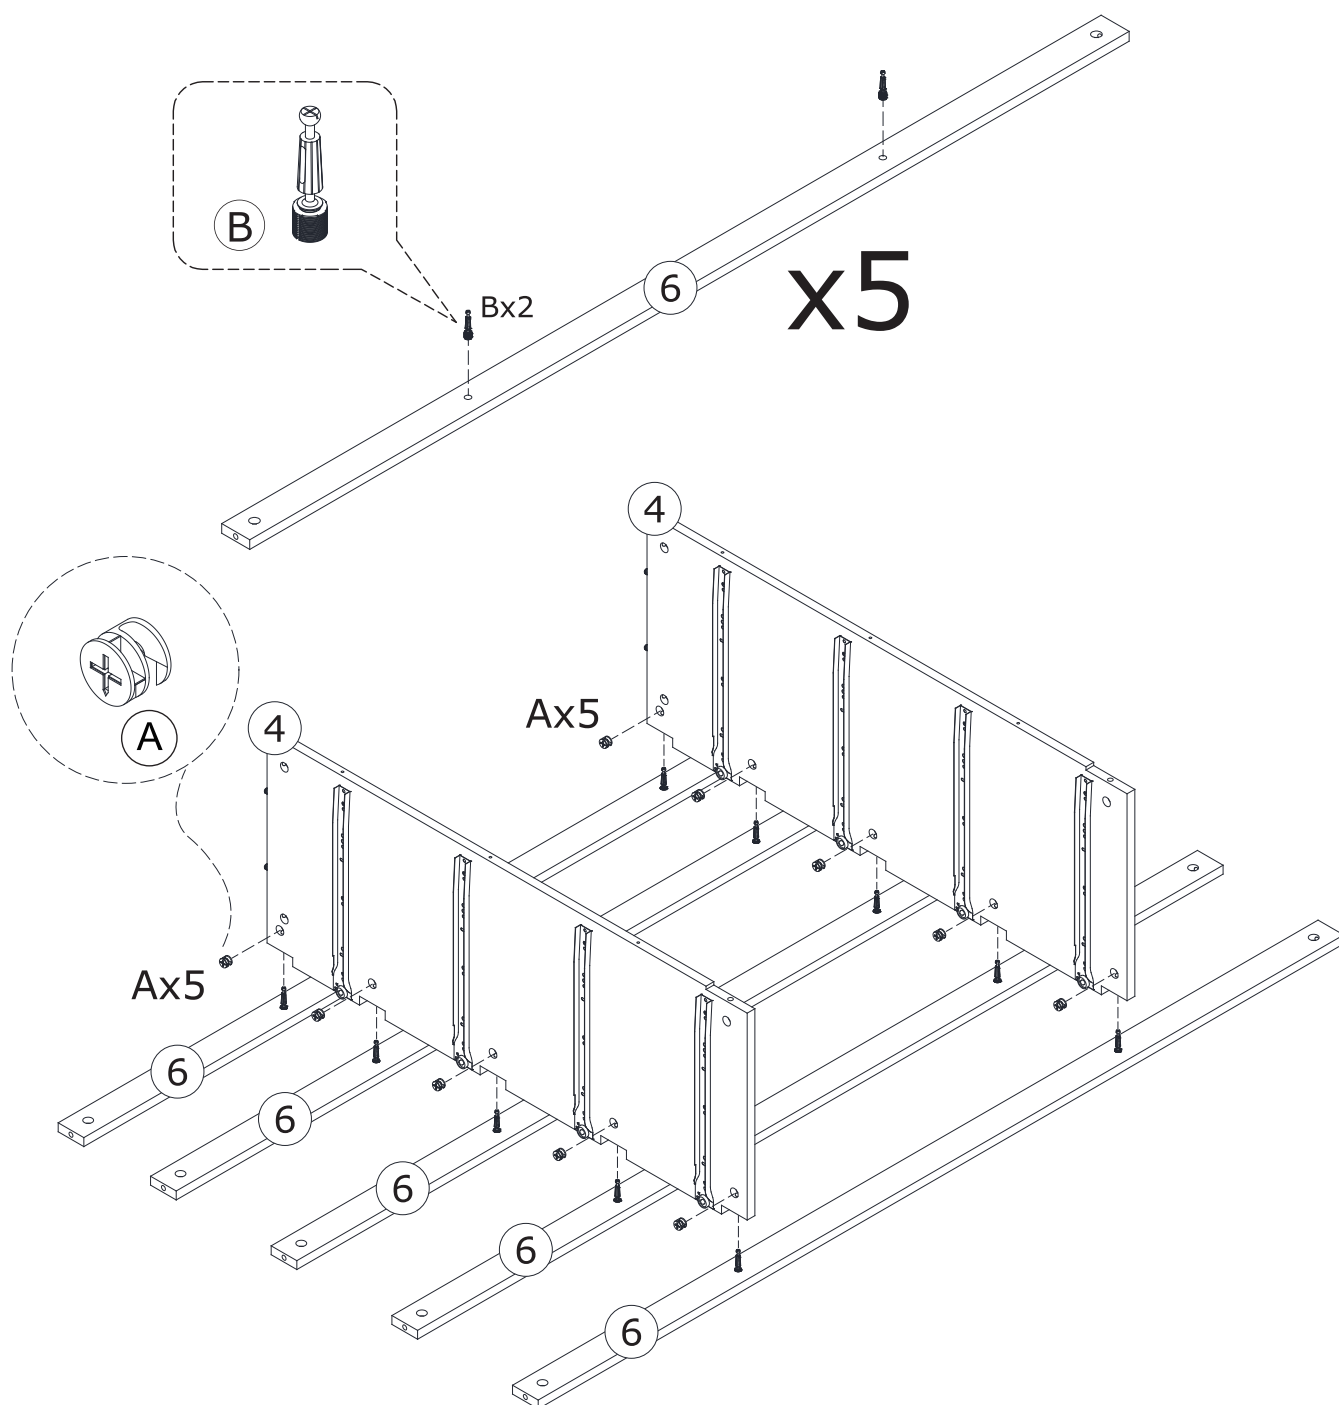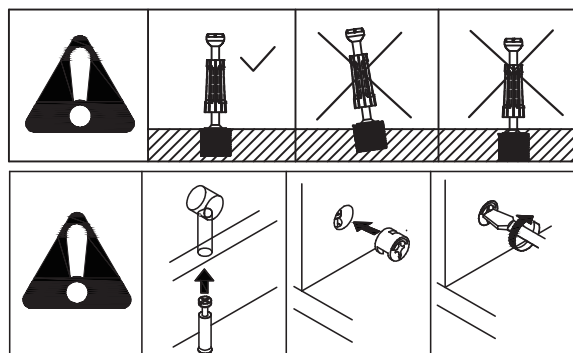



3

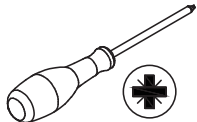B x 2  Ø7 X 40 mm	A x 2  Ø15 x 9.5 mm	
--	--	---

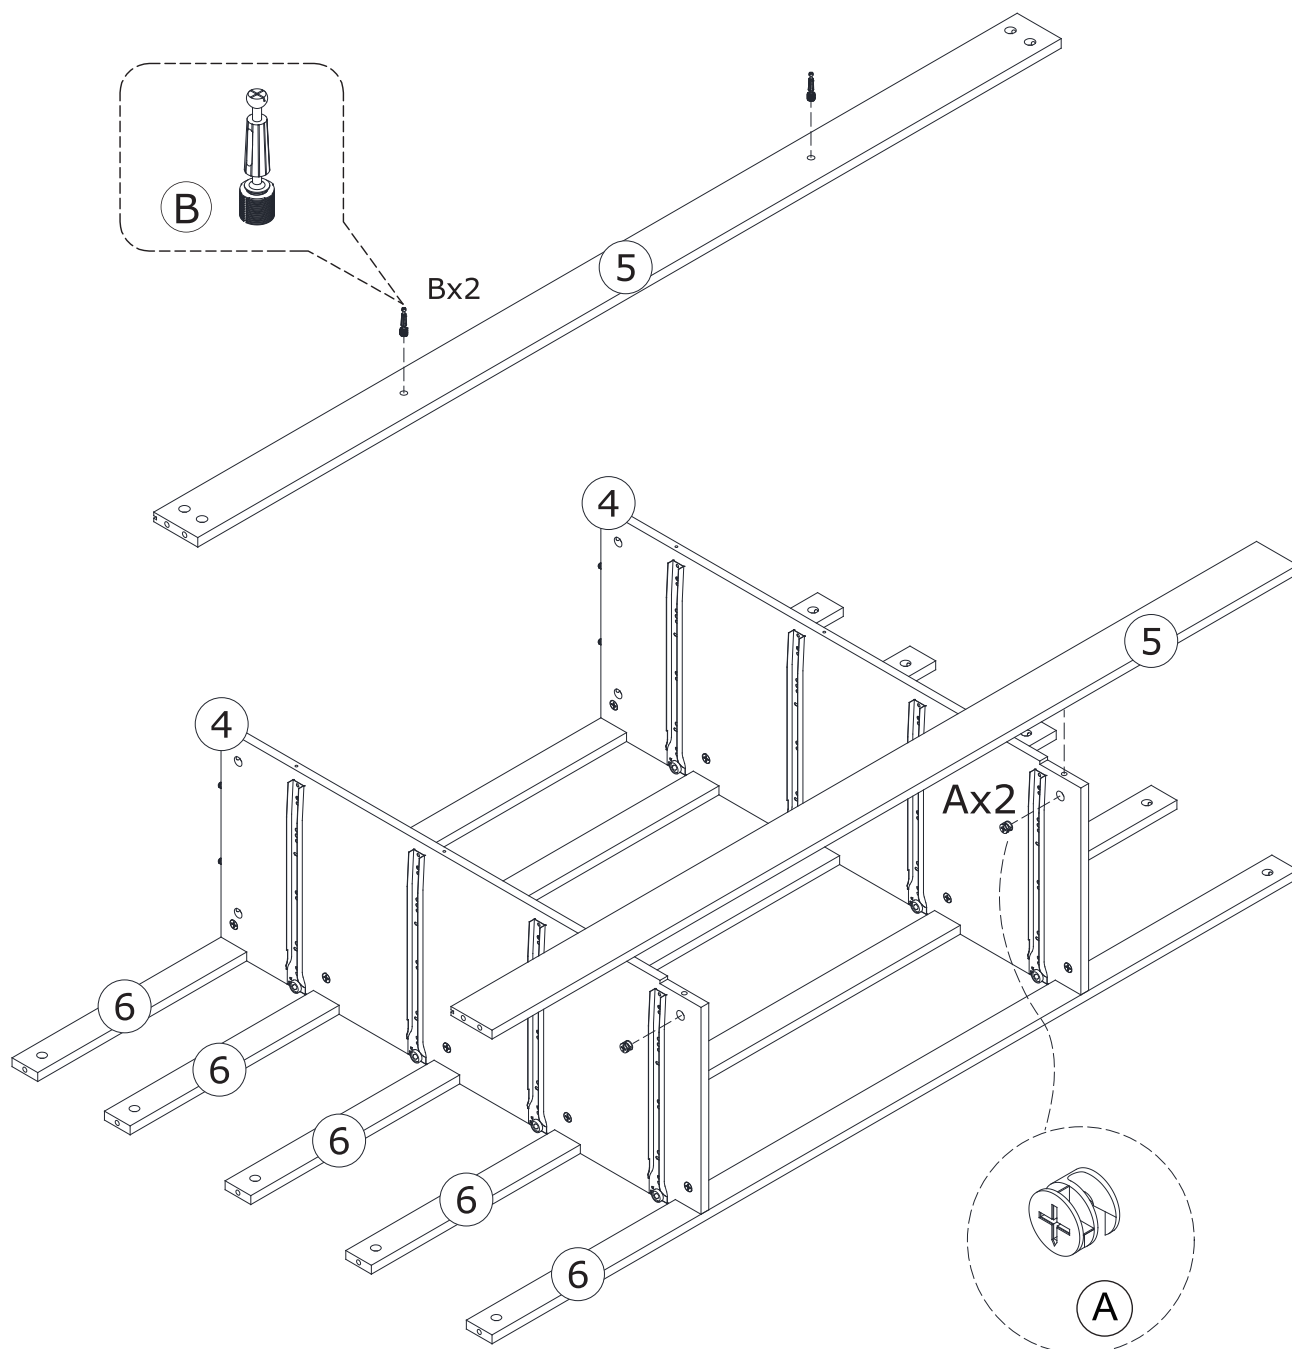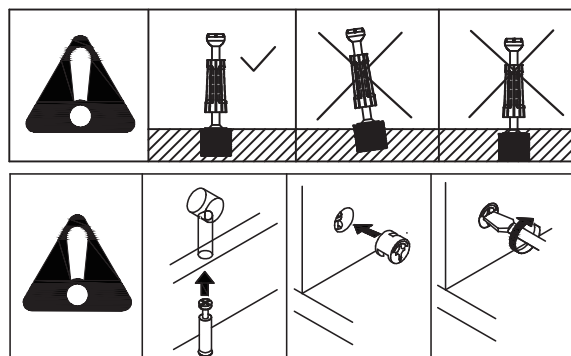


5

A x 14 Ø 15 x 9.5 mm	N x 10	
------------------------------------	---------------	--


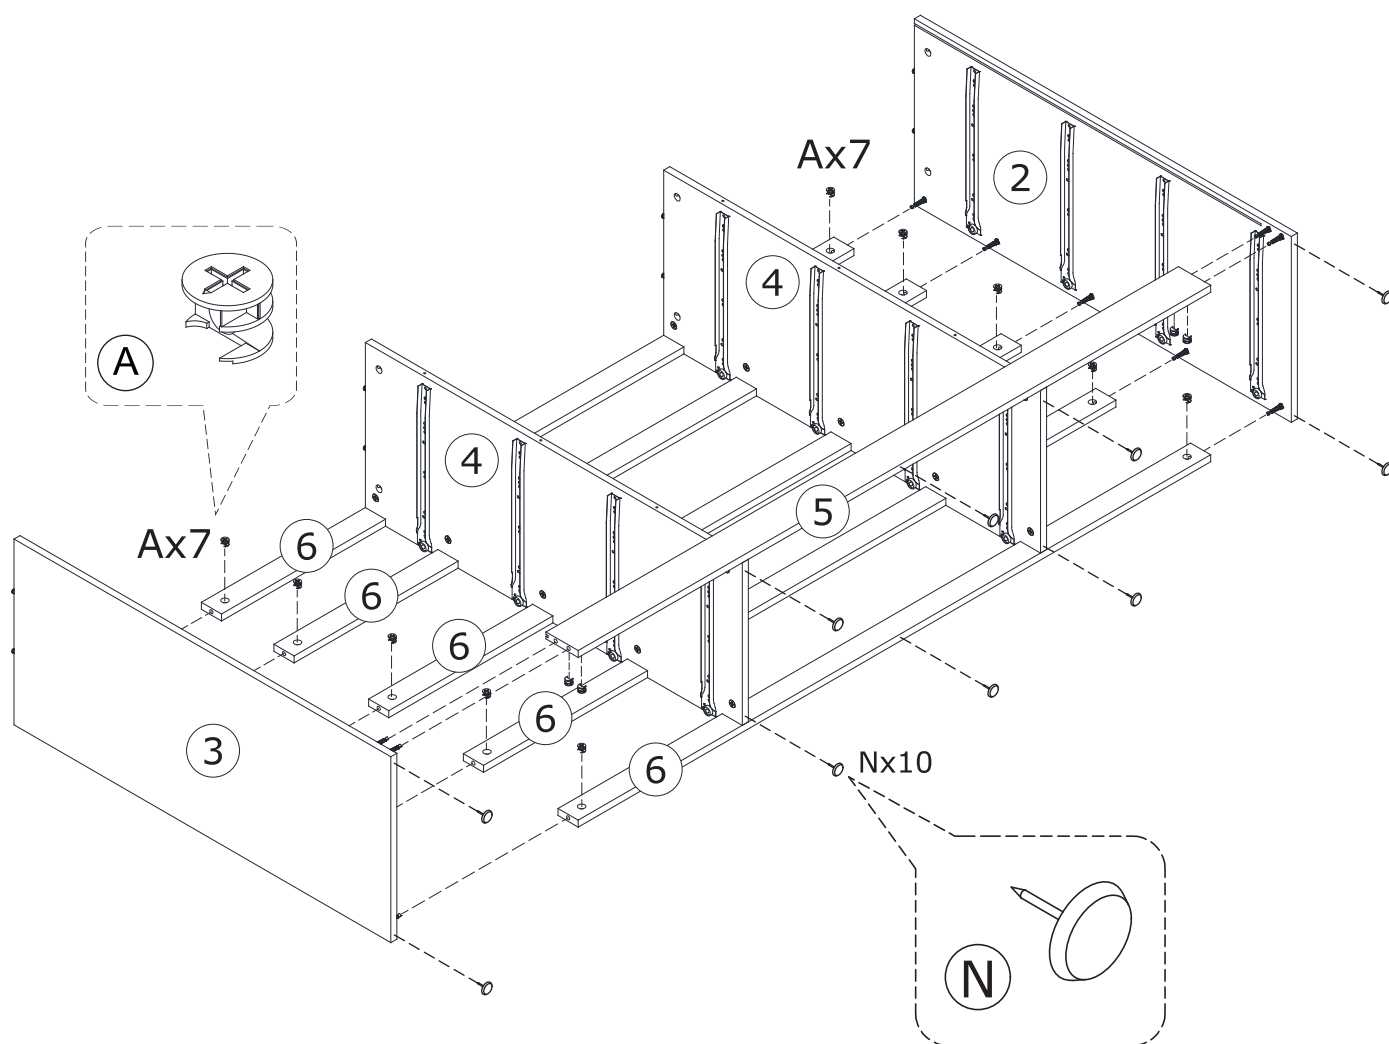
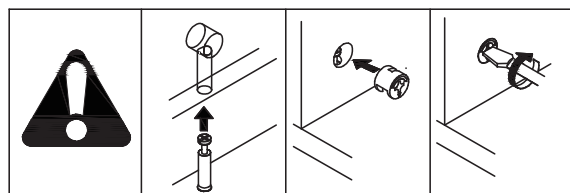


6

Pay attention to the installation direction of the cabinet backboard!

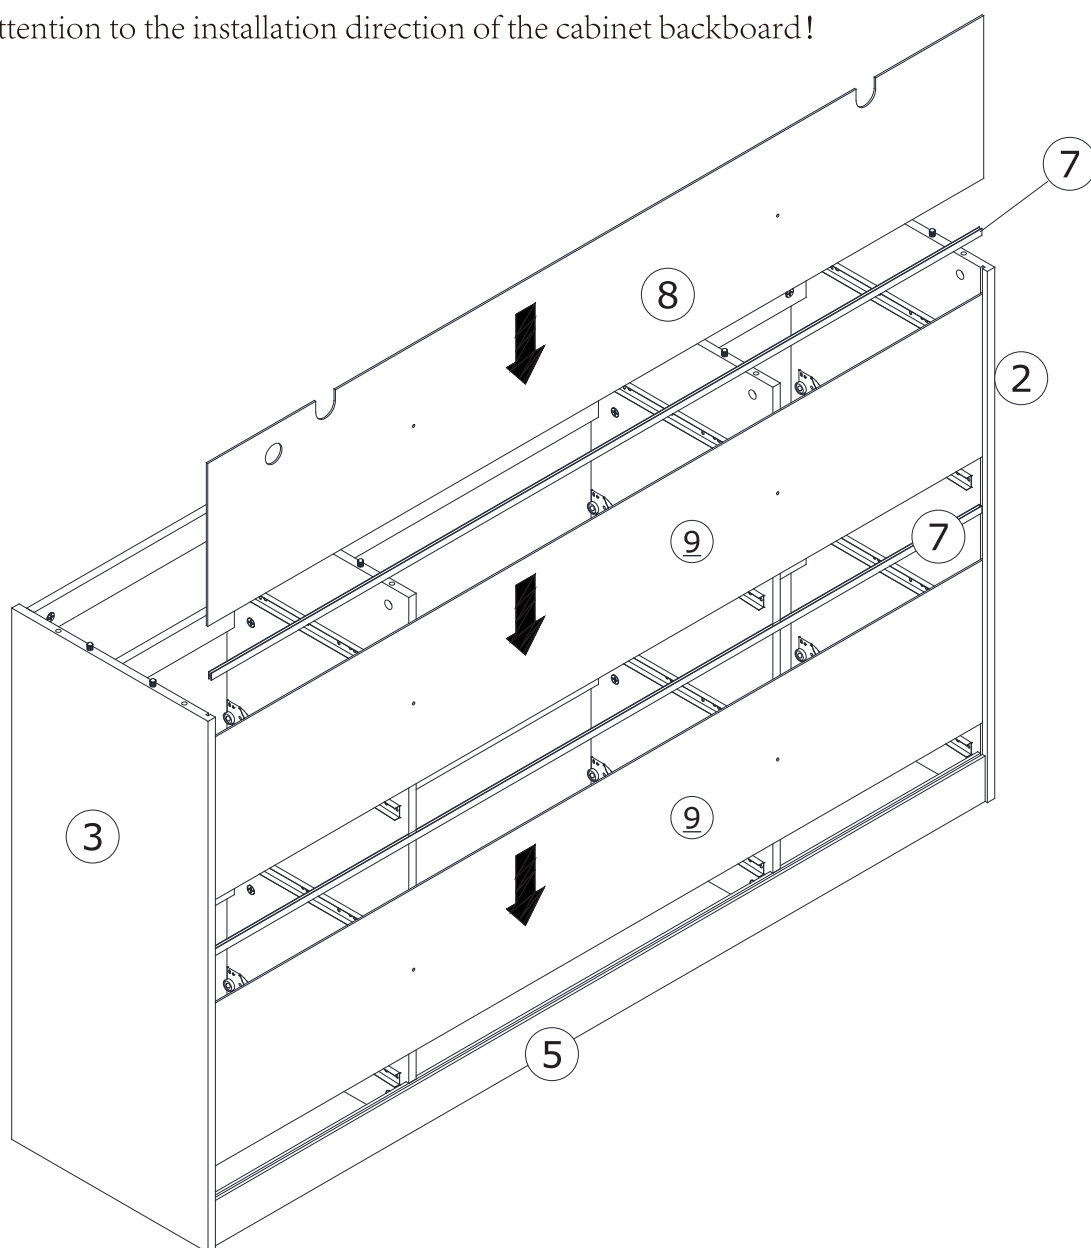

7

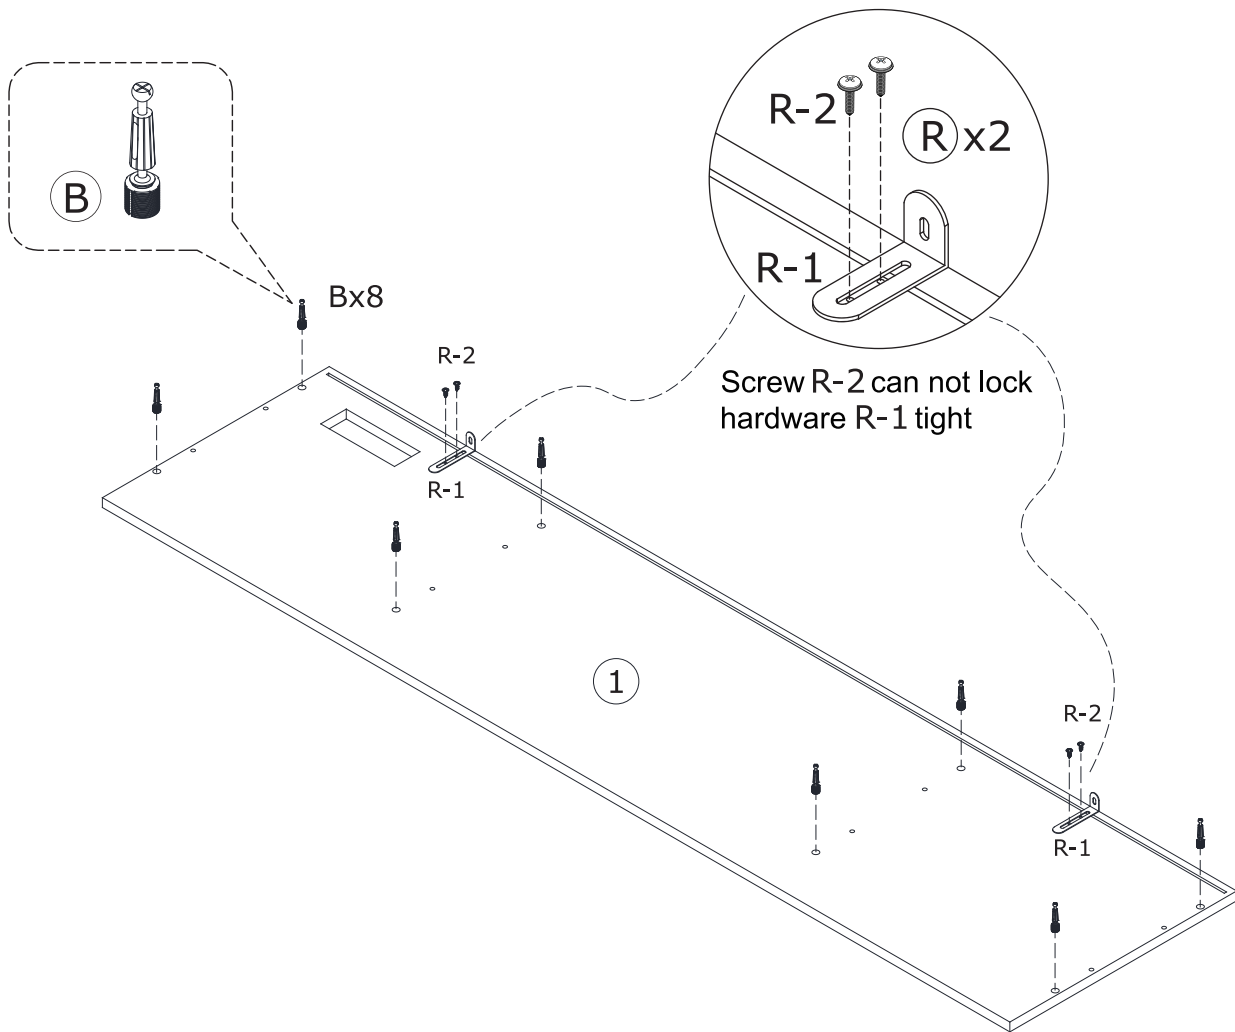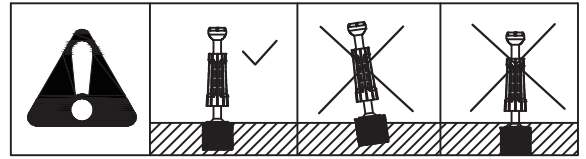
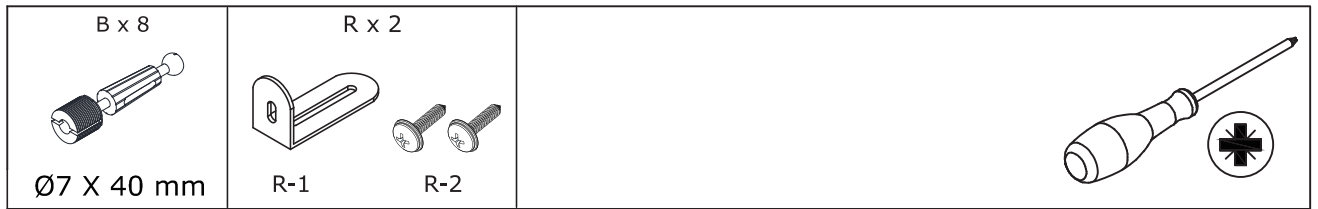


8

A x 8



Ø15 x 9.5 mm

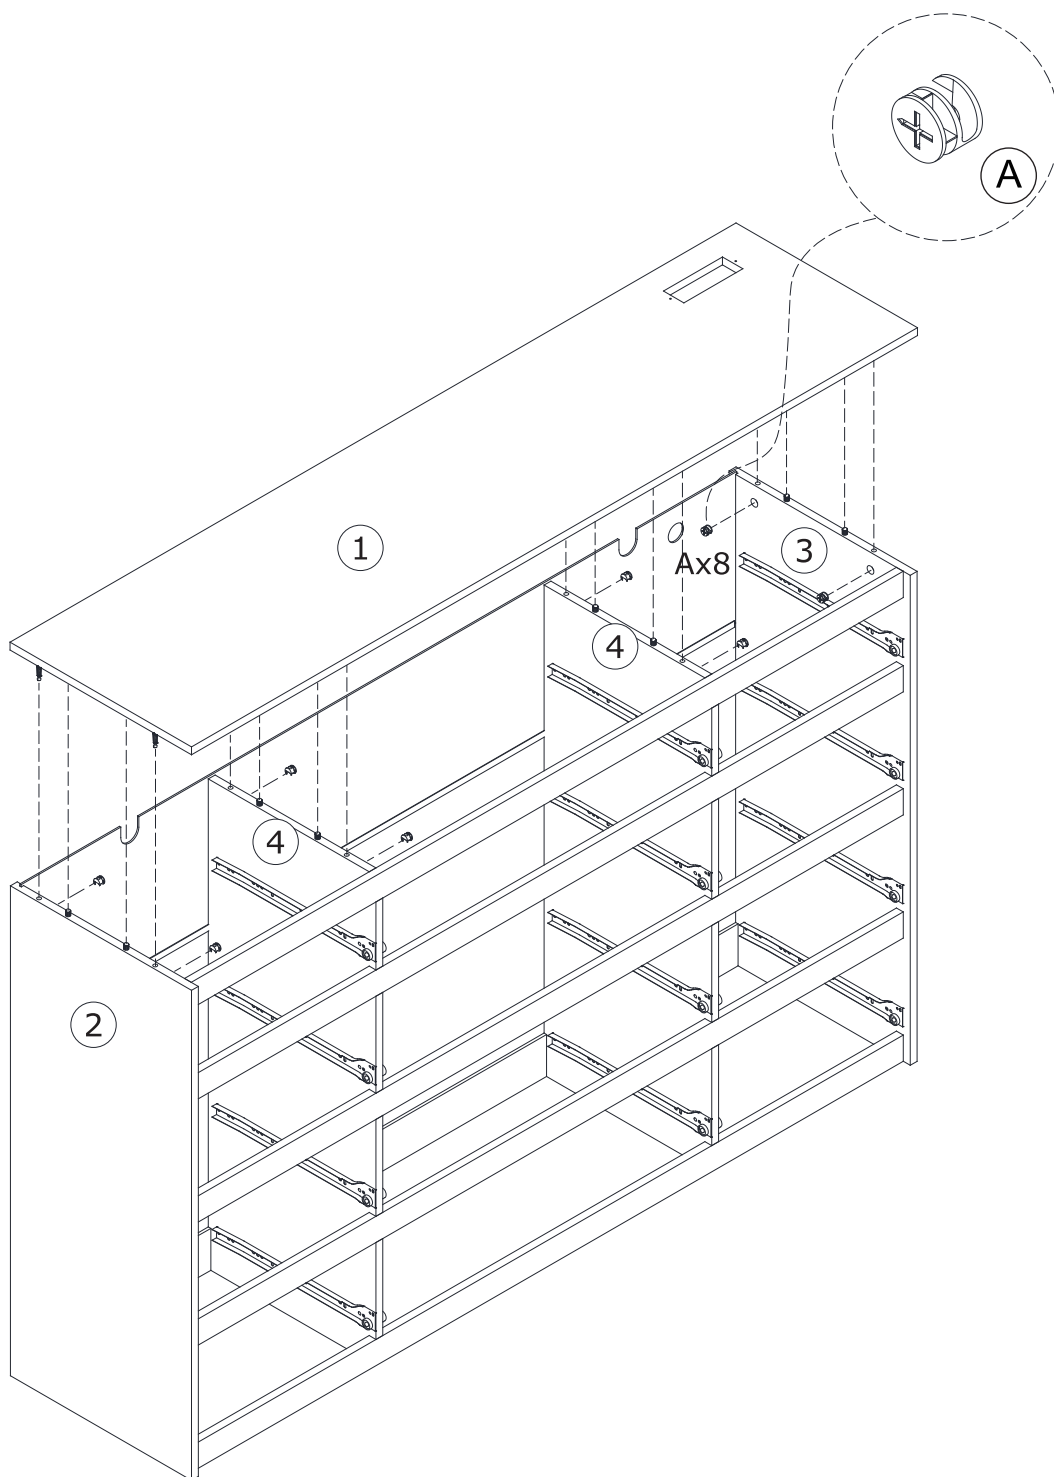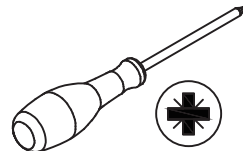




9

F x 2





Ø3.5 X 12 mm

G x 1

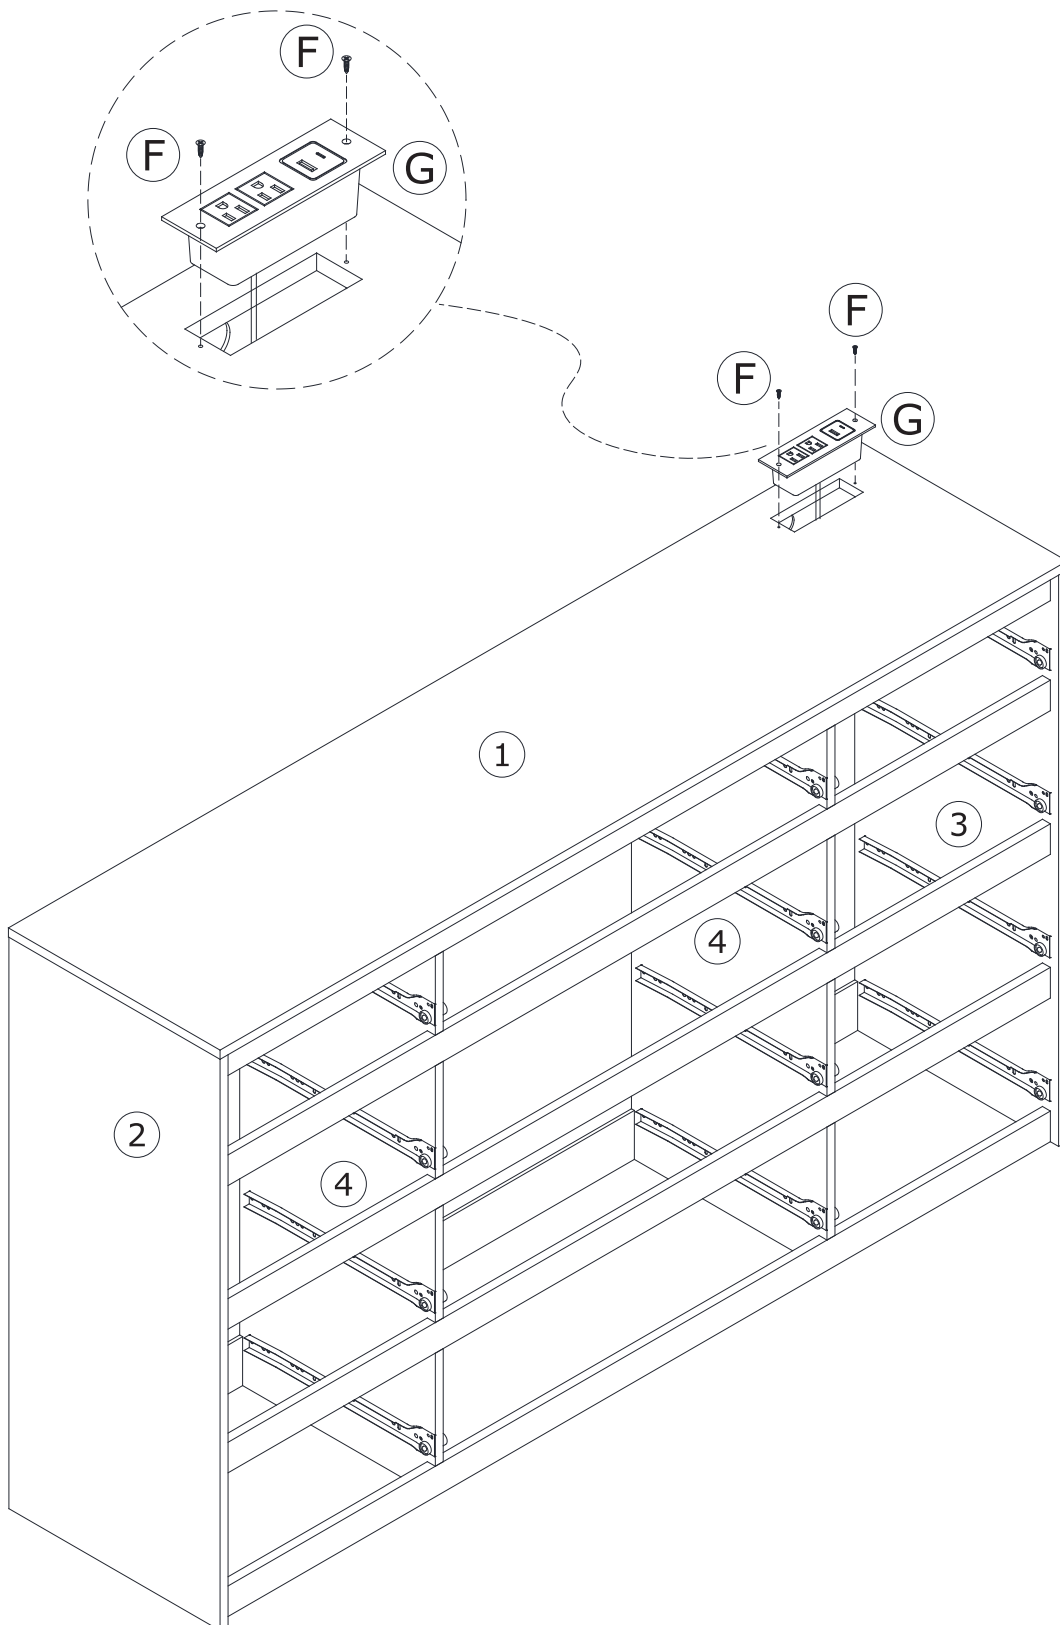
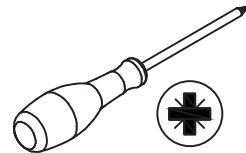



10

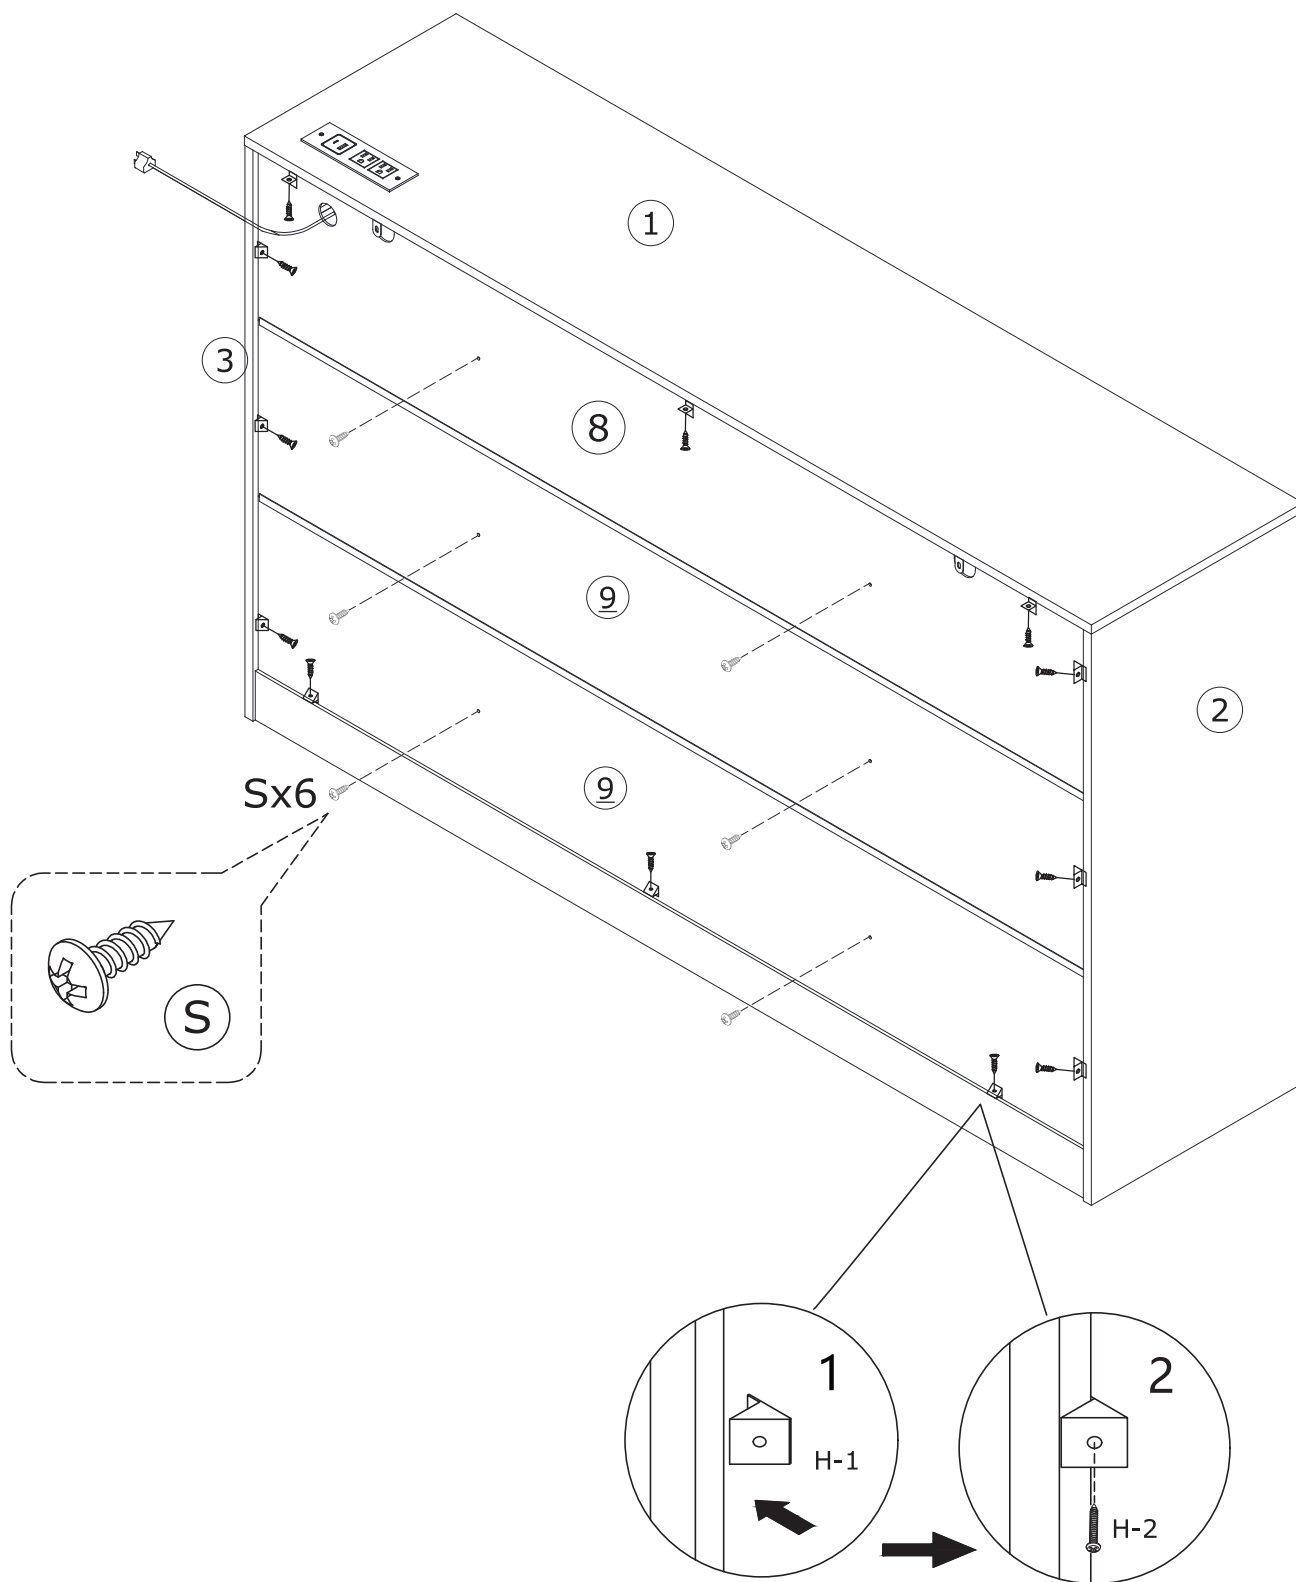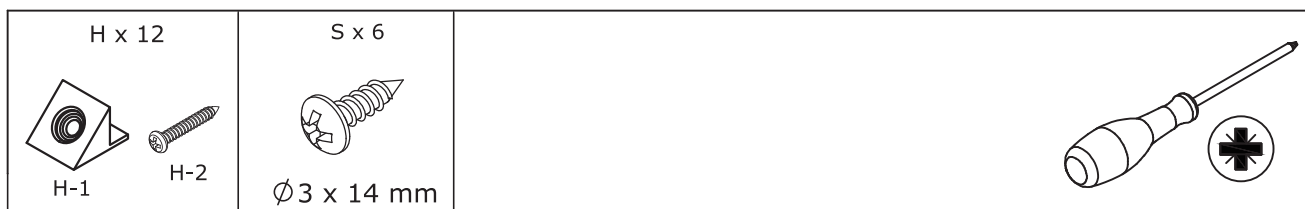


11

R x 2

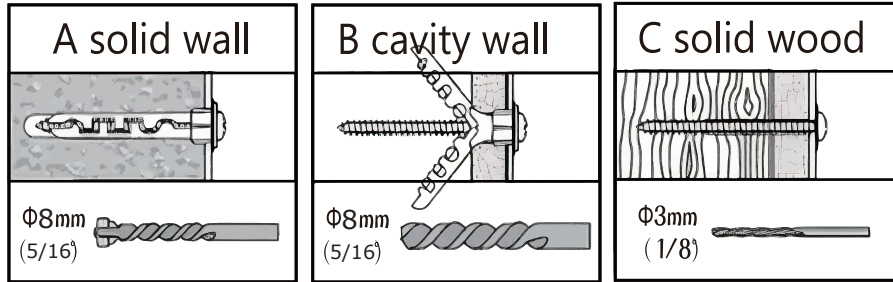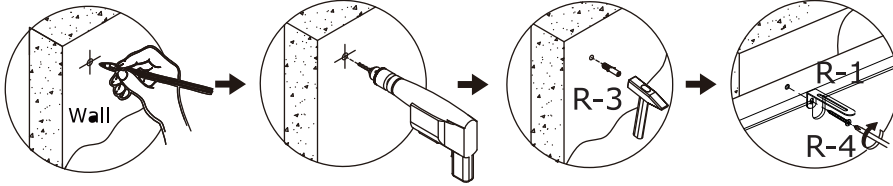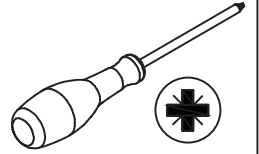


⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws, and lock the **R-2** screw tightly.


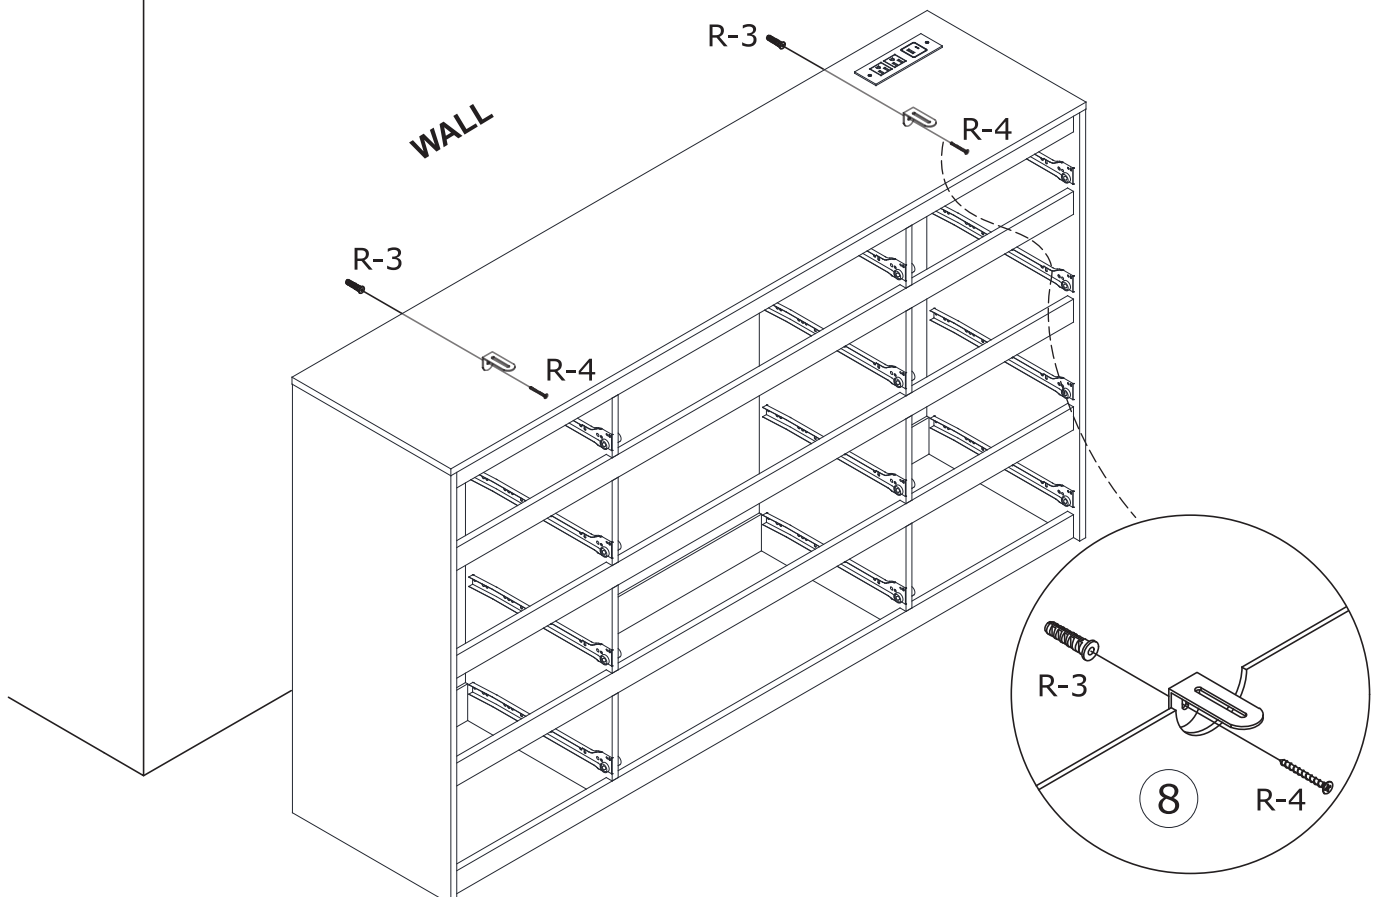


12


K x 52



Ø7 X 40 mm

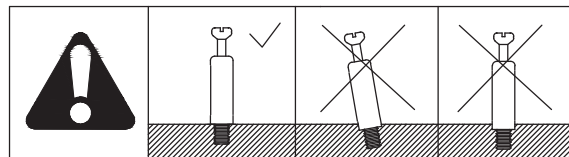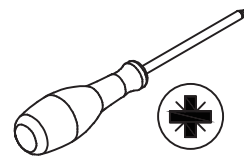


Kx4

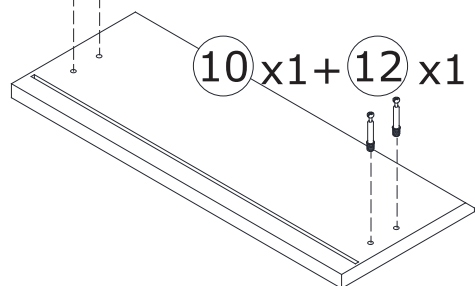


(K)




Kx5

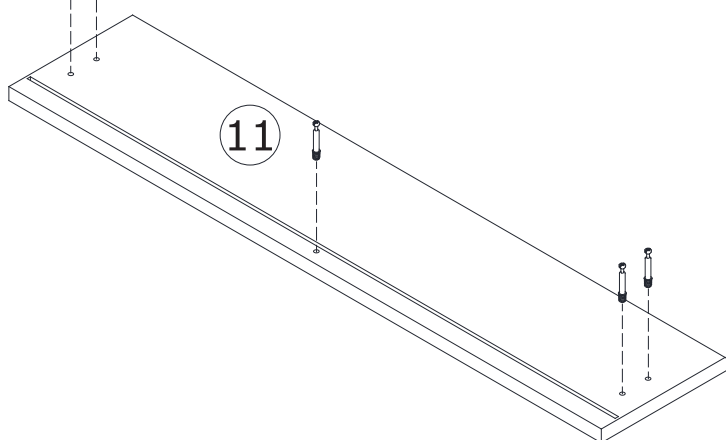



Kx4

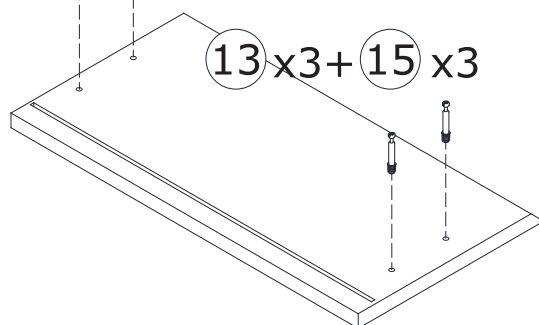





Kx5


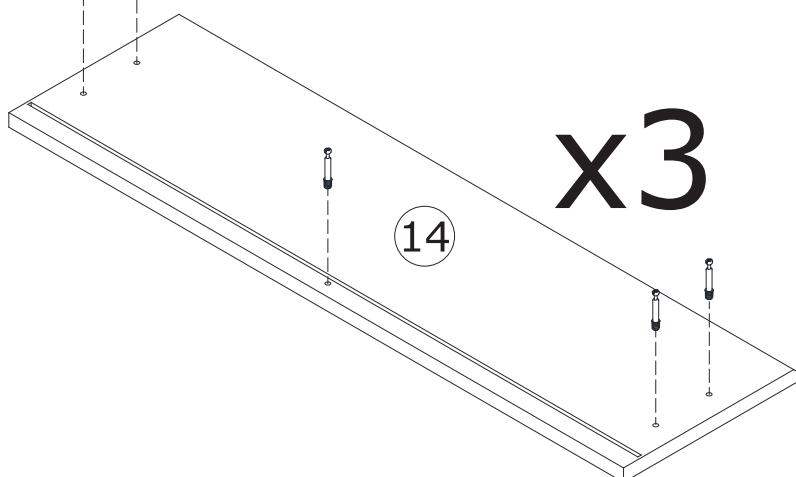


13

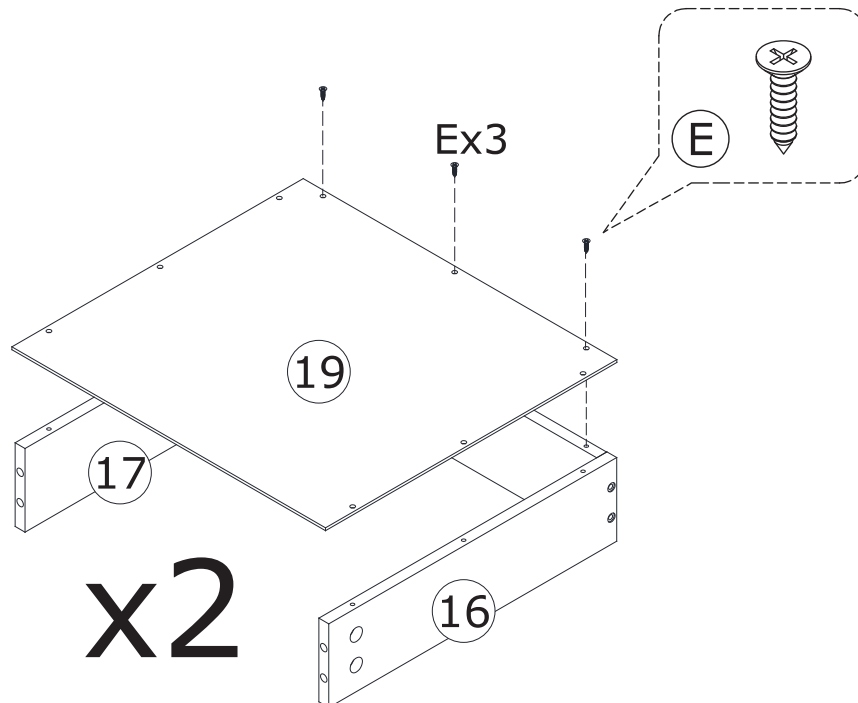
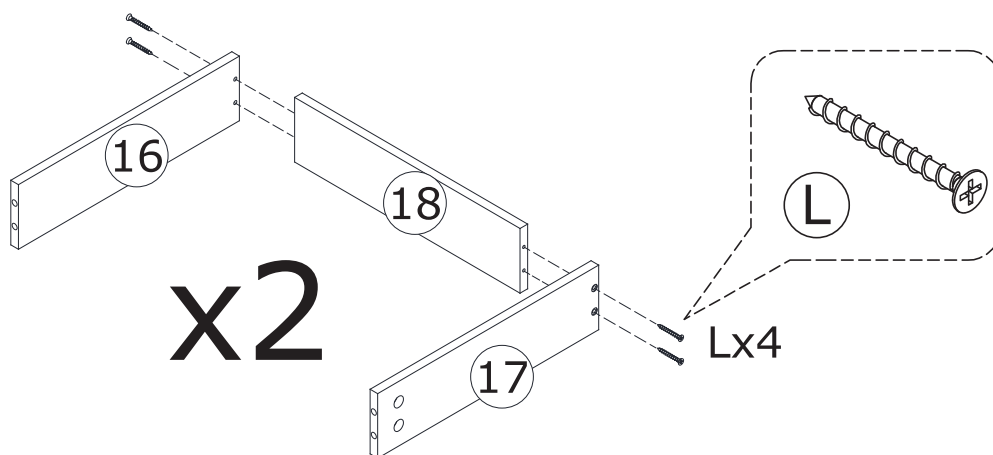




14

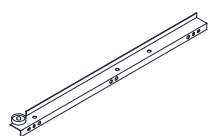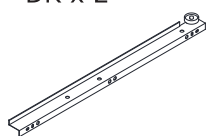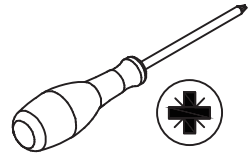E x 12  Ø3.5 X 16 mm	DL x 2  350mm	DR x 2  350mm	A x 8  Ø15 x 9.5 mm	
---	--	--	--	---

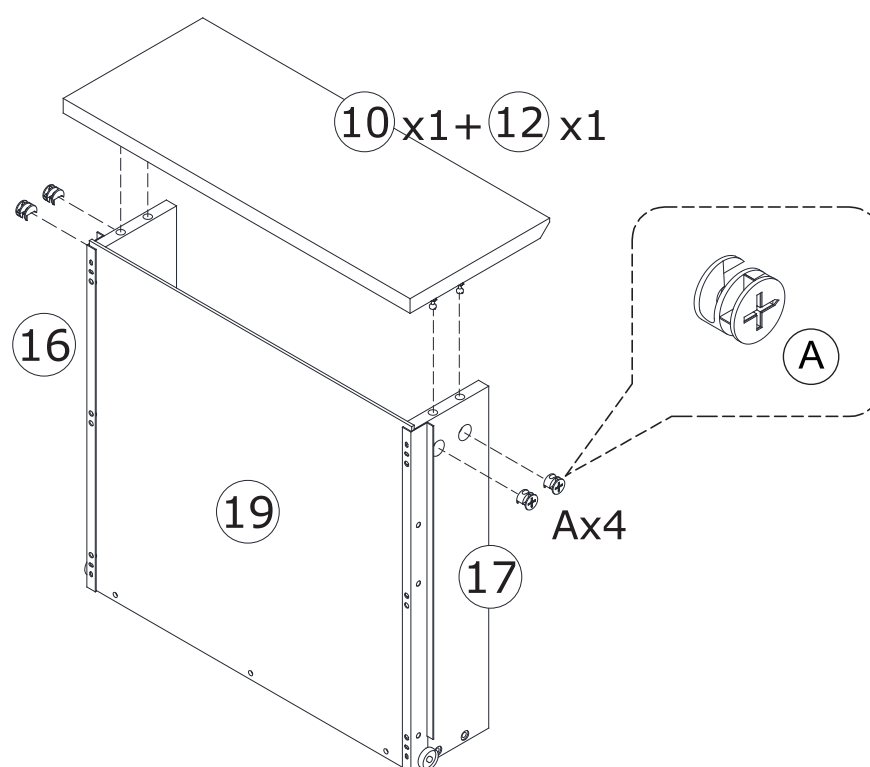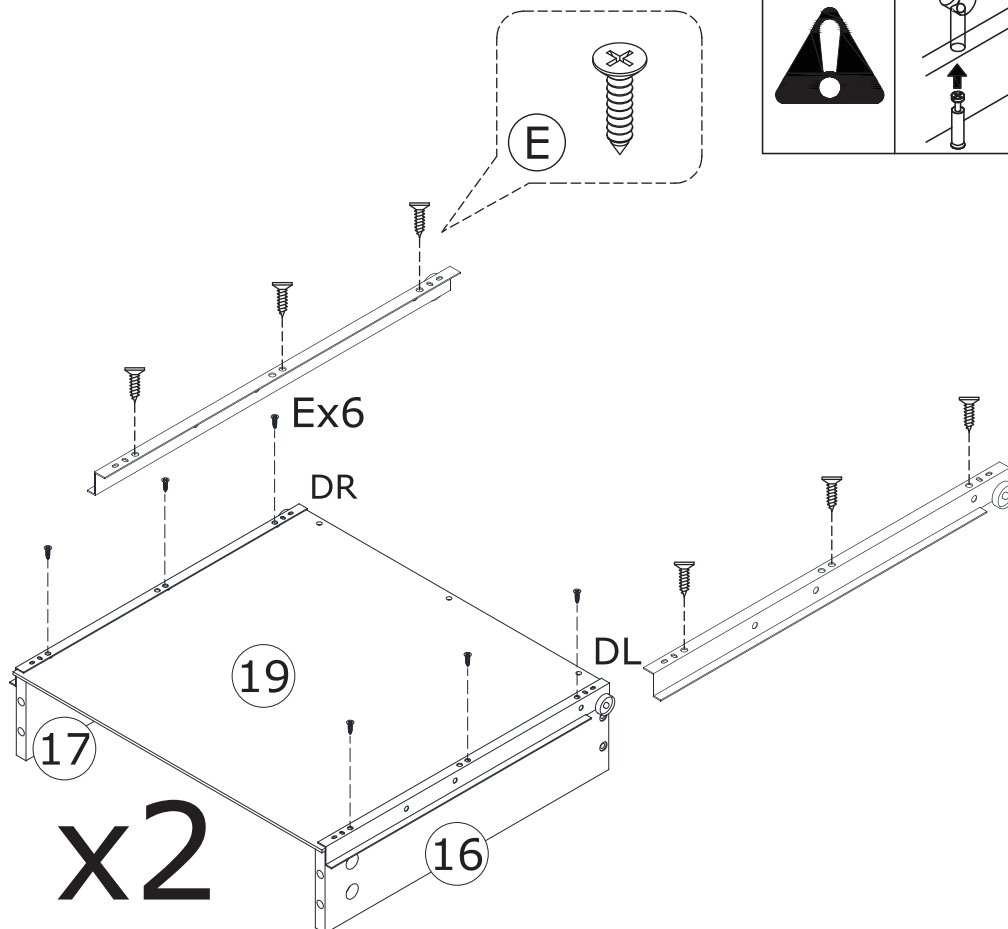

15

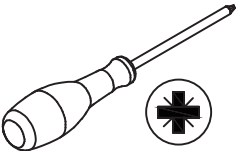L x 24  Ø4 X 35 mm	E x 18  Ø3.5 X 16 mm	
---	---	---

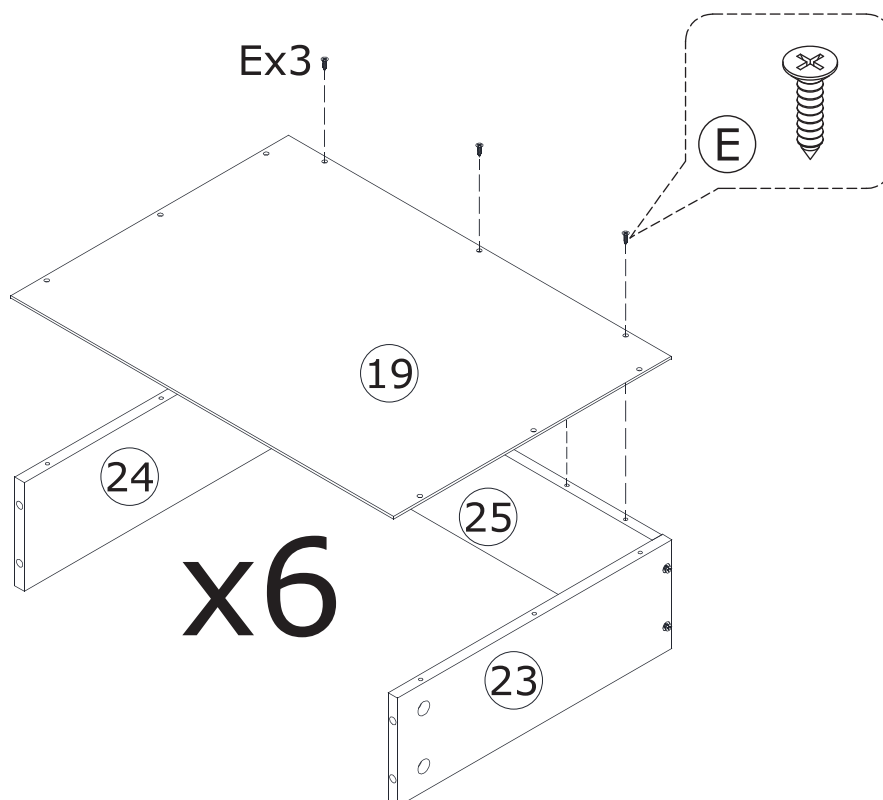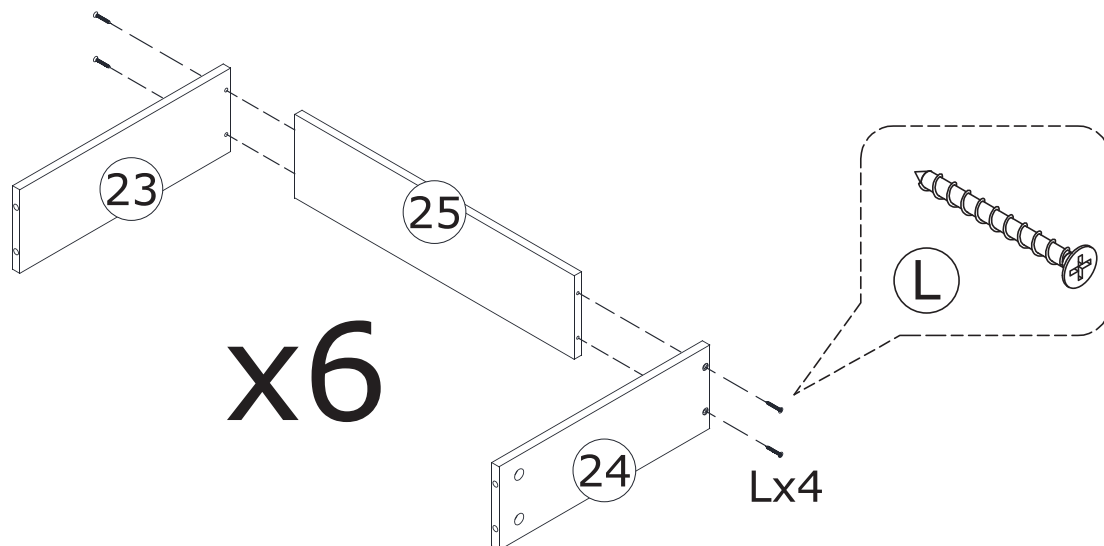

16

Ø3.5 X 16 mm



350mm

Technical drawing of a 100mm long, 10mm wide extruded aluminum profile. The profile has a 10mm diameter hole and a 10mm diameter pin. The drawing shows the profile from a side view, with dimensions 100, 10, and 10 indicated.


350mm






Ø15 x 9.5 mm

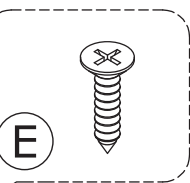
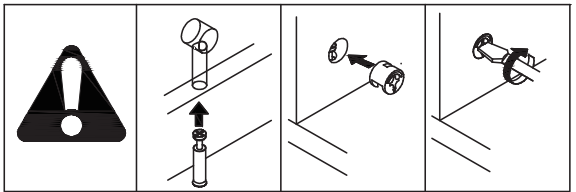


x6





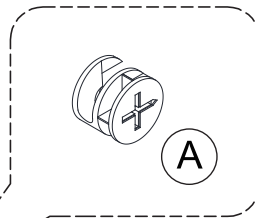





17

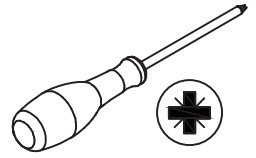E x 6  Ø3.5 X 16 mm	L x 4  Ø4 X 35 mm	
--	--	---

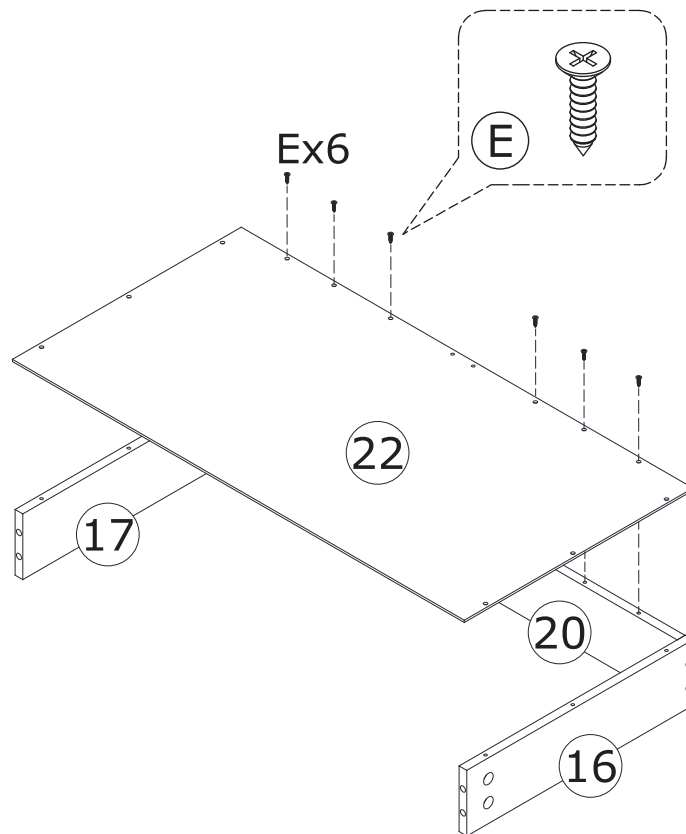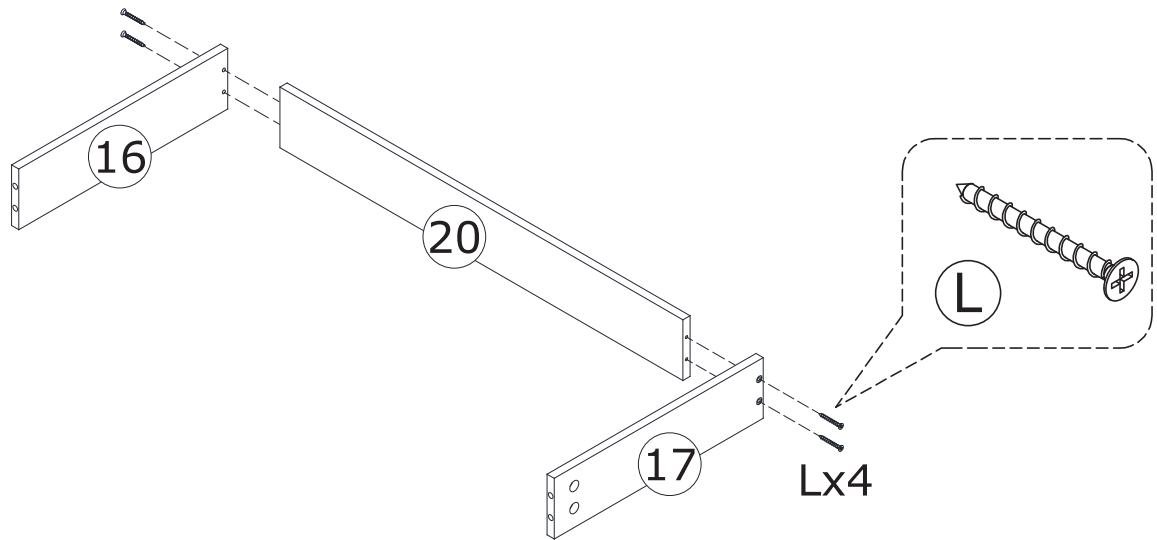


18

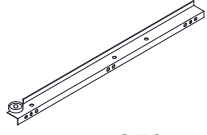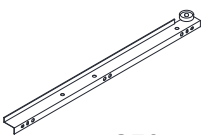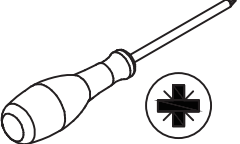E x 6  Ø3.5 X 16 mm	DL x 1  350mm	DR x 1  350mm	L x 2  Ø4 X 35 mm	A x 5  Ø15 x 9.5 mm	
--	--	--	---	--	---

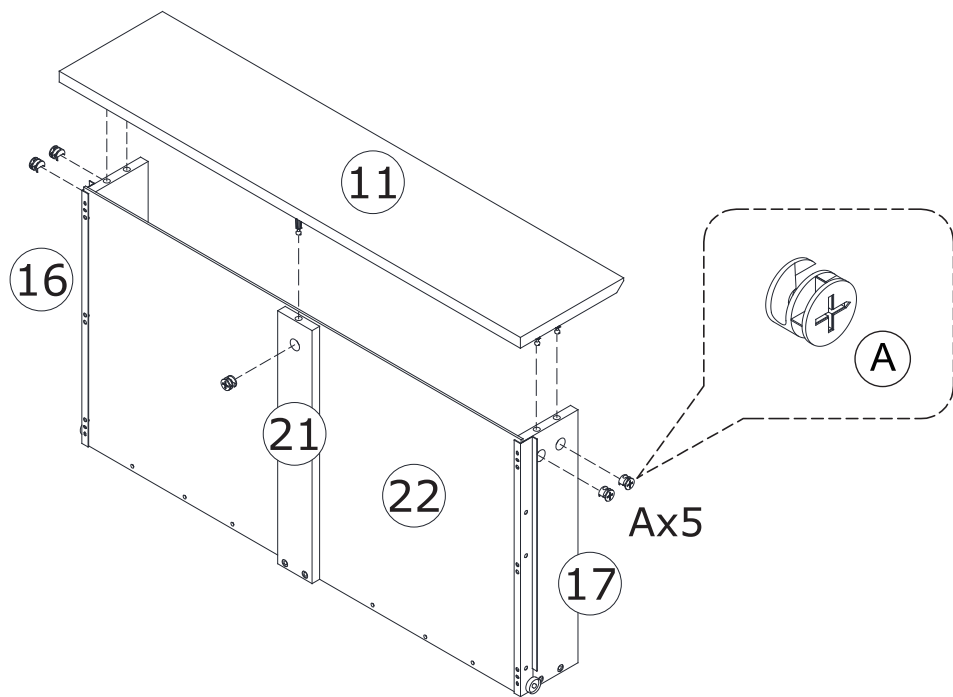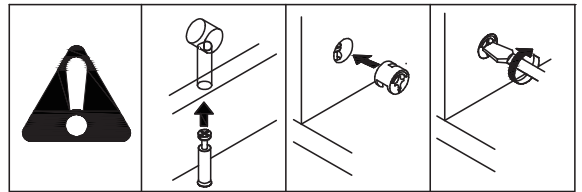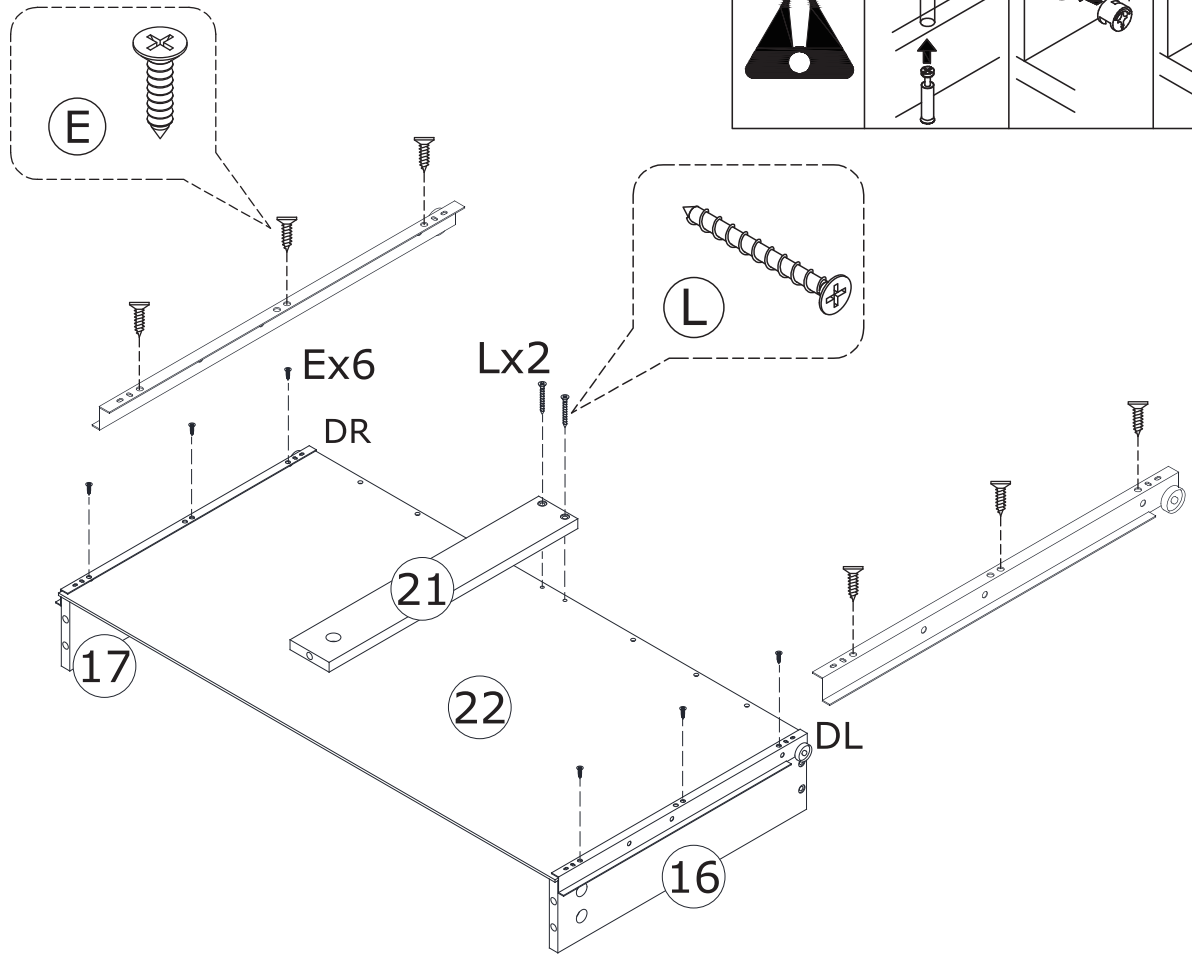


19

E x 18






Ø3.5 X 16 mm





L x 12








Ø4 X 35 mm

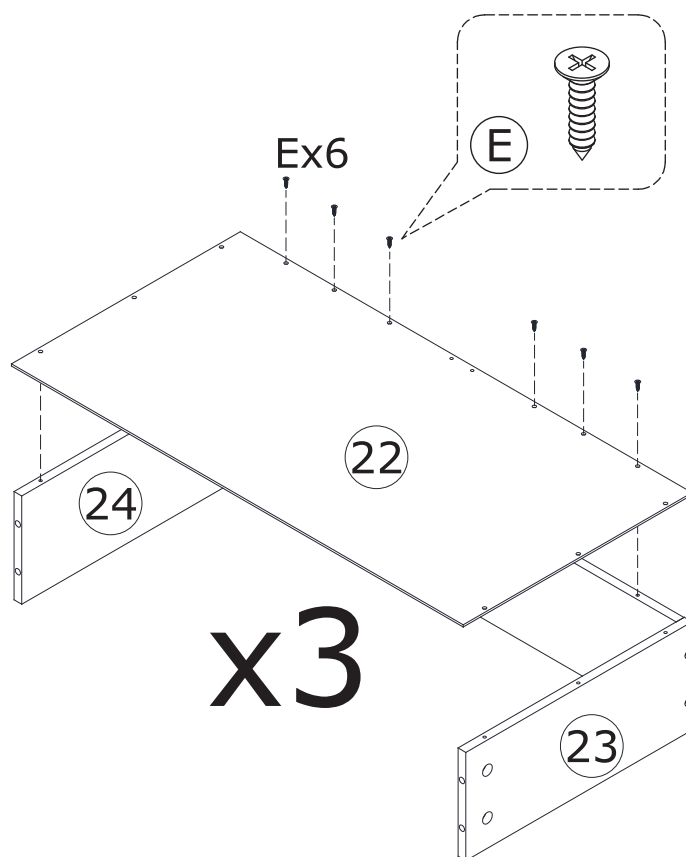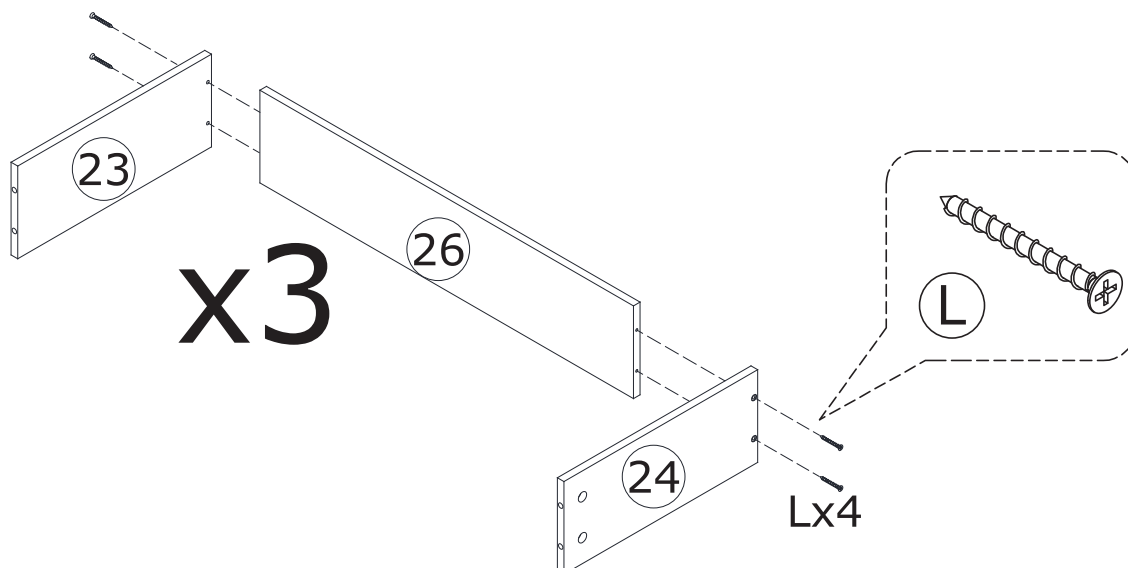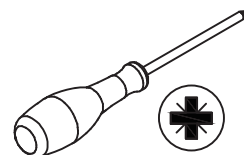


20

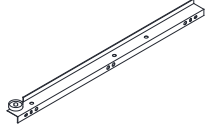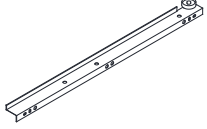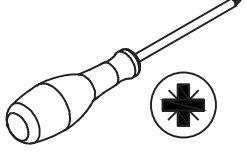
E x 18  Ø3.5 X 16 mm	DL x 3  350mm	DR x 3  350mm	L x 6  Ø4 X 35 mm	A x 15  Ø15 x 9.5 mm	
---	--	--	---	---	---

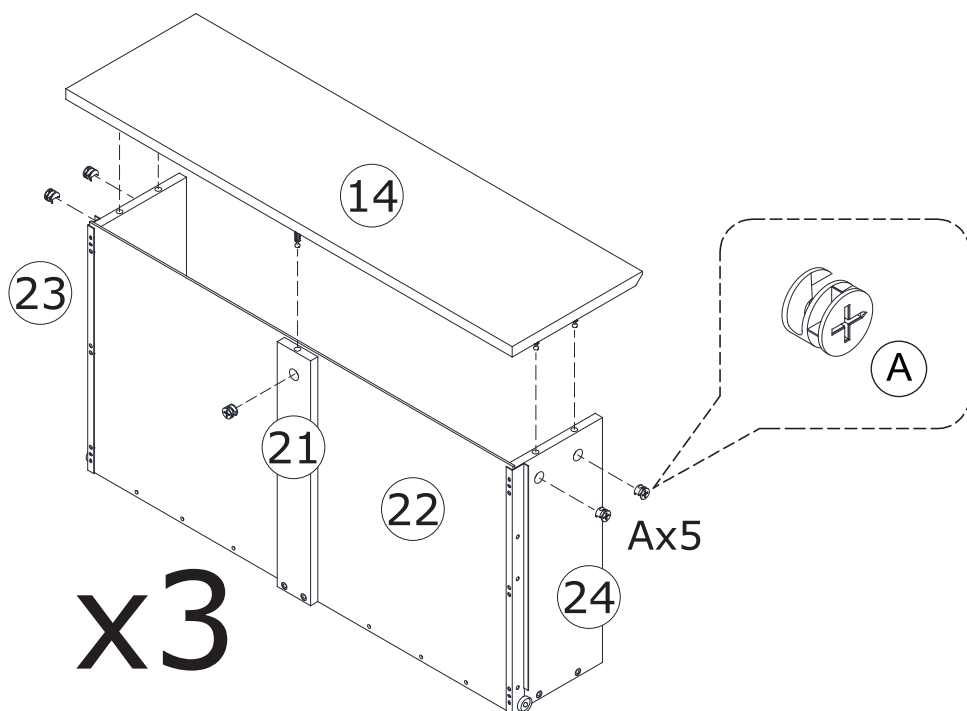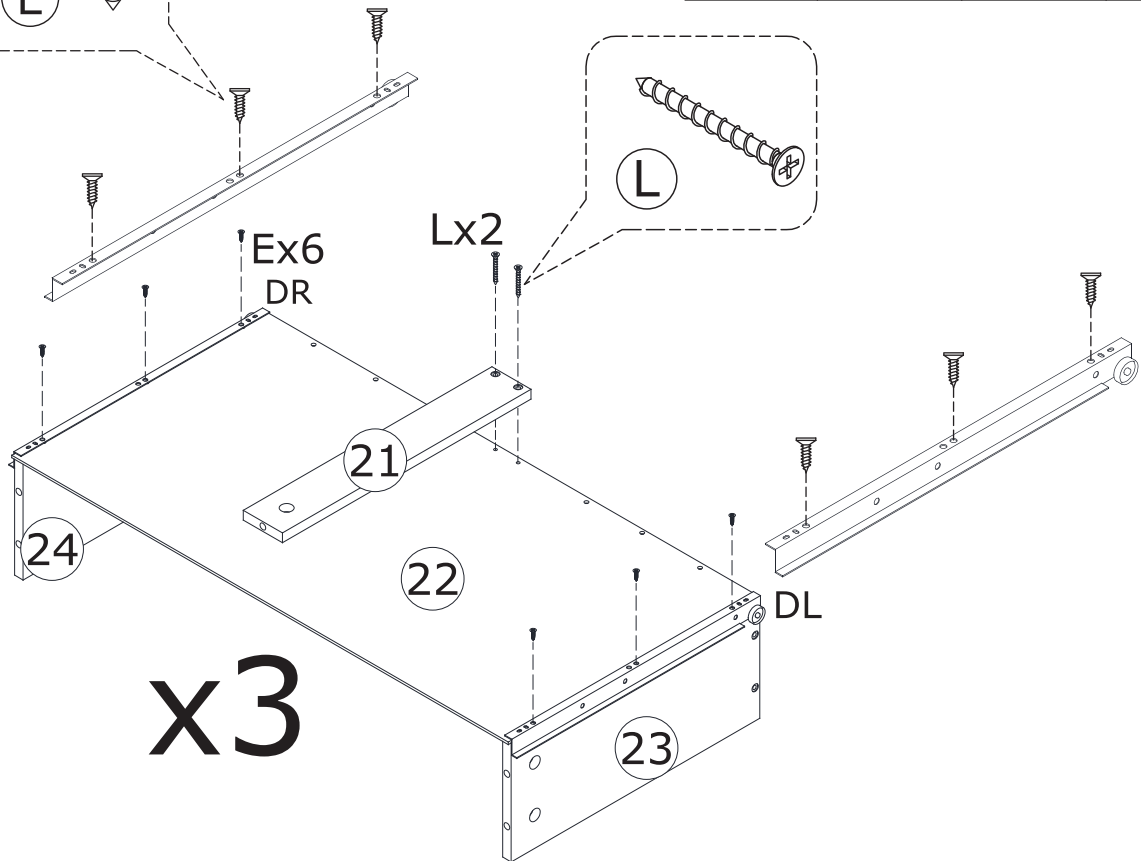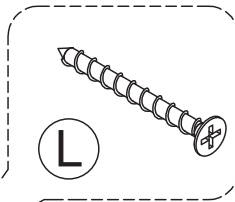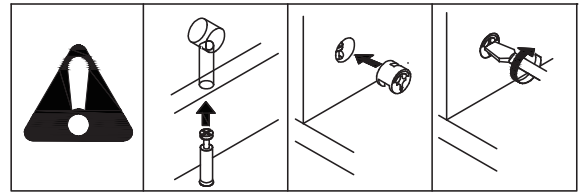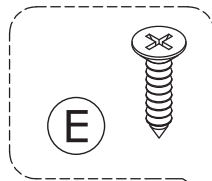


21

M x 86 	P x 2 	
---	--	--



Cabinet Slide

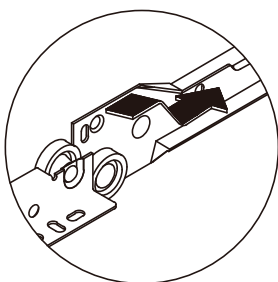

Drawer Slide

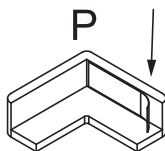

Peel off the protective film first and stick it well.

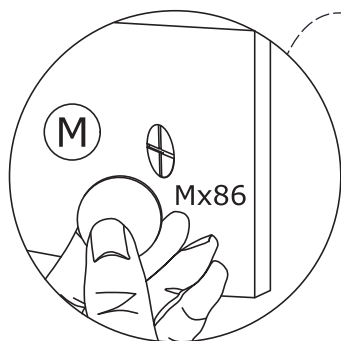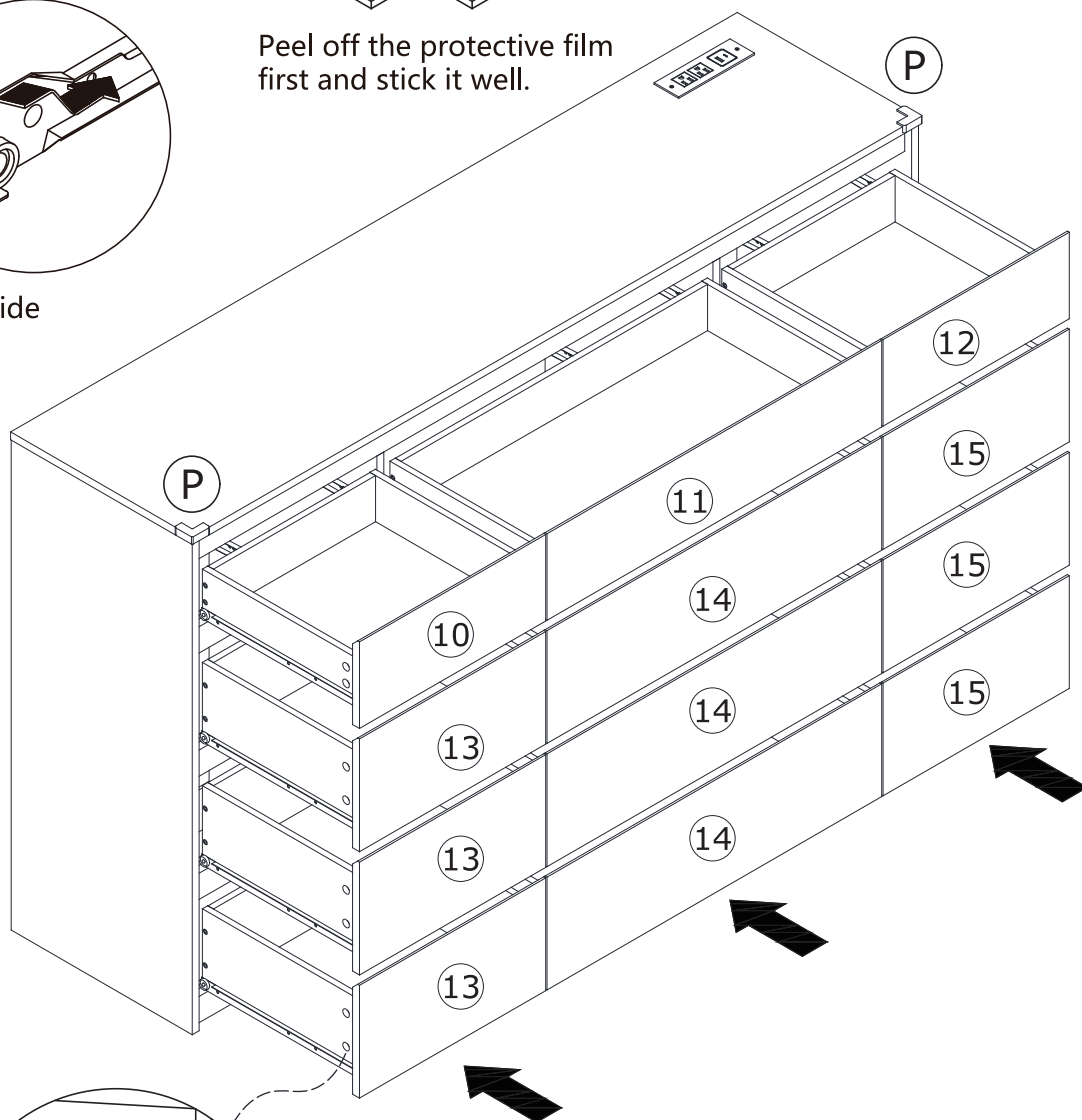

Stick the ring patch M on the lock holes!