





















DJ0870

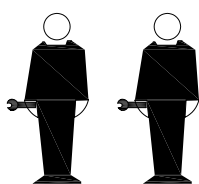


For convenience and safety, we recommend two people to assemble.
If you have any questions, please contact our customer service.




































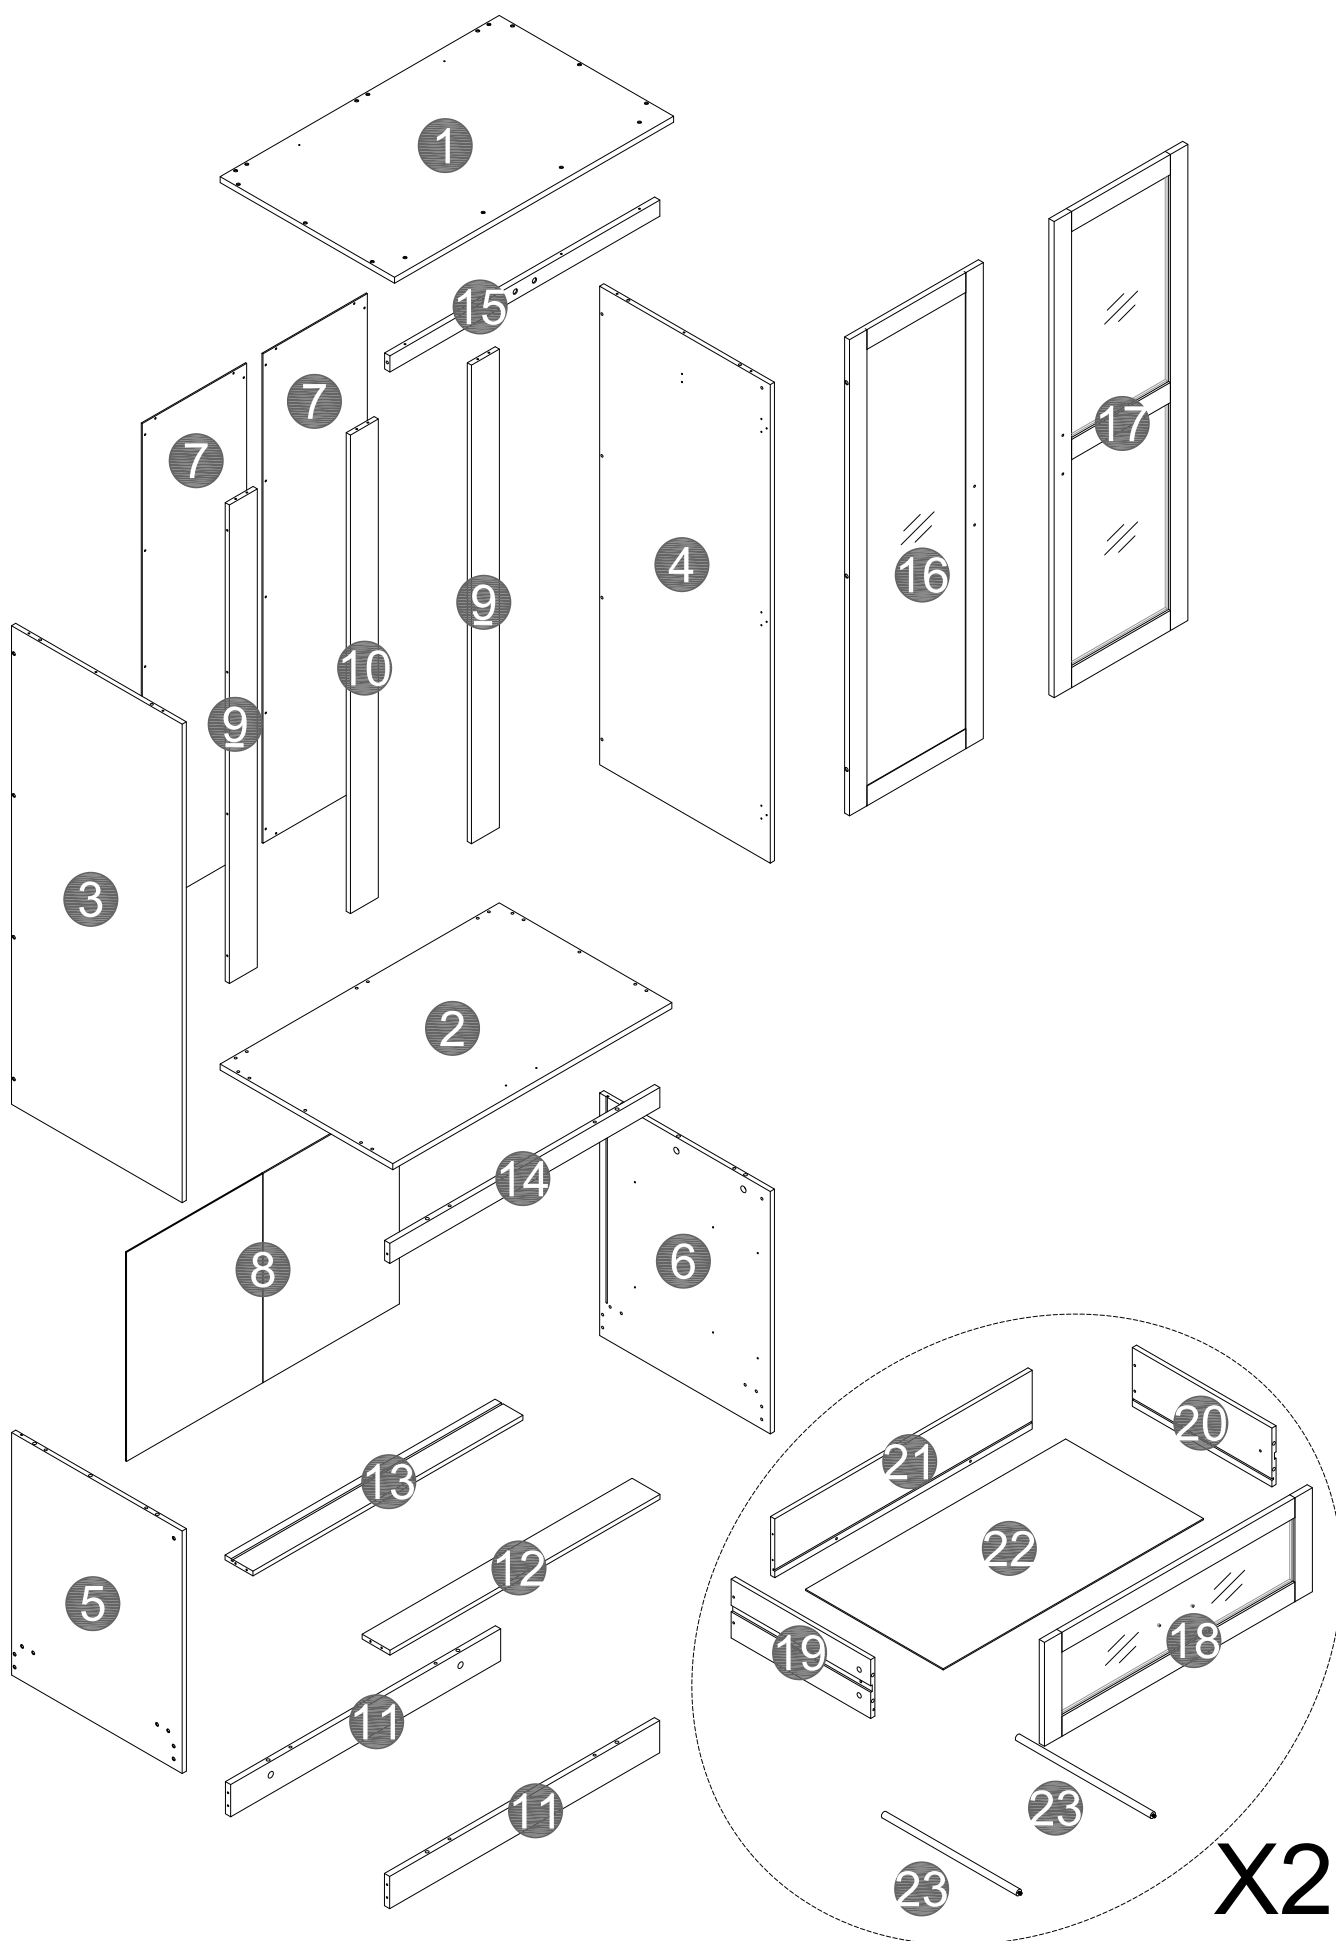


PARTS LIST

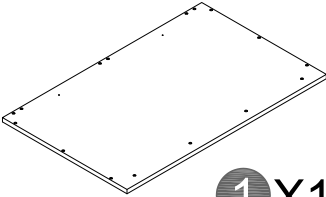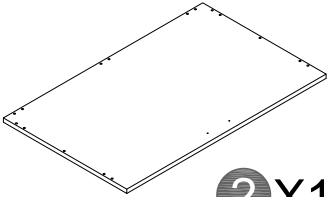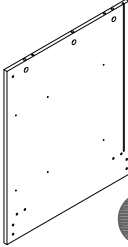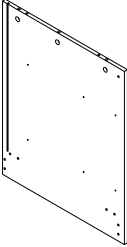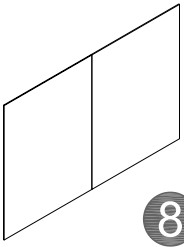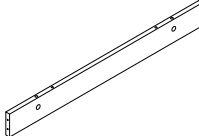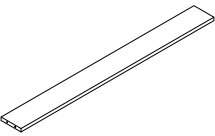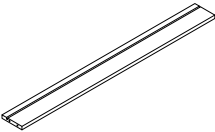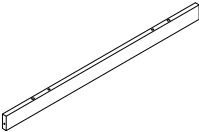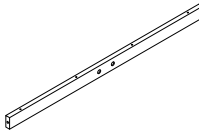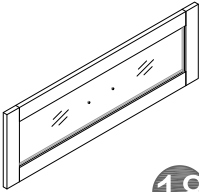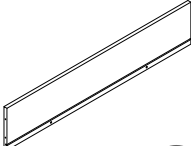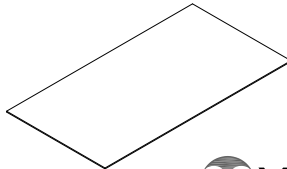 1X1	 2X1	 3X1	 4X1
 5X1	 6X1	 7X2	 8X1
 9X2	 10X1	 11X2	 12X1
 13X1	 14X1	 15X1	 16X1
 17X1	 18X2	 19X2	 20X2
 21X2	 22X2	 23X4	

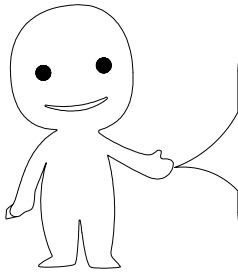

Please prepare the following tools

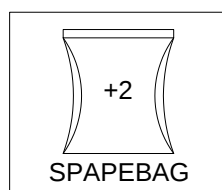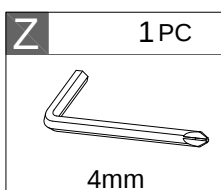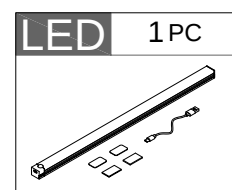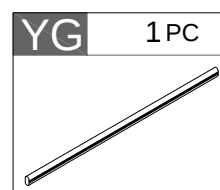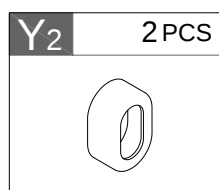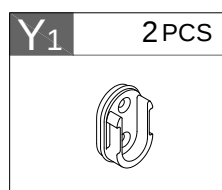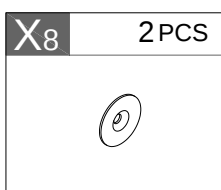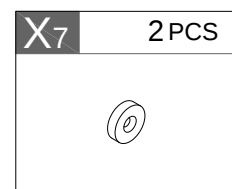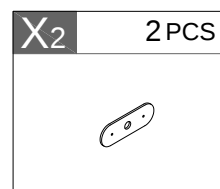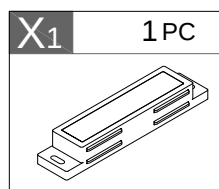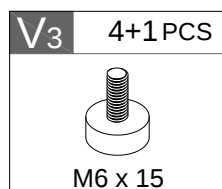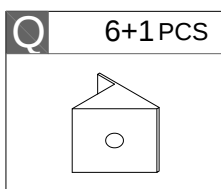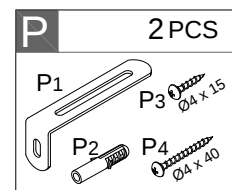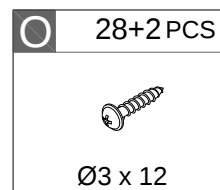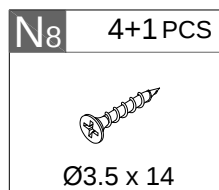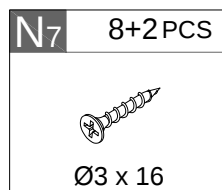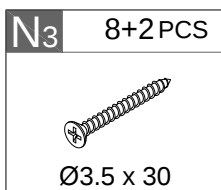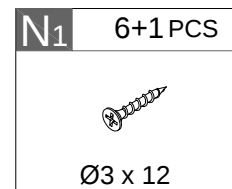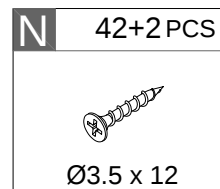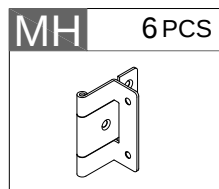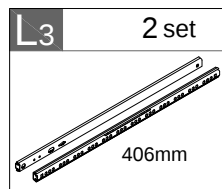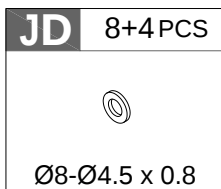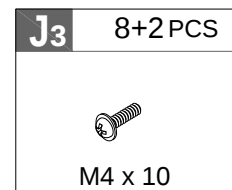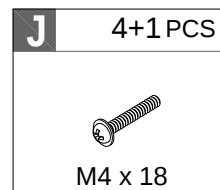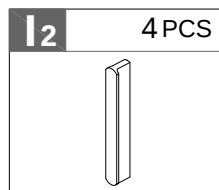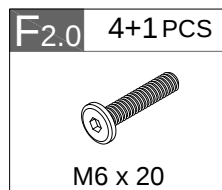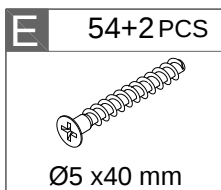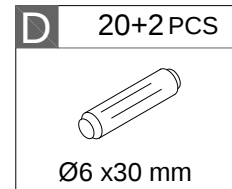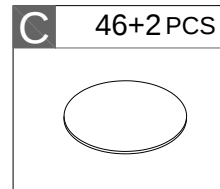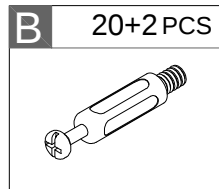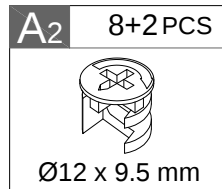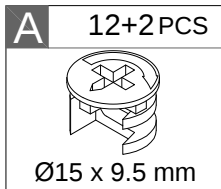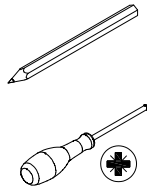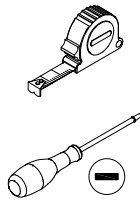

⚠ Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:




The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.

Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!



SAFETY TIPS:

Static charge may cause dust on foam – clean with a dry or damp cloth.
Small foam strands may be present – handle gently and dispose of properly.
Do not burn or incinerate. Check local recycling guidelines.

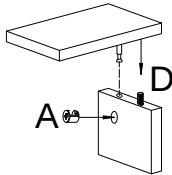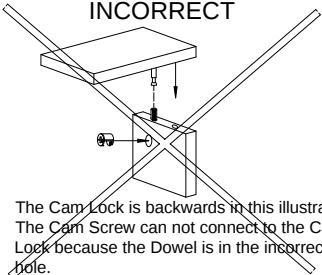
Cam Lock/Dowel Placement Supplement		
CORRECT 1  When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.	INCORRECT 2  The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.	3  To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected board. *NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.





E	8 PCS	N₈	4 PCS	Y₁	2 PCS
					

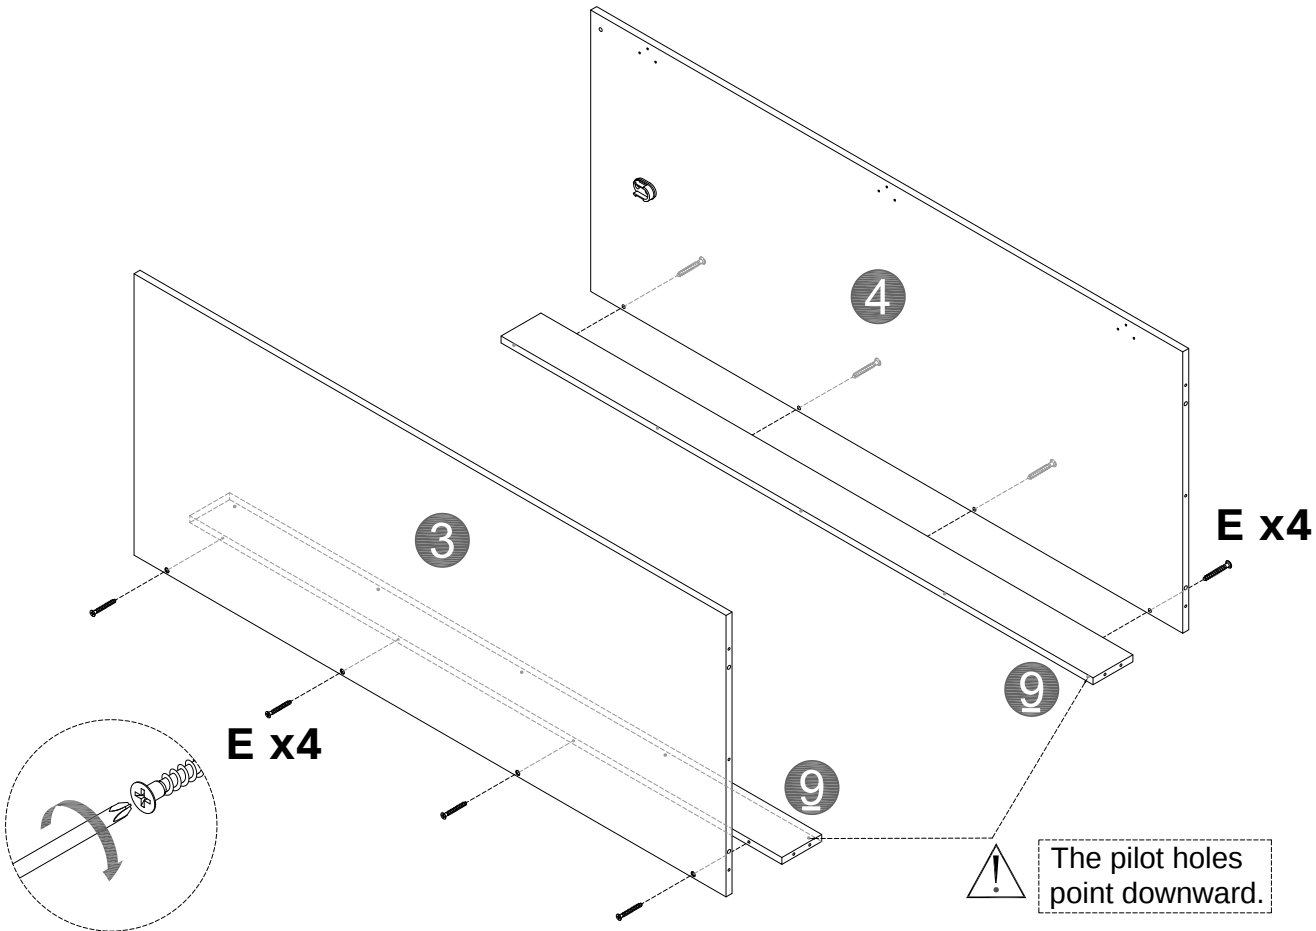
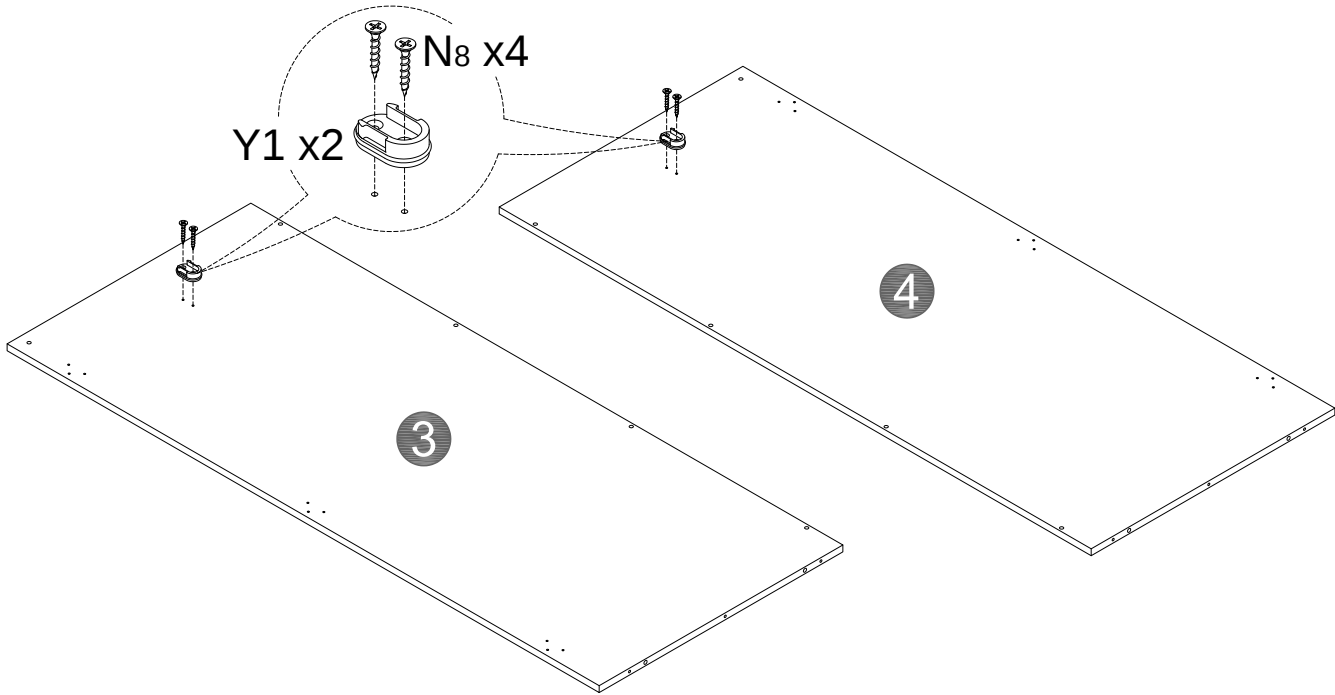



2

D	2 PCS	N1	2 PCS	X7	2 PCS
					

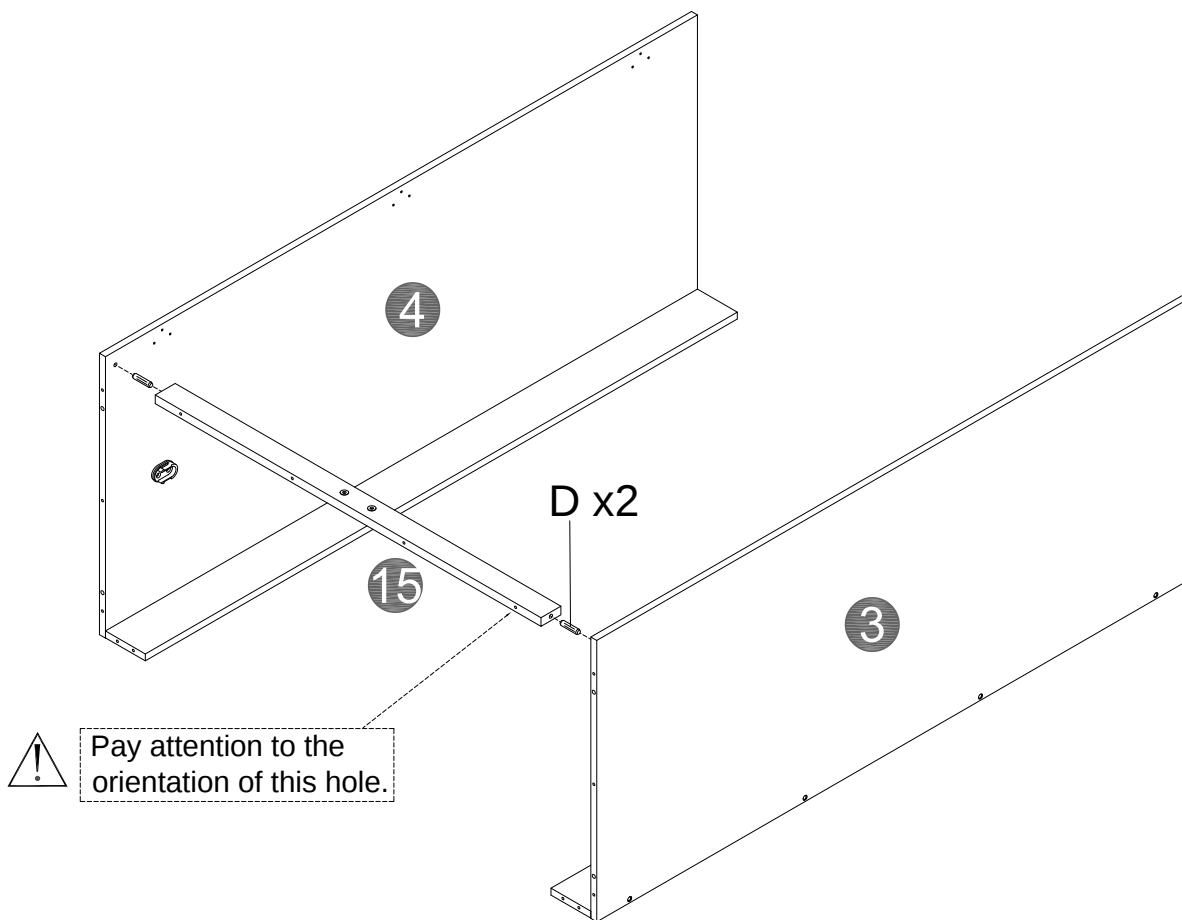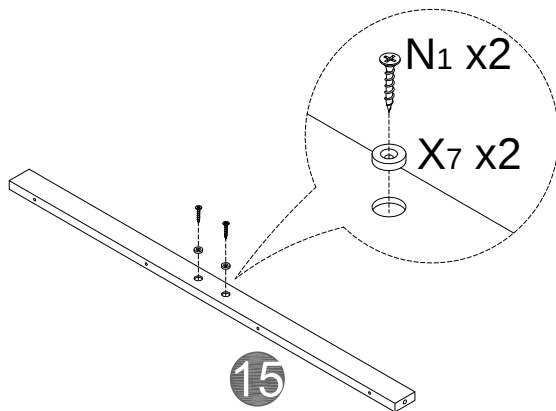

3


D	4 PCS	E	16 PCS
			

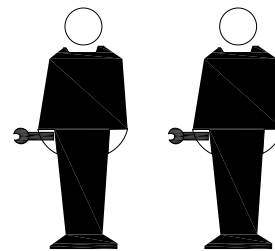

This step requires two people to complete











First, insert wooden dowel D into the designated side hole, followed by the installation of other components.

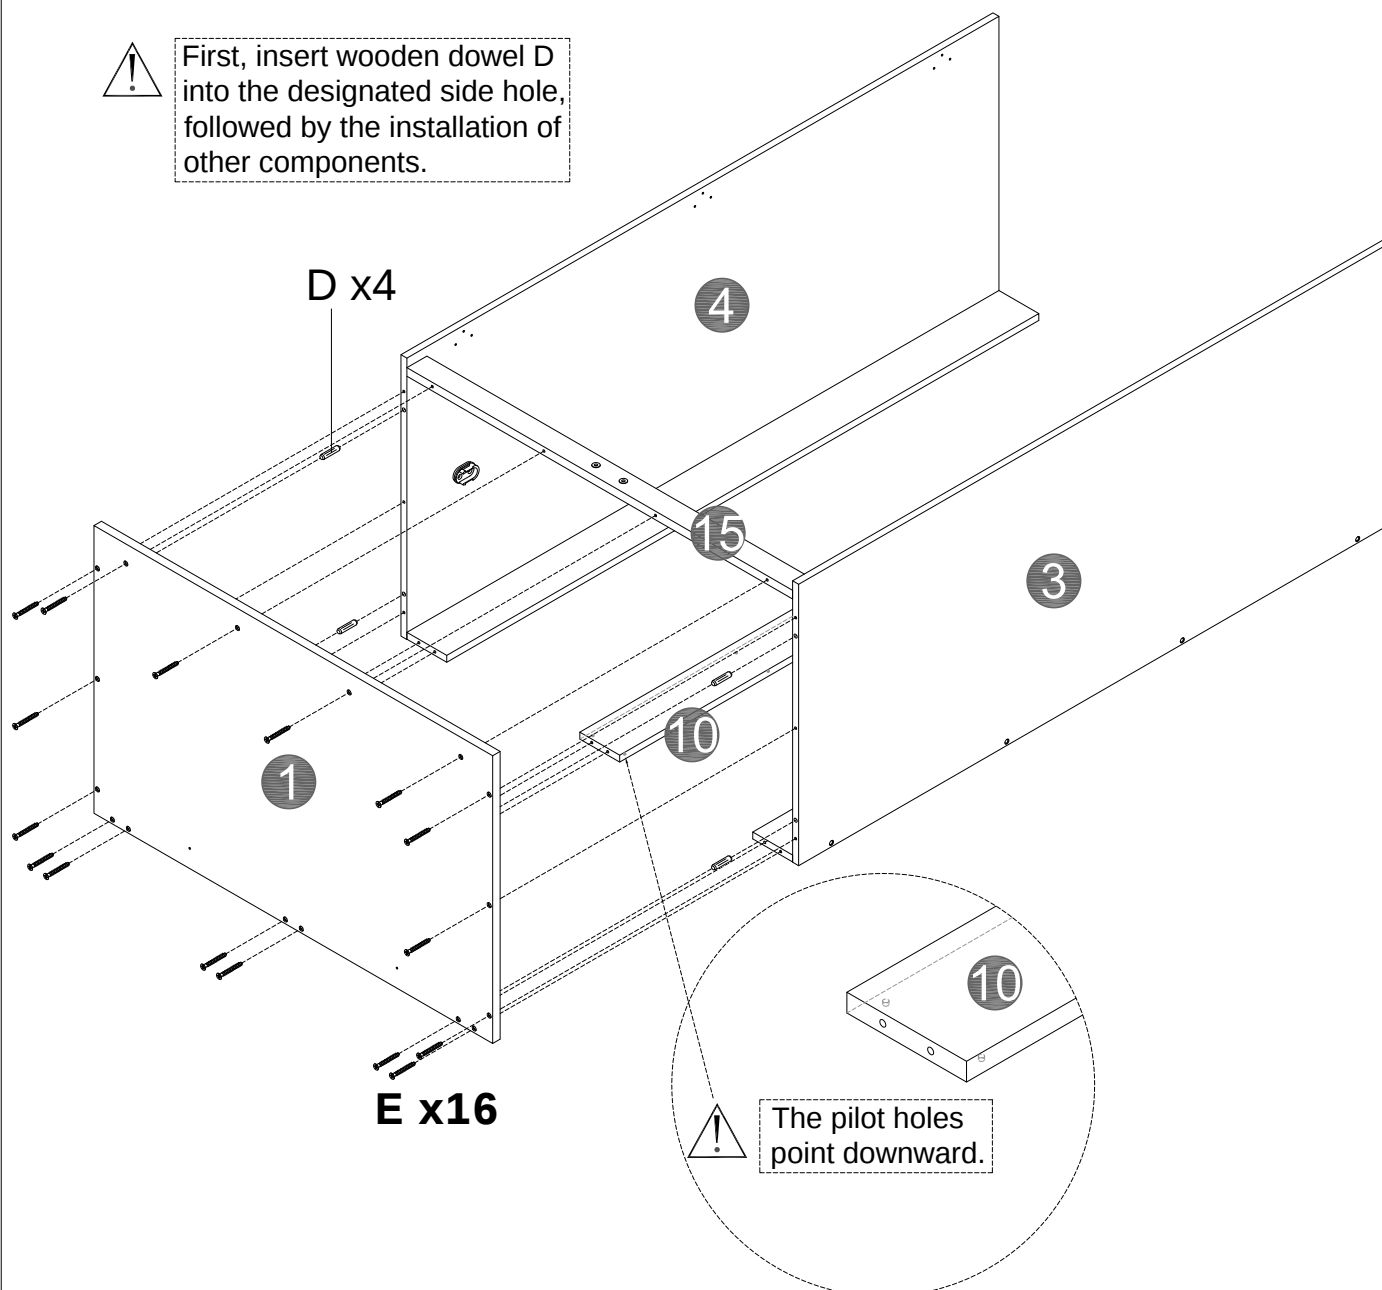



When installing, align the underside of the board and then fasten the screws tightly.



4

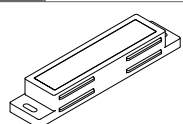B	8PCS	D	4PCS	E	12PCS	N7	2PCS	X1	1PC
									

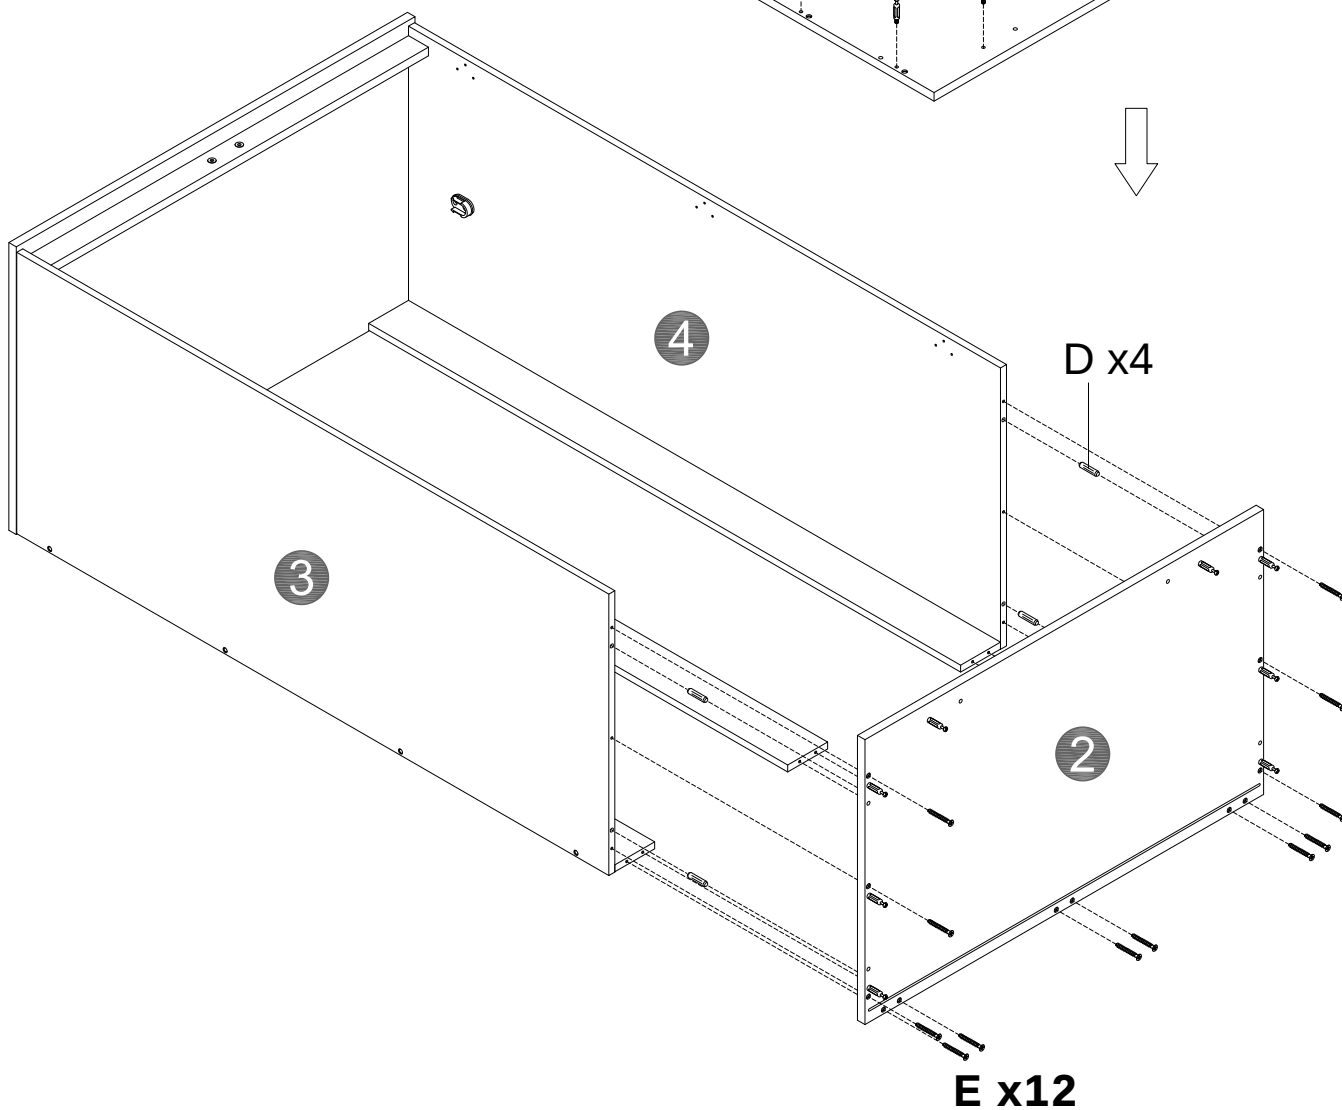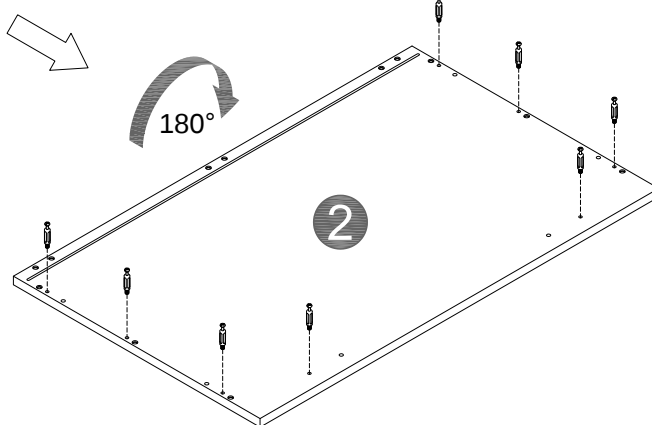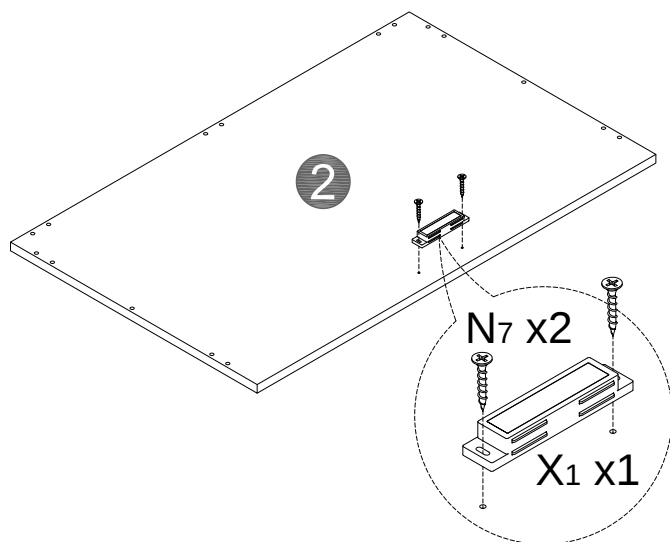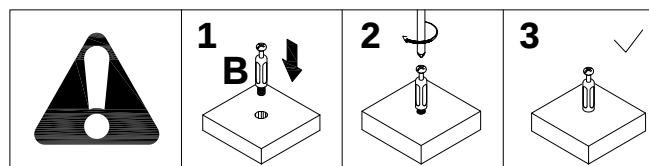





5

A	4 PCS	B	4 PCS	D	4 PCS
					

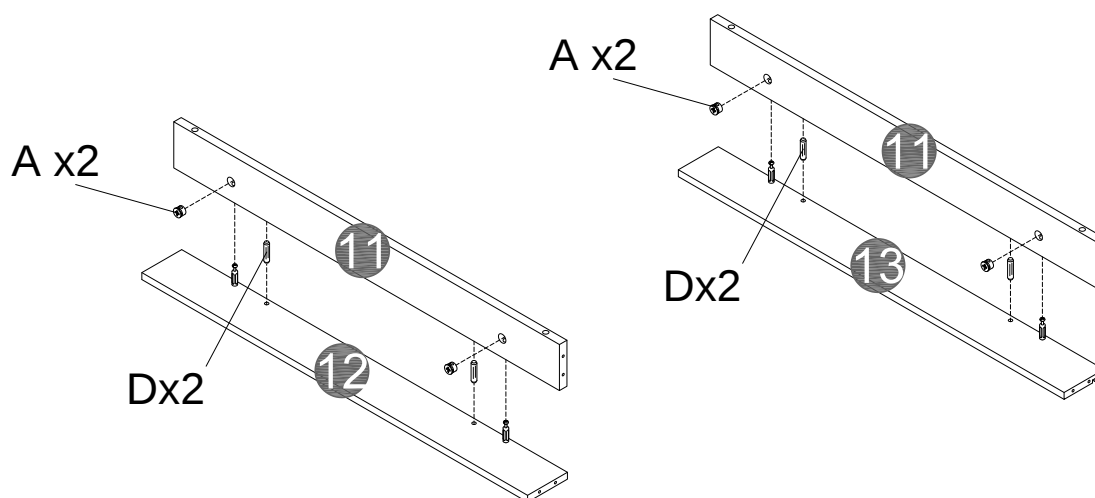
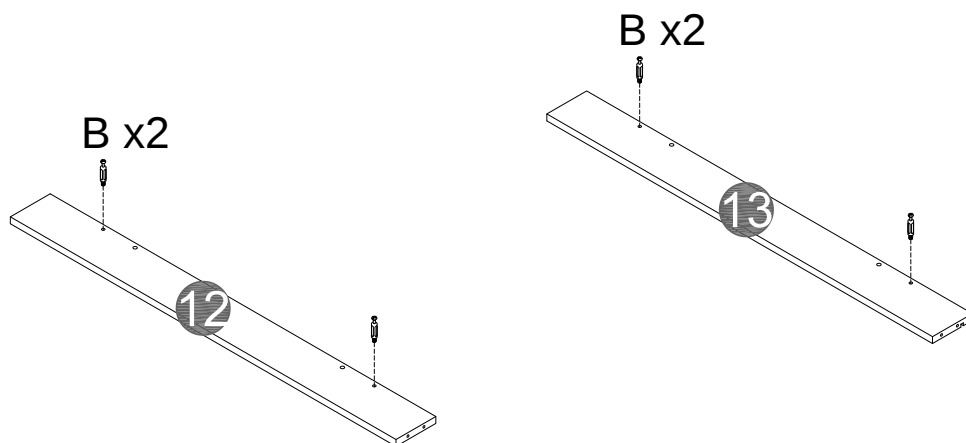






L3	2 set	N	12 PCS

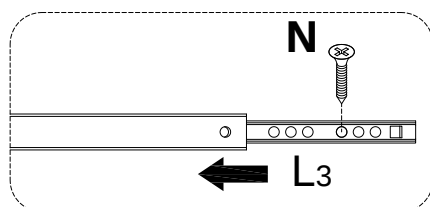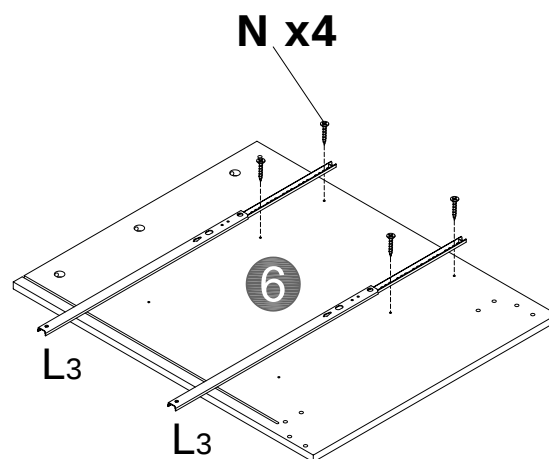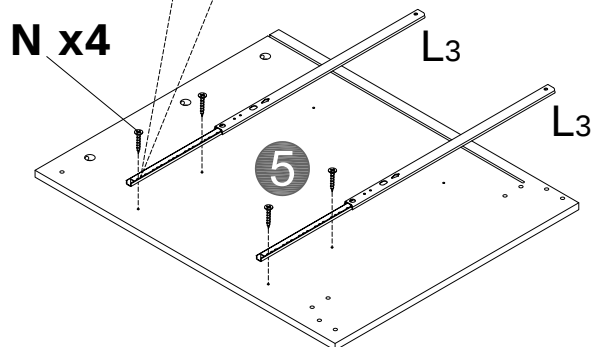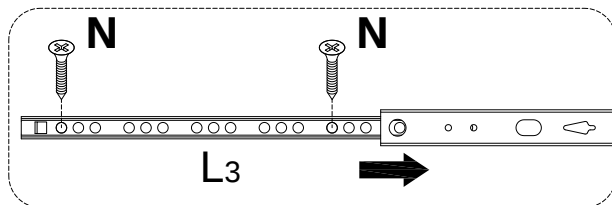


Slide towards the rear side and fix one screw.

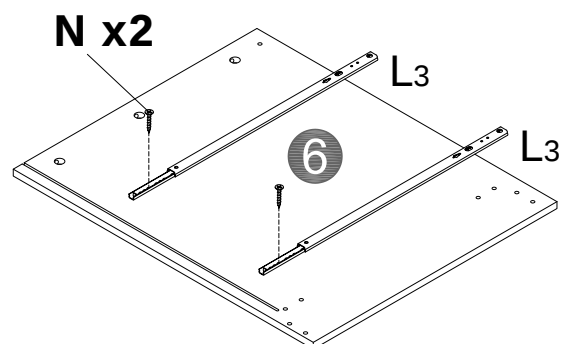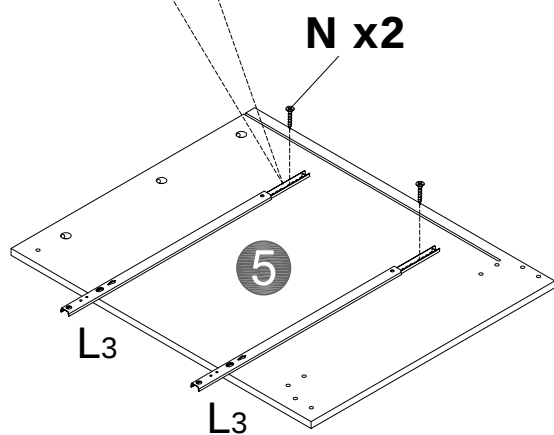

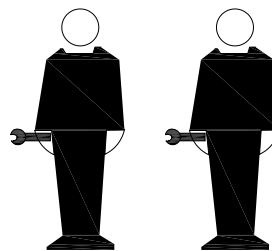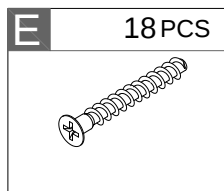


This step requires two people to complete

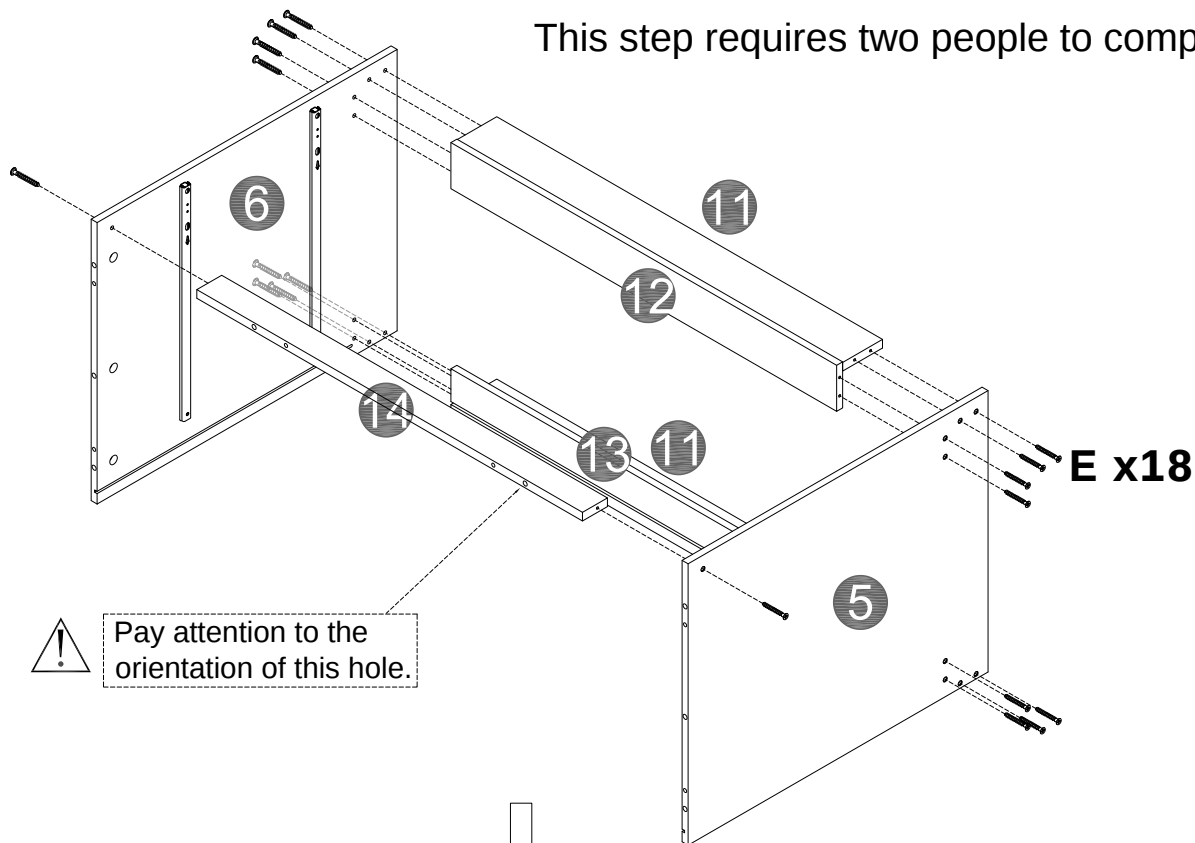

use foam to cushion the bottom of the backplane.





Ensure the back board is inserted into the slot.

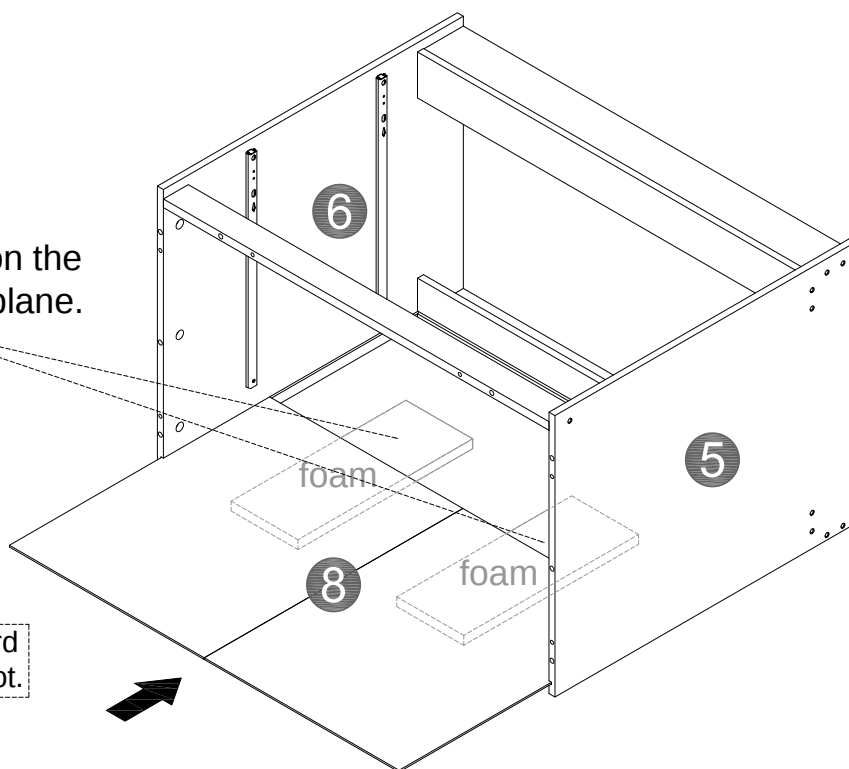





A	8PCS	D	6PCS	V ₃	4PCS

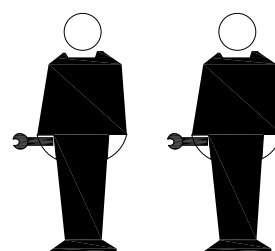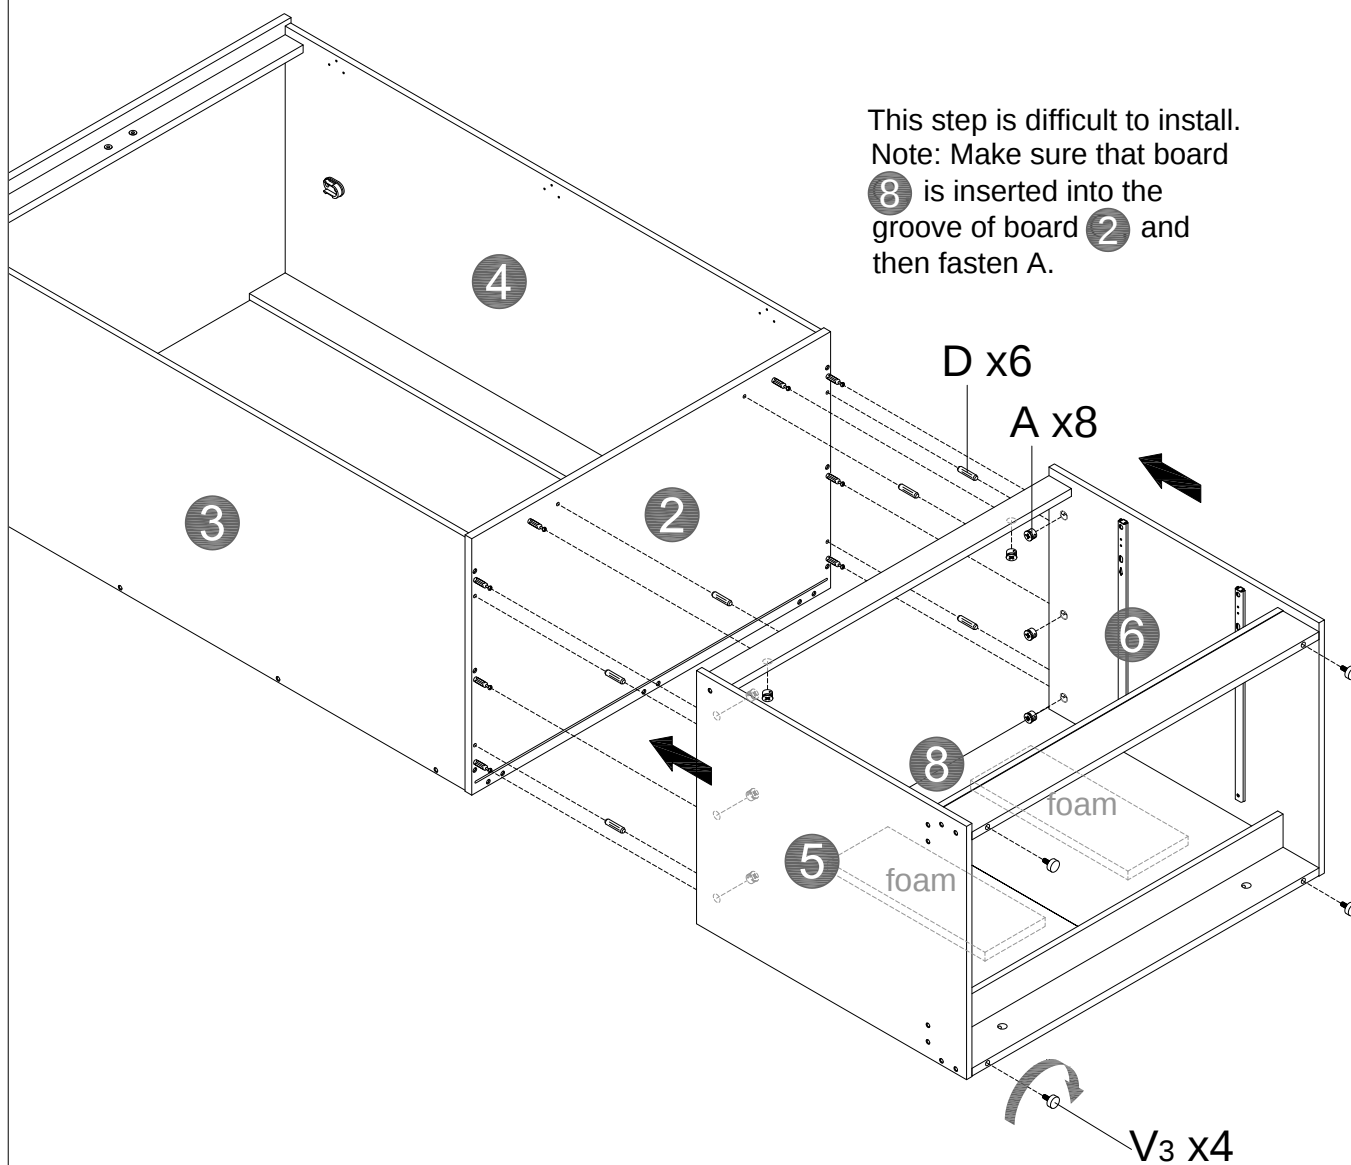

This step requires two people to complete










N7	6 PCS	O	28 PCS	Q	6 PCS
					

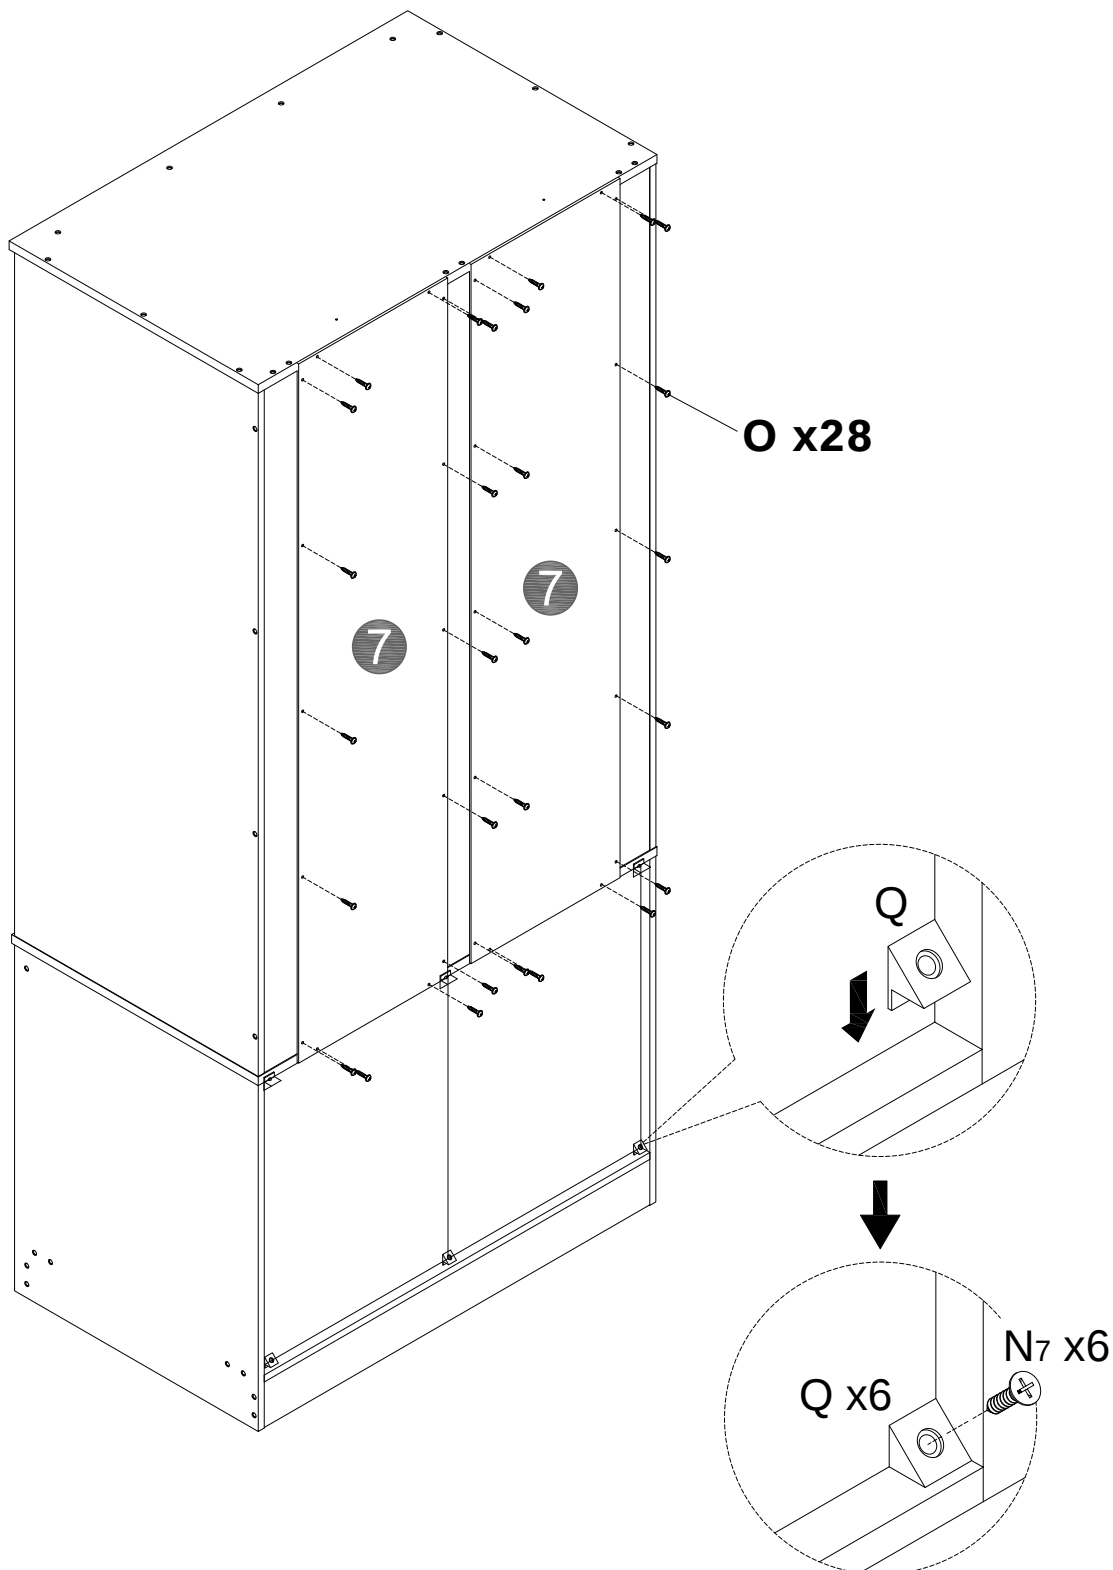

 Installing back board fasteners improves the furniture's overall stability, prevents warping, and helps maintain door alignment.



10

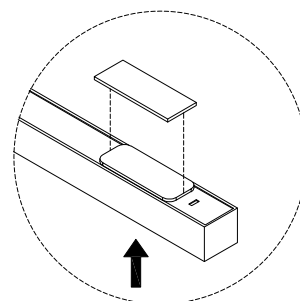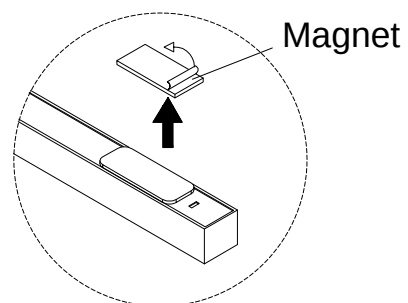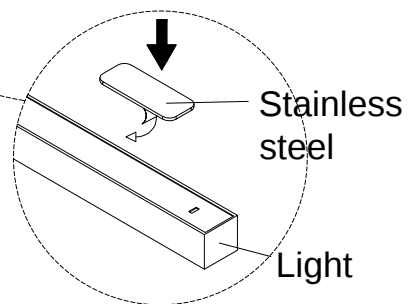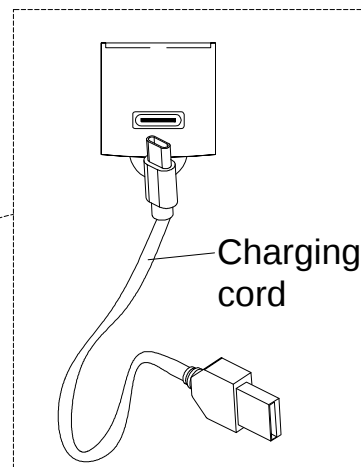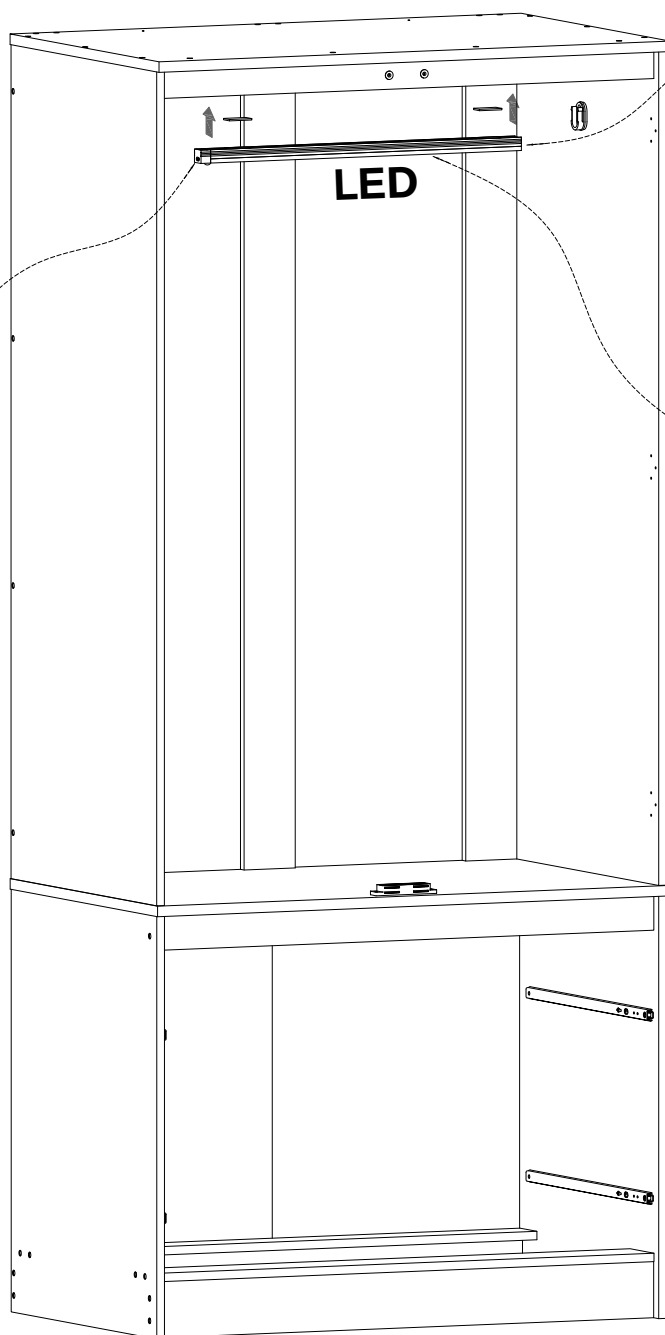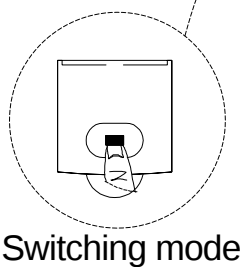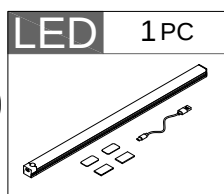

Align it with where you want to install it and press it firmly.
It is recommended to install at a position 13 cm away from
the front, where the induction effect is the best.

1 1

Y ₂	2 PCS	YG	1 PC
			

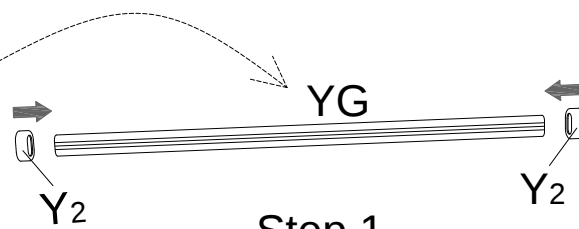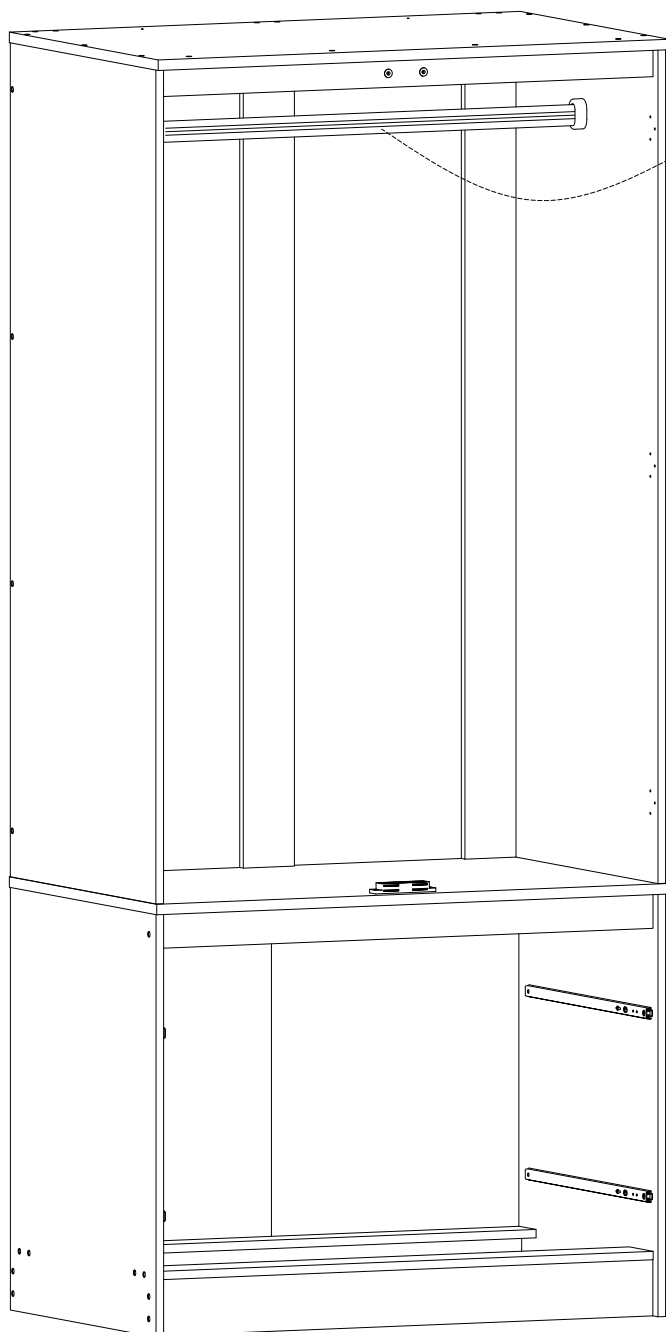

Step 1






Step 2




Step 3

12

A2	8 PCS	B	8 PCS	F2.0	4 PCS	N3	8 PCS	I2	2 PCS	J3	4 PCS
											
JD	8 PCS										
											

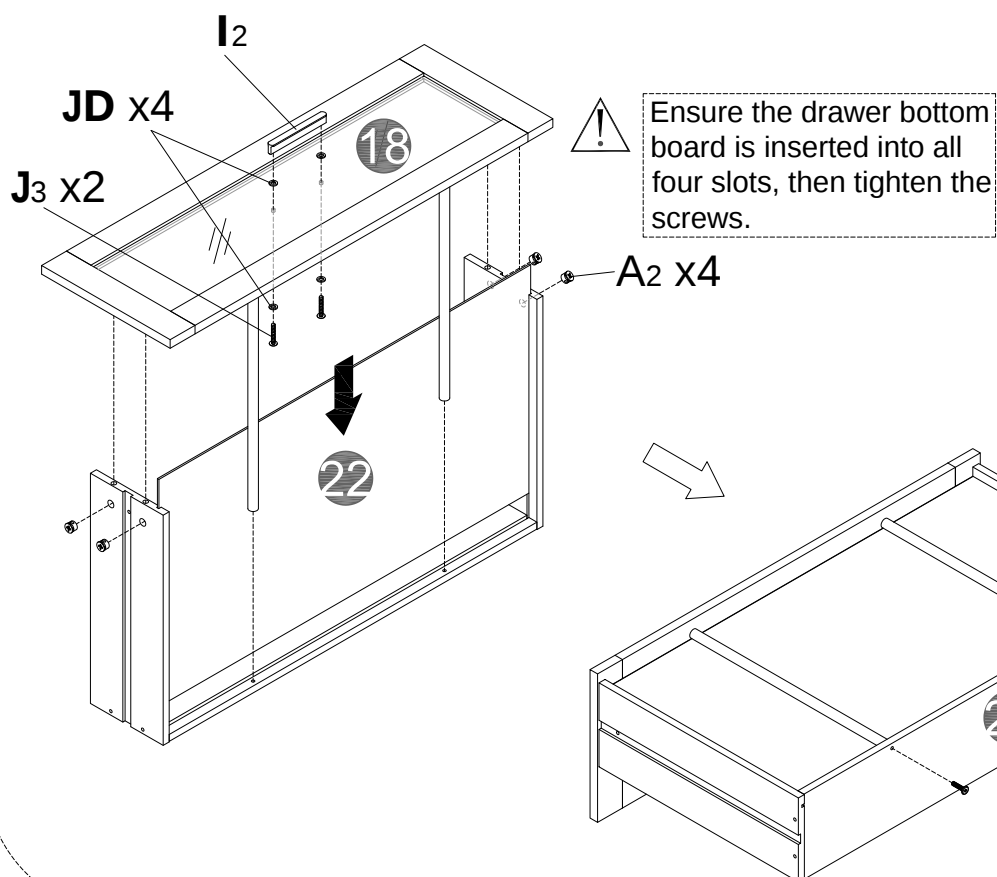
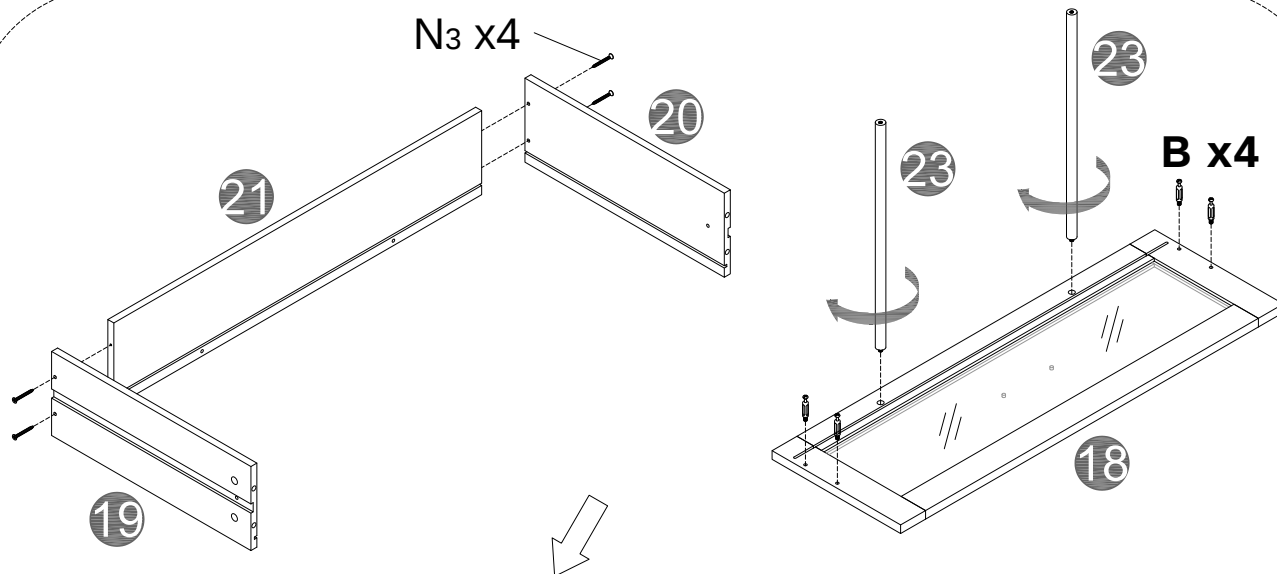


Tighten it with Z.

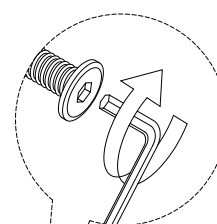


x2

13

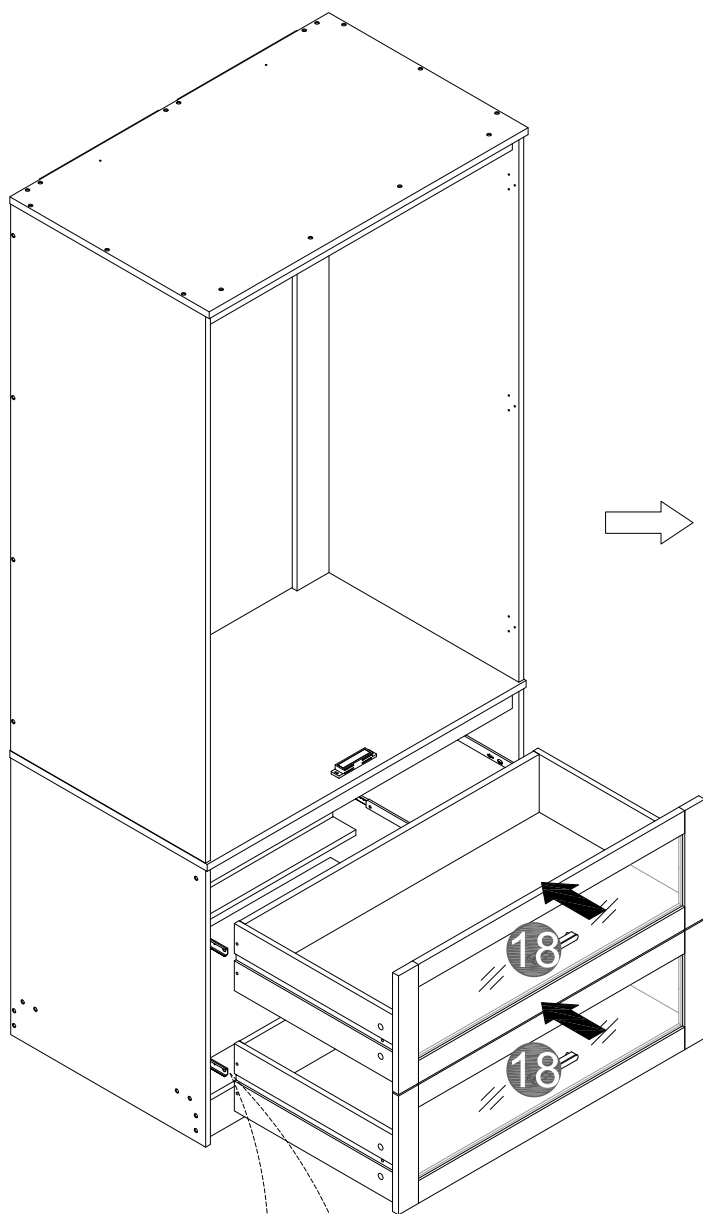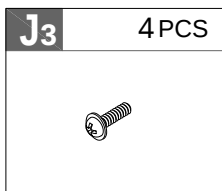



1. Align the track with the side groove and insert both sides simultaneously

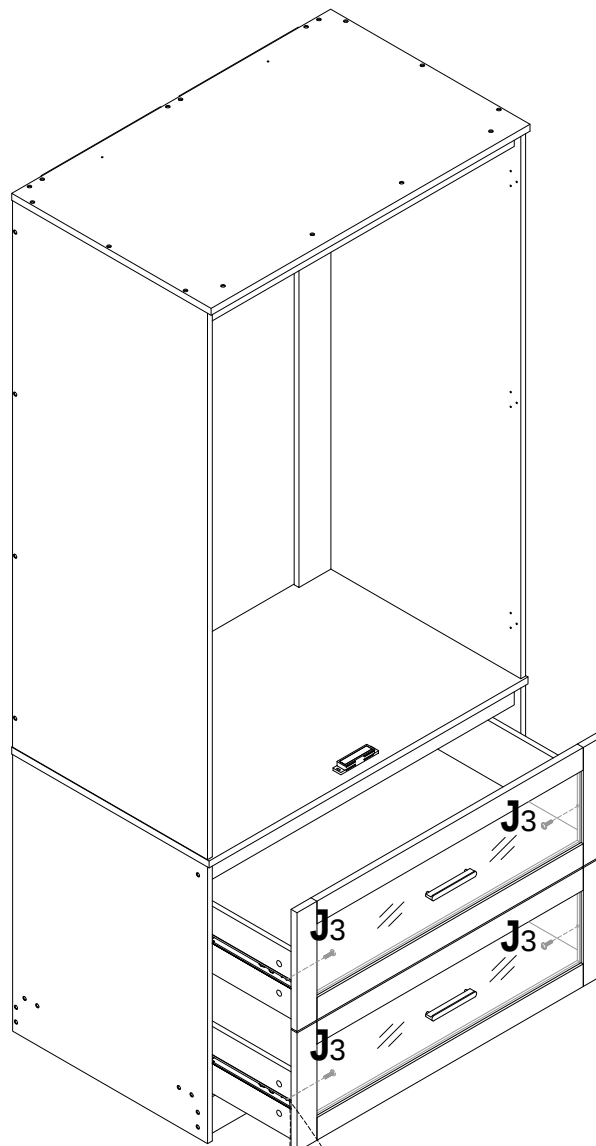





2. Push the track to the bottom and tighten the screws from the inside of the board

14

I₂	2 PCS	J	4 PCS	MH	6 PCS	N	12 PCS	N₁	4 PCS
X₂	2 PCS	X₈	2 PCS						

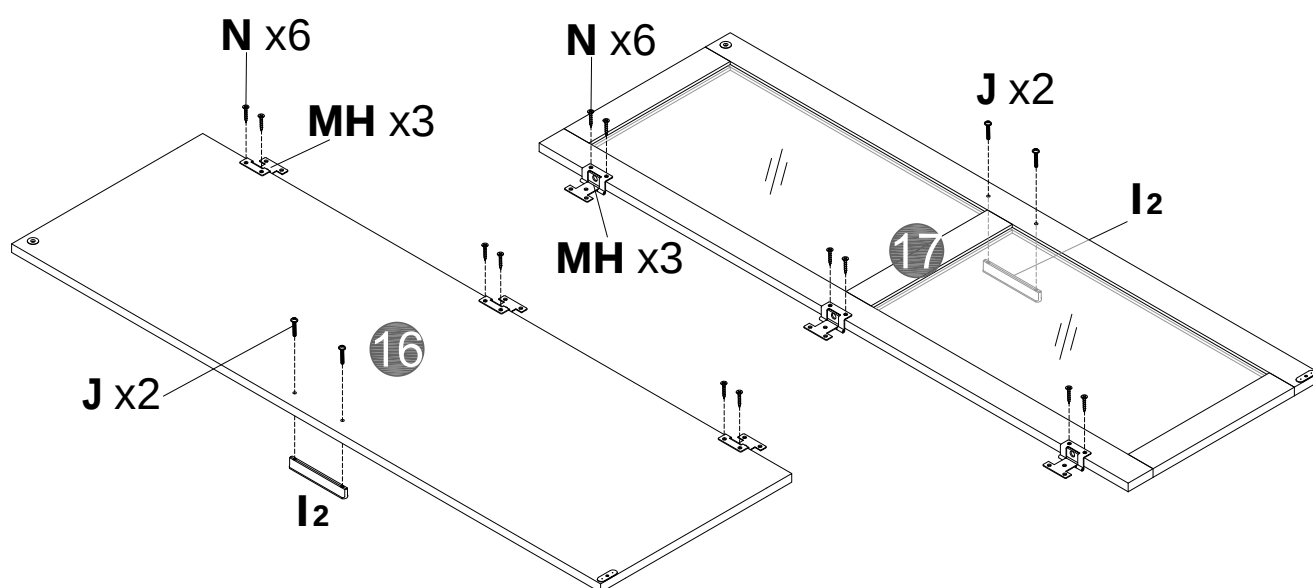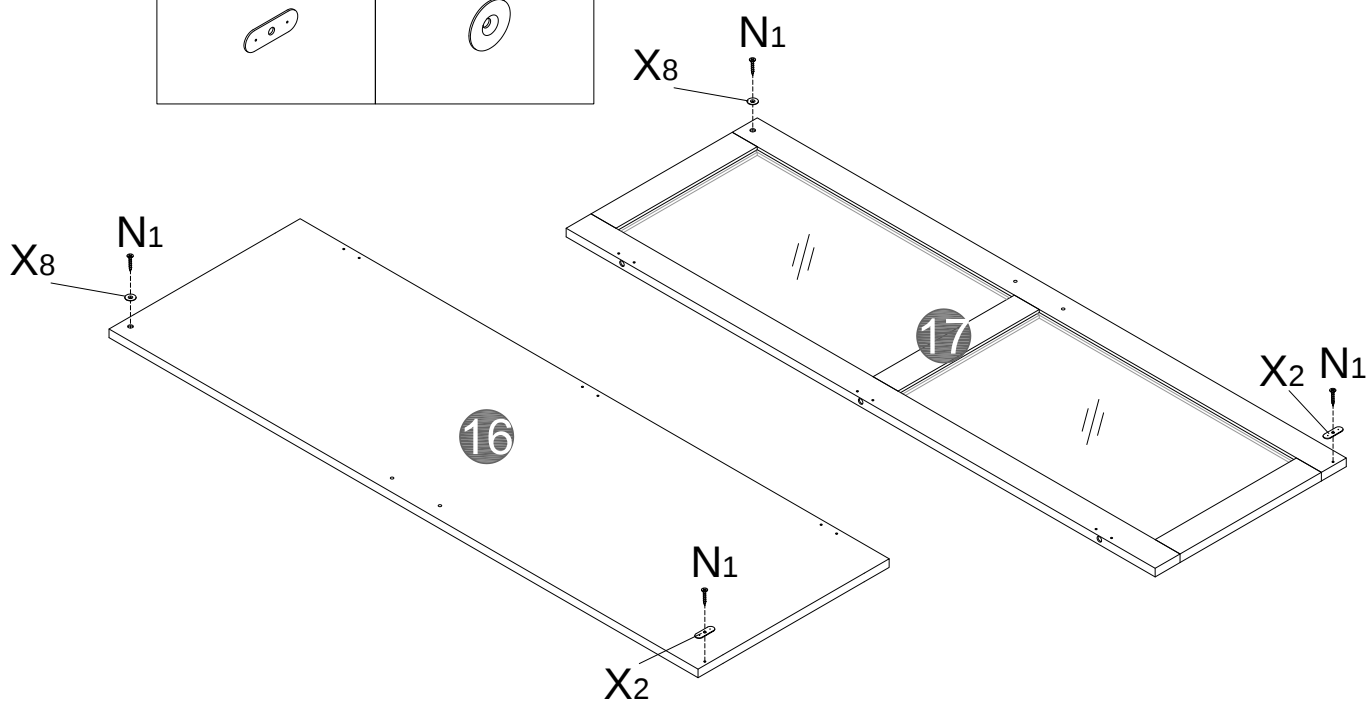


15

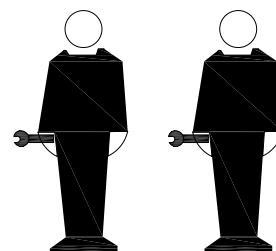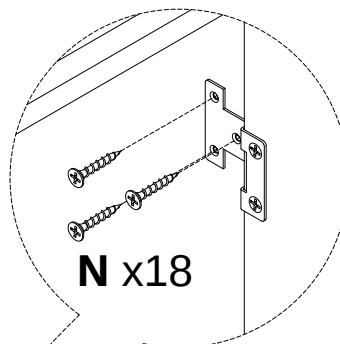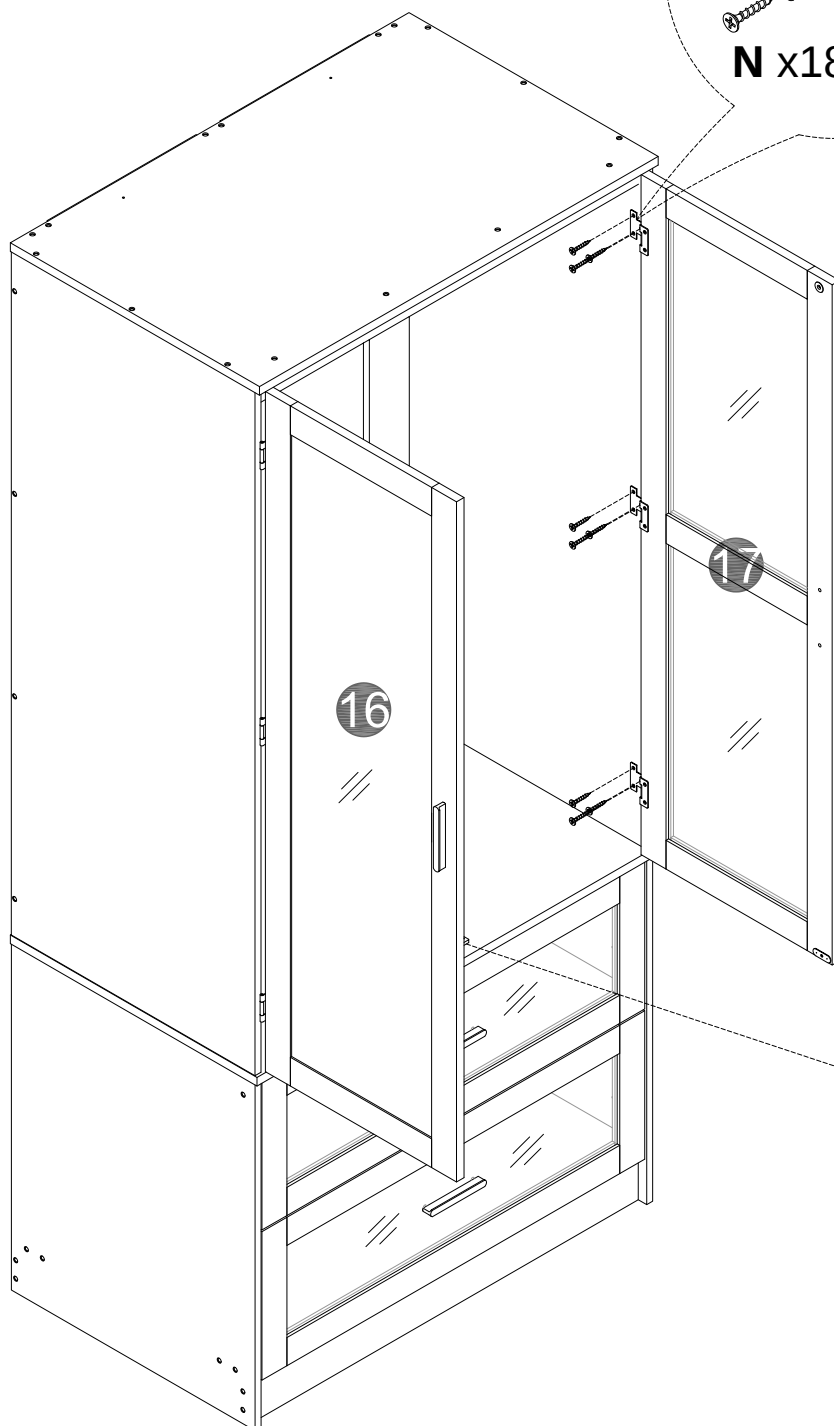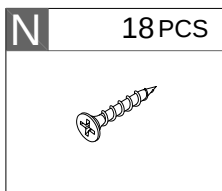


This step requires two people to complete

Loosen the screws to move the magnetic catch forward or backward, ensuring the top and bottom catches are vertical for the best magnetic force on the door panel.

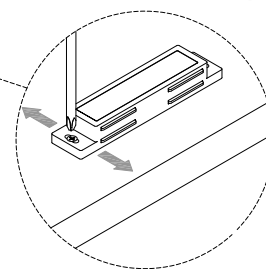


You can adjust the level of the cabinet by using the adjustable feet at the bottom of the furniture to make the gaps between the cabinet door boards even. During the adjustment process, you should first place the furniture in the position where it is needed. Otherwise, when you move it to that position after adjustment, you may encounter an uneven floor.

16

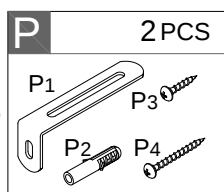

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

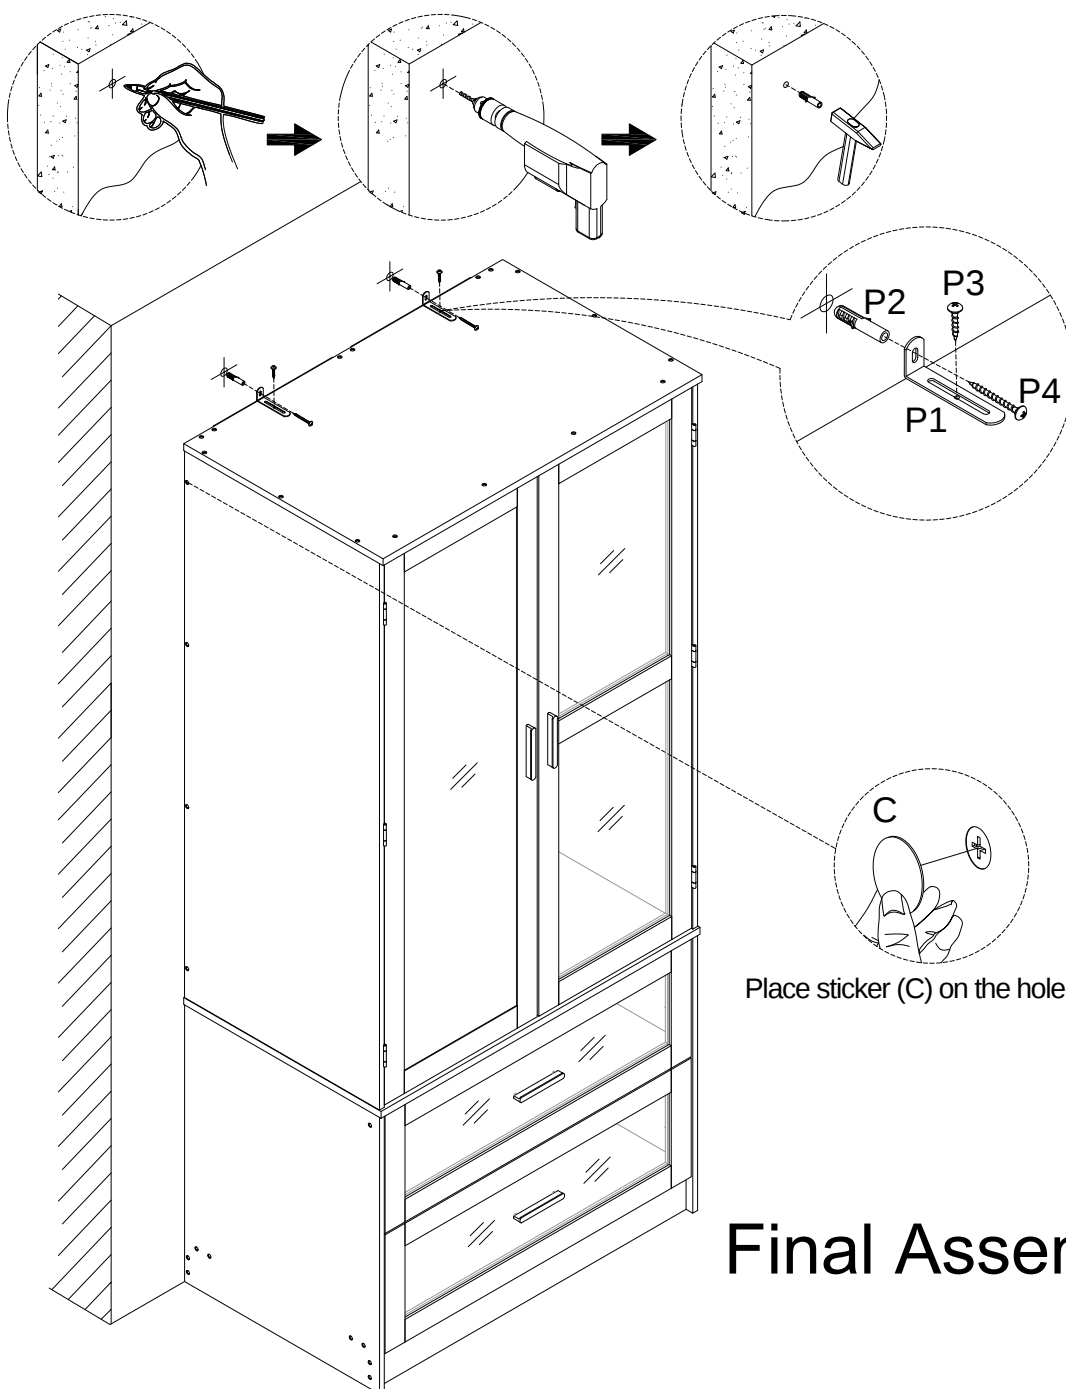

Place sticker (C) on the hole.

Final Assembly